
- Attach the Strike Zone Ribbon by weaving through the net and connecting the Velcro at the end (see figure 4)
- Use the Ground Stakes for extra stability when needed.

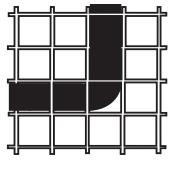

(Figure 4)




FLYBACK™ MULTI-POSITION PITCH RETURN

ASSEMBLY INSTRUCTIONS
ITEM #24804



Franklin

Franklin Sports Inc.
Stoughton, MA 02072
Made in China
For Replacement Parts Call:
1-781-341-5178 or 1-800-225-8649
OR visit www.franklinsports.com

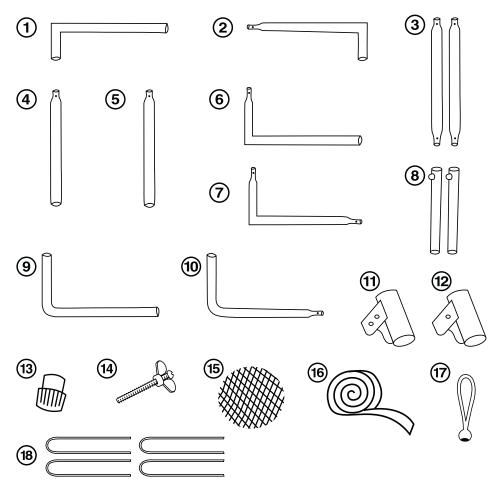

Parts List:


PART	AMOUNT	DESCRIPTION	REPLACEMENT PART#
1	1	Top Corner Tube	24804-R1
2	1	Top Corner Tube	24804-R2
3	2	Top Middle Tubes	24804-R3
4	1	Bottom Middle Tube	24804-R4
5	1	Bottom Middle Tube	24804-R5
6	1	Bottom Corner Tube	24804-R6
7	1	Bottom Corner Tube	24804-R7
8	2	Bottom Middle Tubes	24804-R8
9	1	Back Corner Tube	24804-R9
10	1	Back Corner Tube	24804-R10
11	1	Hinge	24804-R11
12	1	Hinge	24804-R12
13	2	Height Adjusters	24804-R13
14	2	Bolts with Wing Nuts	24804-R14
15	1	Net	24804-R15
16	1	Strike Zone Ribbon	24804-R16
17	24	Bungees	24804-R17
18	4	Ground Stakes	24804-R18

Assembly:

Please remove all components from the package and confirm that all parts are included. Please reference the frame assembly diagram

below (see Figure 1):

• Attach all of the tubes together to assemble the frame as pictured in the assembly drawing. During the frame assembly, make sure to attach the height adjusters in between tubes 8 & 9 and 8 & 10. Twist the Height Adjusters to tighten and loosen. Measurement lines have been provided on the back of tubes 9 & 10 so the pitch return can be adjusted evenly on both sides. Attach poles 8 to hinge 11 and 8 to hinge 12 with the bolts and wing nuts as shown in figure 2.

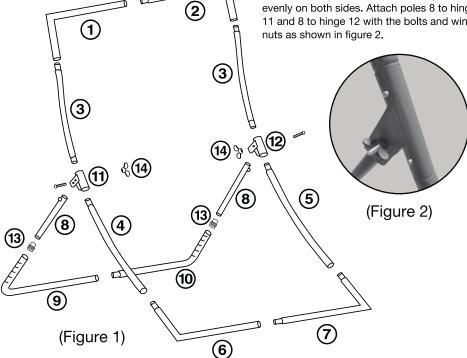


To attach the net:

Spread out the net and find the red tabs. Red tabs indicate the corners. Start with one corner and attach bungee cord (see figure 3). Follow by attaching remaining three corners. Start at top of the frame and attach three bungee cords across, spreading them evenly. Repeat on bottom, then the side poles. Repeat until all bungees are used.



WARNING:

Use extreme caution when assembling the net to the frame. The bungees will be under extreme tension and must be attached carefully. Adult assembly is strongly recommended.

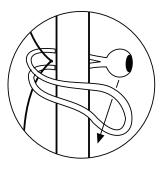

(Figure 3)