




MAGELLAN
O U T D O O R S®

Instruction Manual

12X12 LIGHTED SCREEN HOUSE

156787

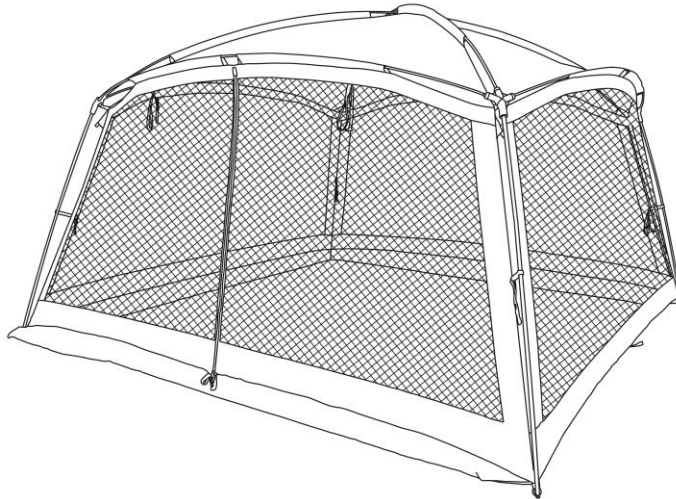

Please keep this instruction manual for future reference

Customer Service: (888) 922-2336

7:00 am to 12:00 am CST (daily)

Live Chat at: www.academy.com

Email: customerservice@academy.com

(Made in China)

Table of Contents


Warnings.....	2
Tools and Parts.....	3
Assembly Instructions.....	4-6
Care and Maintenance.....	7
Warranty Information.....	8


Note: Before beginning assembly of product, make sure all parts are present. Compare parts with package content list and hardware contents. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.

Warnings



IMPORTANT SAFETY AND TIP INFORMATION

TO MAXIMIZE THE ENJOYMENT OF YOUR PRODUCT PLEASE ASSEMBLE AND USE YOUR PRODUCT AS SAFELY AS POSSIBLE.




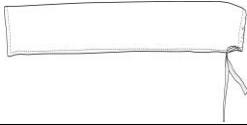
 




THE PURPOSE OF THE SAFETY ALERT SYMBOL  IS TO CALL YOUR ATTENTION TO POSSIBLE HAZARDS RELATING TO THE USE AND ASSEMBLY OF YOUR PRODUCT.

THE PURPOSE OF THE TIP SYMBOL  IS TO CALL YOUR ATTENTION TO SUGGESTIONS THAT WILL ASSIST YOU IN THE ASSEMBLY/DISASSEMBLY PROCESS AND ENHANCE YOUR CAMPING EXPERIENCE. WHEN YOU SEE THESE SYMBOLS, PLEASE CLOSELY FOLLOW THE INFORMATION PROVIDED.

WARNING

- **KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS SCREEN HOUSE FABRIC.**
- This fabric is not fireproof! It is made with flame resistant fabric which meets CPAI-84 specifications.
- The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.
- Do not erect this product near an open flame.
- Never use any fuel burning, oxygen consuming devices, or any device that produces fumes (including, but not limited to cooking stoves, lanterns, candles, hibachis, or heaters) in or around your product. Inhalation of fumes may result in carbon monoxide poisoning, injury or death.
- Additional precautions may be necessary during inclement or unexpected weather conditions. Here are some tips that may help during these times.
 -  Use guy lines to help secure your structure during periods of heavy winds.
 -  Storms or steady rains may cause water to collect in pockets on the roof. This will add weight, which can weaken the overall structure, causing the tent to collapse. Maintain a watchful eye and remove any water accumulation that may occur.


Parts List

	Part	Image	Qty
A	Tent Body		1
B	Fiberglass Pole & Steel Pole set		1
C	Carry bag		1
D	Pole Bag		1
E	Stake bag		1
F	Guy rope		4
G	Steel stake		12
H	Lamp		1
I	Remote control		1


Assembly Instructions

Step 1:

1. Verify package contents listed on Page 3 by emptying contents of bag(s) and confirming all parts are undamaged.

 **Tip: Do this at home prior to your first use of the product.**

2. Select a smooth, level site and spread out the tent body.


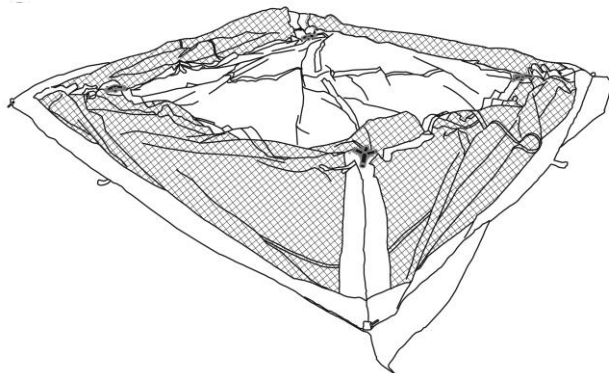


Step 2:

1. Slide the 2pc roof poles (blue color coded) through the blue color sleeves on the tent roof.

2. Slide the 4pcs fiberglass eave poles (green color coded) through the green sleeves on the tent.

3. Insert each pole into the matching color hubs. (A)

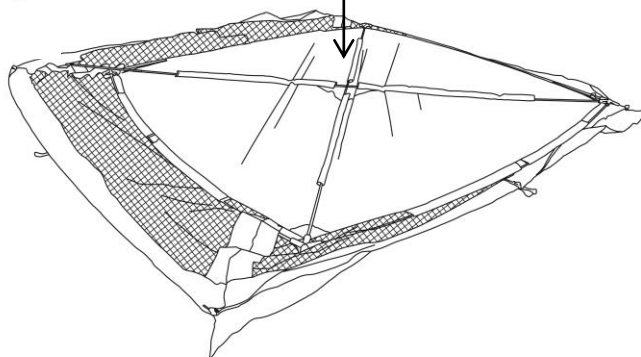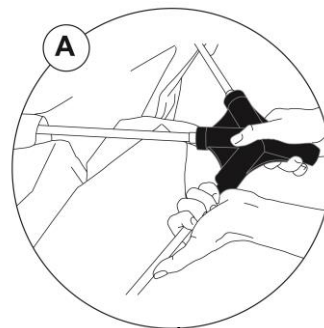

Assembly Instructions

Step 3:

1. Insert 4pc steel leg poles into the hub with no color(B), then insert the pin at bottom of inner tent into the bottom end of leg poles(C).


2. Attach G-hooks on the fabric roof to the frame. (D)

Step 4:

1. Stake the tent by inserting the stakes through the pin-rings on base of the tent. Make sure the base of the tent fully spread out.

2. Stake out guy lines away from the tent with lines at roughly a 45° angle to the ground. (E)

3. Put the lamp into the mesh pocket on the roof (F) and press the power button on remote control.(G).

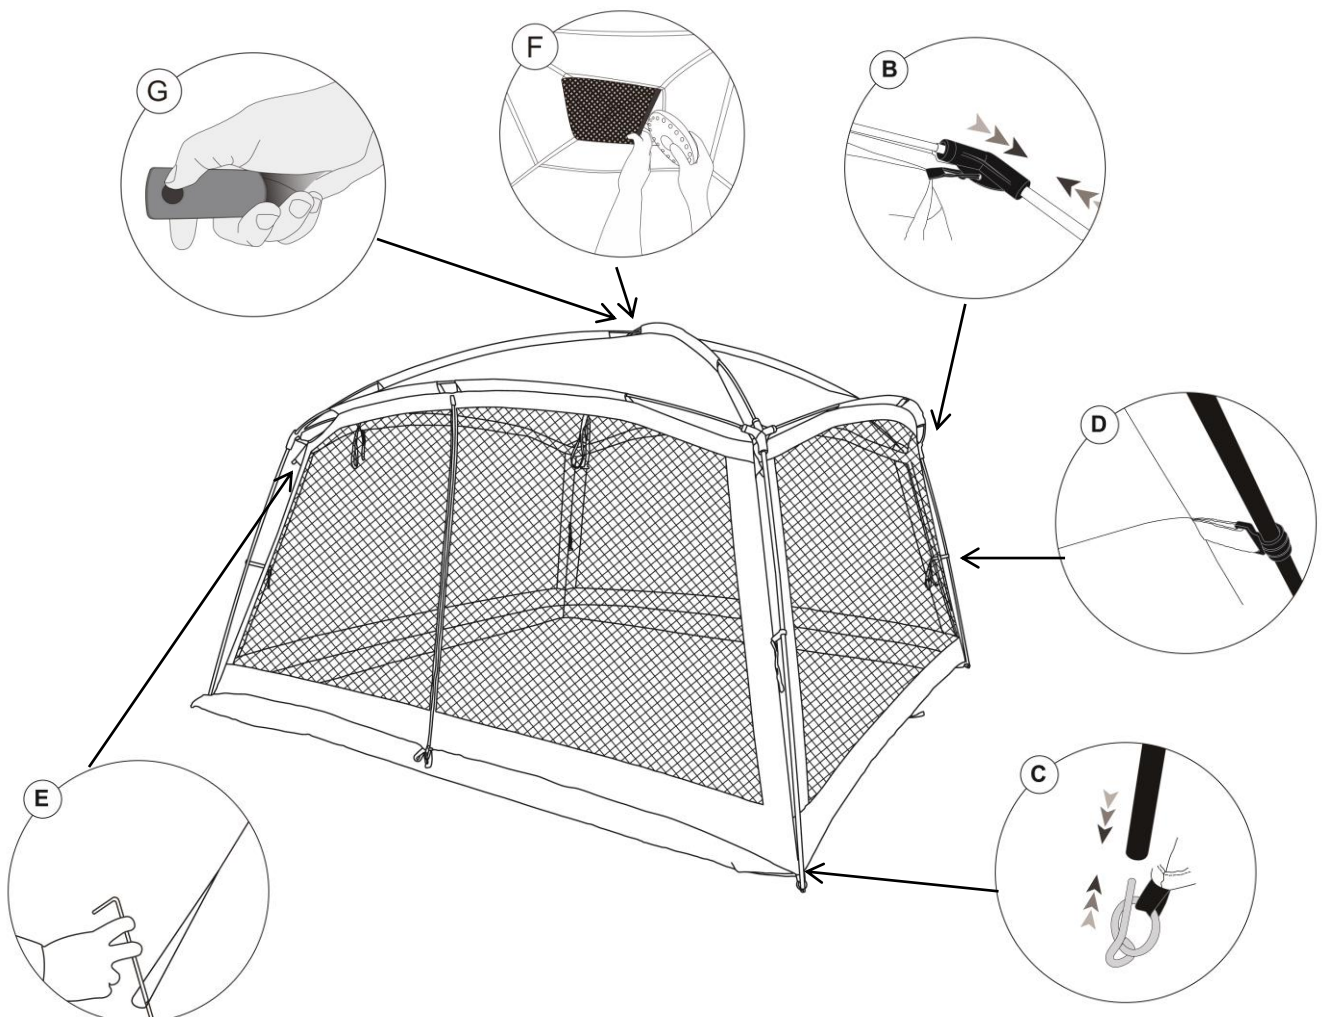


LED Tent Light


Instructions for use:

1. Remove battery cover.
2. Insert 4 x AA batteries and return battery cover.
3. Switch on the main switch to use the remote control or push button on/off.
4. Press the remote control or on/off button to go through the 3 phase lighting sequence.
5. Turn off the main switch when the light is not in use.


3 Phase lighting sequence

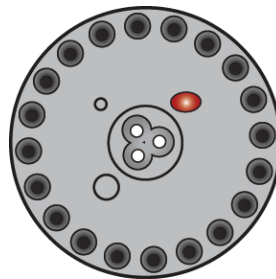


3 LED'S

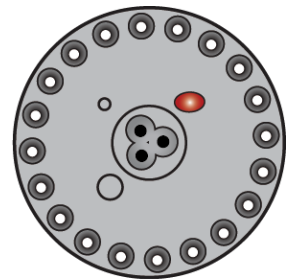

20 LED'S

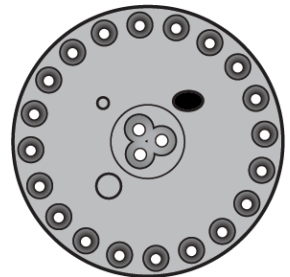

23 LED'S

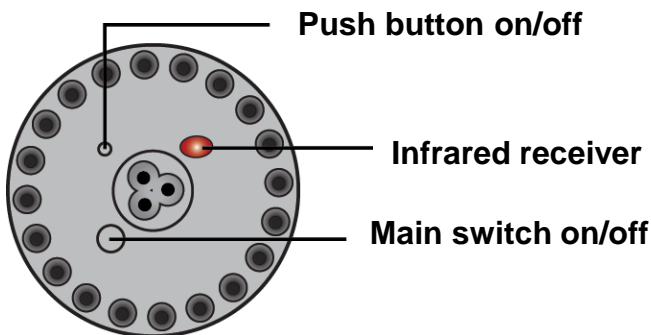

Care and Maintenance

IMPORTANT NOTES BEFORE YOU BEGIN:

- Assemble your tent before camping to become familiar with the assembly.
- Setup is possible for one person, however two people are recommended.
- Select a clean, level area for the campsite free of debris and sharp objects, and away from a natural watercourse.
- Use of a ground cloth is recommended to prolong the life of the tent floor and provide additional insulation and moisture protection.
- To prevent damage to the zippers, unzip the doors and windows of the tent prior to disassembly, allowing air to move freely.
- Seam sealing the inside stitched seams of the tent is recommended. This will improve weather resistance. Discoloration may occur if applied to outside seams. (Seam sealer not included).
- Your product is water repellent, however, during heavy rain some leakage may occur. Keep objects from touching the inside, as objects may cause leakage at the point of contact.
- To prevent seam leakage (floor seams in particular), a seam sealer compound must be applied to the seams. Use recommended water repellent compounds on our product. Read the label on any product before using. Questions? Call our Customer Service number.
- Your recreational product is made from synthetic fabric that has been treated and is highly resistant to the sun's Ultraviolet (UV) light. No fabric can withstand prolonged exposure to sunlight.
- Do not spray or apply insecticide or pesticide on your product. It may damage UV resistant or water repellent properties of this product.
- Our recreational products are constructed to rigid specifications. They are not made, however, for extreme weather, climates, or environments. Modification, abuse and extreme weather are conditions that may adversely affect the structural integrity of the tent.
- Your product must be stored dry. One of the easiest ways to damage your product is storing it while it is wet. Storing a wet tent as briefly as 24 hours in warm weather is likely to cause mildew on the fabric coatings.
- If you must close camp in the rain, open your product and set it up to allow it to dry as soon as possible. Allow dirt to dry on the fabric after a rainfall before lightly sweeping it off with a brush. For tougher stains, spray the area with water and lightly wipe it off with a few strokes. Do not use washer or dryer. **DO NOT SCRUB THE FABRIC. ALWAYS MAKE SURE TENT IS COMPLETELY DRY BEFORE REPACKING.**
- Do not leave your tent set up for weeks at a time. Exposure to ultraviolet rays from the sun can damage and/or discolor the material.
- Clean the poles with a cloth and lubricate them with a silicone spray to help prevent corrosion and keep from becoming gritty. This is especially important after using the tent around salt water.
- Store the stakes in a separate storage bag. Do not pack the stakes inside the tent.

Warranty Information

This product has been manufactured under the highest standards of quality and workmanship. We warrant to the original consumer purchaser that all aspects of this product will be free of defects in material and workmanship for one year from the date of purchase. A replacement for any defective part will be supplied free of charge for installation by the consumer. Defects or damage caused by the use of other than genuine parts are not covered by this warranty. This warranty shall be effective from the date of purchase as shown in the purchaser receipt.

This warranty is valid for the original consumer purchaser only and excludes industrial, commercial or business use of the product, product damage due to shipment or failure which results from alteration, product abuse, or product misuse, whether performed by a contractor , service company , or consumer. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement nor for incidental or consequential damage.