

Care and Maintenance

CLEANING:

Allow dirt to dry on the tent fabric after a rainfall before lightly sweeping it off with a brush.

For tougher stains, spray the area with water and lightly wipe it off with a few strokes.

Do not use washer or dryer.

DO NOT SCRUB THE FABRIC. ALWAYS MAKE SURE YOUR TENT IS COMPLETELY DRY BEFORE REPACKING.

Although our products are manufactured according to rigorous specifications, periods of wind or rain may loosen the stakes and cause the frame to sink into the ground. This will weaken the structure's overall rigidity. Puddles may also form on the roof if the unit has not been assembled tightly. If pooling should occur it is advisable to drain the fly to avoid possible damage to frames and fabric. Adjustment of guy lines may be necessary. In case of inclement weather remove valuables and seek appropriate shelter. Intended for recreational use only.

For your tent, screen house or canopy DO NOT...


- Pitch near an open fire.
- Use candles or open flames of any kind in or near.
- Leave children unattended inside.
- Use fuel-burning, oxygen-consuming devices (heaters, lanterns, cooking stoves or other flame sources) inside.
- Refuel lamps, heaters or stoves inside.
- Smoke inside.
- Store flammable liquids inside.
- Use water repellent compounds other than those recommended for use on outdoor equipment.
- Spray with insecticide.
- Store on concrete floor.

For your tent, screen house or canopy DO...

- Always extinguish campfire before sleeping or leaving the area.
- Exercise care when using electricity and lighting.
- Make certain it is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation. Clear frequently.
- Anchor securely to provide additional security in changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement stakes and guy lines.
- Take down and store properly after camping.



Instruction Manual MAGELLAN OUTDOORS PORTABLE UTILITY TENT Academy's Style: FSMGCT4003

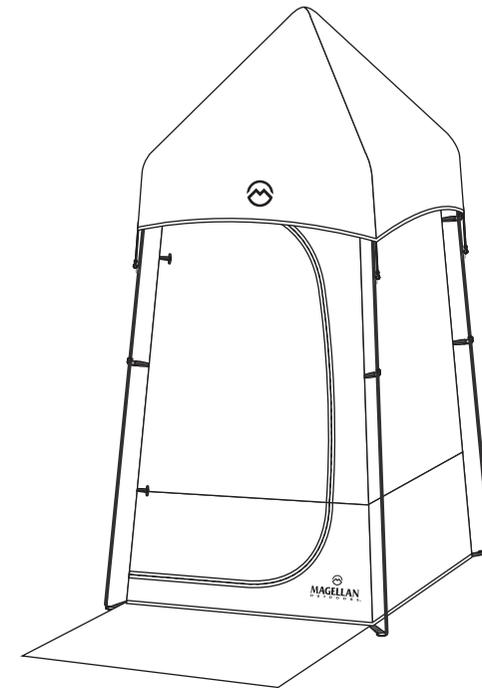

Please keep this instruction manual for future reference




 
Customer Service: (888) 922-2336

**Monday thru Friday
7:00am to 10:00pm, Central Standard Time**

**Sunday
8:00am to 8:00pm, Central Standard Time**

(Made in Bangladesh)

Parts List

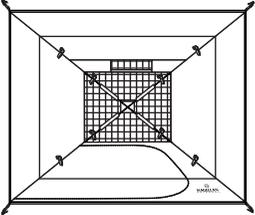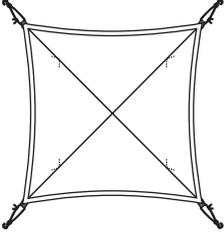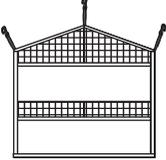
A	Tent		1each
B	Rainfly		1each
C	Hanging Shelf		1each
D	Organizer		1each
E	Steel Poles		4each
F	Tent Stakes		4each
G	PVC Mold 4 way		1each

Assembly Instructions

Step 1:

Spread tent and insert roof poles


- 1) Spread out the tent flat, floor side down.
- 2) Use the illustration below as a guide. Insert the 4 leg poles through the pole sleeves and into the center connector, attached. Make certain the metal springs lock into place in the connector.

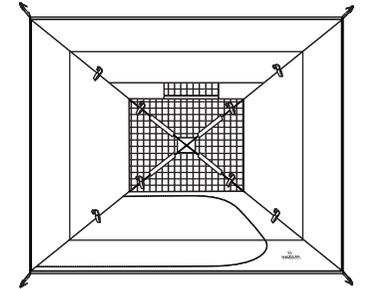

Step 2:

Attach leg poles

- 1) To raise the shower tent, place the bottom of the leg poles onto the pins attached to the stake loop along the perimeter of the tent.
- 2) Clip the pole hooks along the walls to the frame.

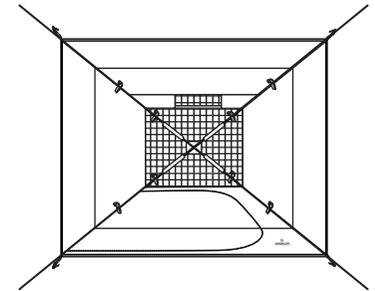

Assembly Instructions


Step 3:

Stake tent, fasten hooks

- 1) Stake down the shower tent by inserting a stake through the stake loops, located along the perimeter of the shower tent.
- 2) Make certain the tent floor is pulled out evenly and tightly.
- 3) Hammer the stakes into the ground at a 45 degree angle using a hammer or mallet.

Body assembled


Tent appears as shown.

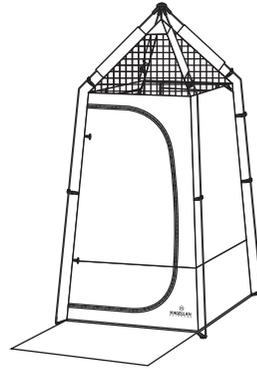

Step 4:

Position fly

- 1) Unfold the fly and stretch out all corners. Place the fly over the shower tent.

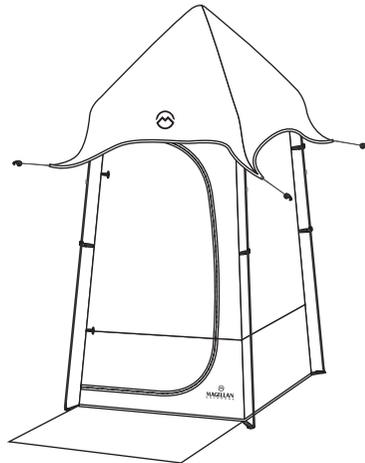

Warnings

⚠ DANGER!

Stoves, lanterns, candles, grills, heaters and other fuel burning devices produce carbon monoxide and will consume the available oxygen in this tent. Use of such devices in this tent will cause asphyxiation, carbon monoxide poisoning, and death or serious and permanent injuries. For this reason:

- DO NOT use fuel burning devices inside or near this tent
- Your failure to follow this warning will cause death or serious and permanent injury to you or others using this tent.

⚠ WARNING!

- KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS FABRIC. This product is made with flame resistant fabric, which meets CPAI-84 specifications.

IT IS NOT FIREPROOF!

The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame resistant properties ineffective.

- Anchor properly at all times and carefully consider campsite choice. Be aware of possible falling rocks or tree limbs, lightning strikes, flash-floods, strong winds and other hazards which may cause injury to this product or it's occupants.
- Have a minimum of two adults for assembly. During assembly poles are under tension. If not held firmly in place during assembly, poles could break or flip up possibly causing serious injury.
- Safety glasses may be worn throughout the assembly process as an additional precaution.
- Exercise care when using electric devices in and near tents.

Table of Contents

Warnings

Tools and Parts

Hardware

Assembly Instructions

Care and Maintenance

Warranty Information &


Parts List- See tag in carry bag

Assembly Instructions

Step 5:

Fasten the fly

- 1) Attach the fly to the shower tent by hooking the plastic s-hooks at the fly corners to the rings on the leg poles.
- 2) Wrap the Velcro® fasteners, sewn on the underneath side of the fly, around the leg poles.

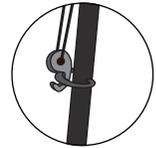

Step 6:

Fully assembled

Tent appears as shown.

Note: Interior accessories with this model can be attached to loops inside the tent. Accommodates five gallon shower bag.

