


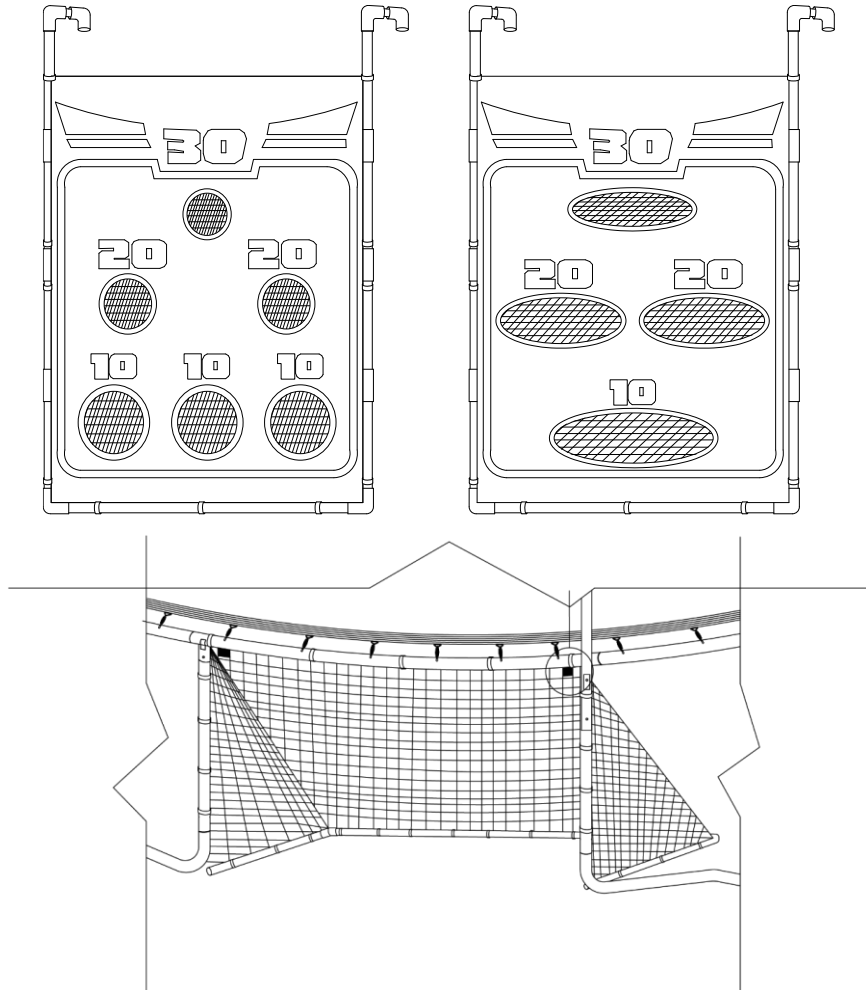

Assembly Instructions & User's Manual 3 IN 1 Trampoline Game System 166045



Please keep this instruction manual for future reference

WARNING

YOU MUST THOROUGHLY READ AND UNDERSTAND INSTRUCTIONS IN THIS MANUAL BEFORE ASSEMBLING AND USING.

SAVE THIS MANUAL FOR FUTURE REFERENCE.

DO NOT ALLOW CHILDREN TO USE UNLESS SUPERVISED BY AN ADULT.

For Customer Service, please call [1-866-370-2131](tel:1-866-370-2131) or visit www.sportspowerltd.net

Monday – Friday 9:00 AM – 5:00 PM Eastern Time

Table of Contents

 
 


 

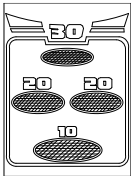
 

Warnings.....	3
Tools and Parts.....	4
Assembly Instructions.....	6
Care and Maintenance.....	15
Warranty Information.....	16

Note: Before beginning assembly of product, make sure all parts are present. Compare parts with package content list and hardware contents. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.

 










Warnings

- Please read the instructions carefully. Make sure all parts are present before assembling.
- Do not attempt to assemble the Trampoline Game Set if any parts are missing or damaged.
- Please dispose of all polyethylene packing material properly and keep it away from children.
- For family domestic use only.

 Parts List For Flying Disc & Beach Bag Game System

Key Number	Part Picture	Description	Quantity
1		Plastic Pipe 630	4
2		Plastic Pipe 245	8
3		Plastic Pipe 70	2
A		Elbow Connector	6
B		"T" Elbow Connector	6
C		Bag Toss Sleeve	1
D		Flying disc sleeve	1
E		Flying Disc	2
F		Bag Toss Bag	6

 Parts List Soccer Goal System

Key Number	Part Picture	Description	Quantity
1		Plastic Pipe 540	2
2		Elbow Connector	2
3		Plastic Pipe 570	2
4		Connector	1
5		End Cap	2
A		Soccer Net	1
B		Anchor kit	4
C		Long Velcro	13
D		Short Velcro	13
E		Soccer ball	1
F		Pump	1


Assembly Instructions For Flying Disc & Beach Bag Game

Step 1

- Locate the following 26 pieces parts that are needed to assemble the Flying Disc & Beach Bag Game frame:


Key Number	Description	Quantity
1	Plastic Pipe 630	4
2	Plastic Pipe 245	8
3	Plastic Pipe 70	2
A	Elbow Connector	6
B	"T" Elbow Connector	6

- Lay out all the parts on dry flat surface as shown below.

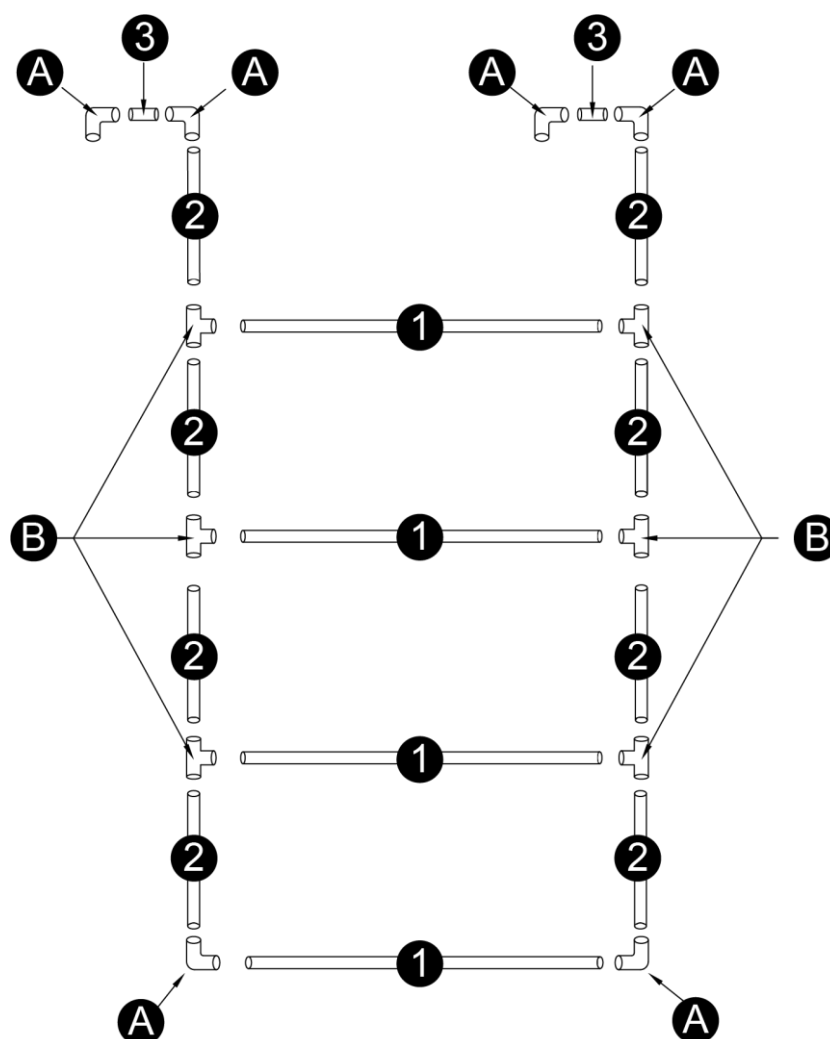



Step 2

- Connect Plastic Pipe (#2) & “T” Elbow Connector (#B) as shown.
- Connect Plastic Pipe (#3) & Elbow Connector (#A) as shown.
- Connect Plastic Pipe (#2) & Elbow Connector (#A) & Plastic Pipe (#1) as shown.

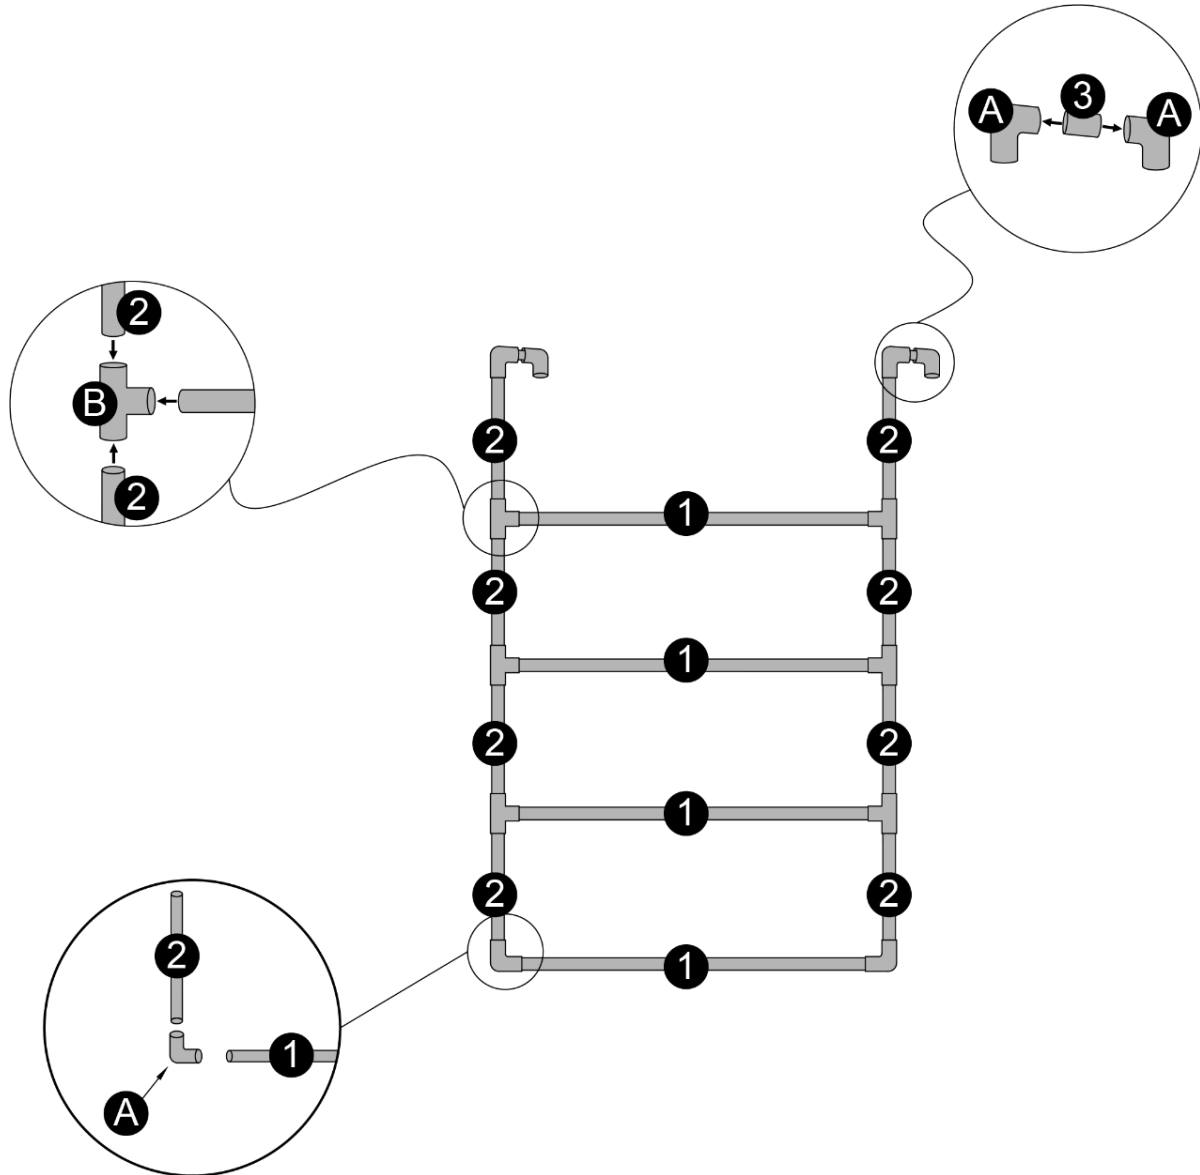

Step 3



- Secure Beach Bag sleeve(#C) or Flying Disc Sleeve (#D) to Plastic Pipe (#2) as shown.

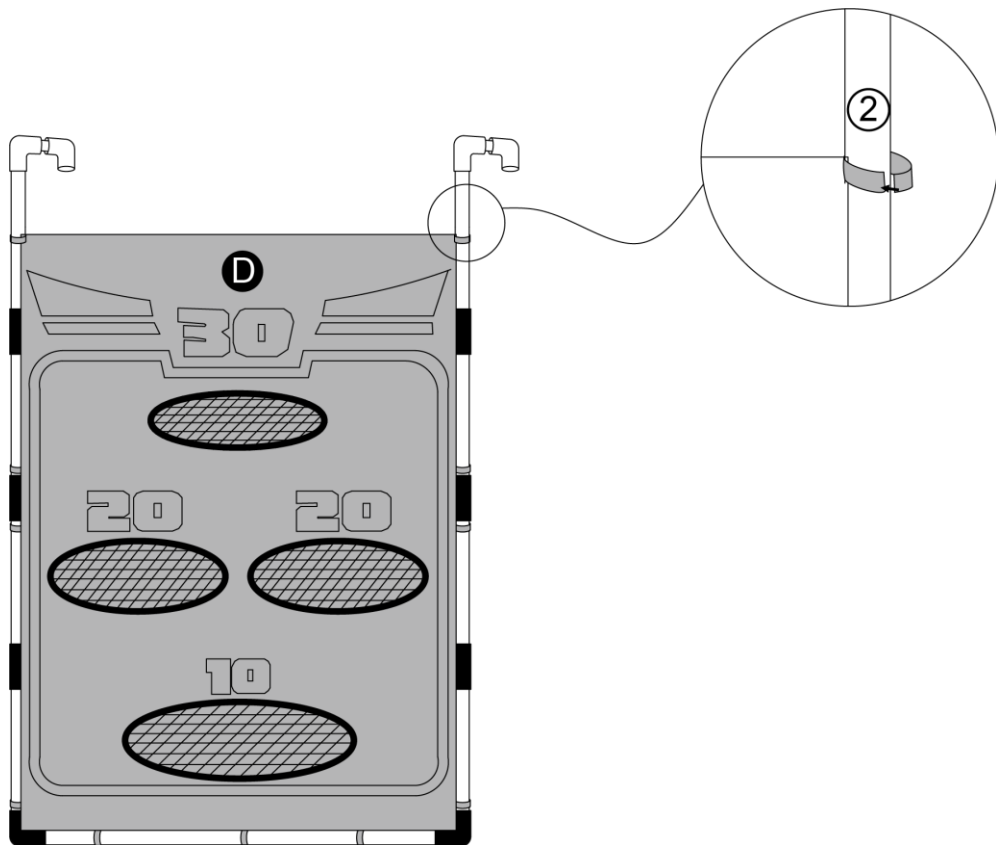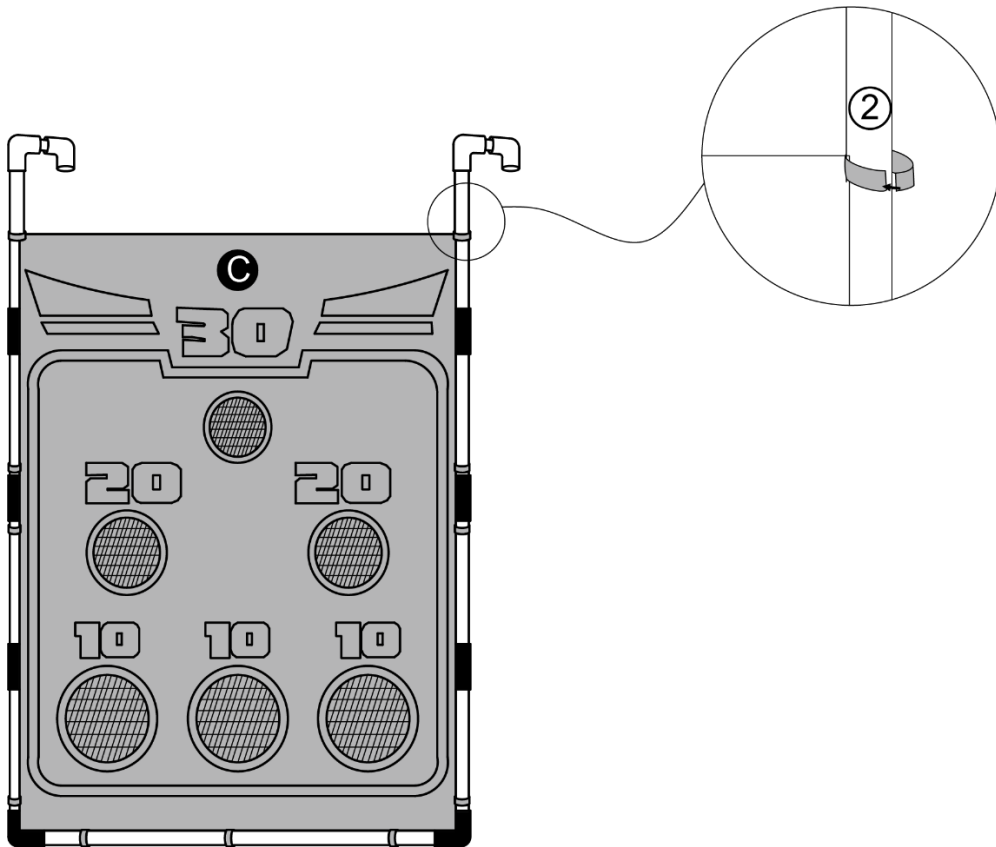

Step 4

➤ Place Flying Disc or Bag Toss Game on the Trampoline frame as shown.

Note: Trampoline not included.

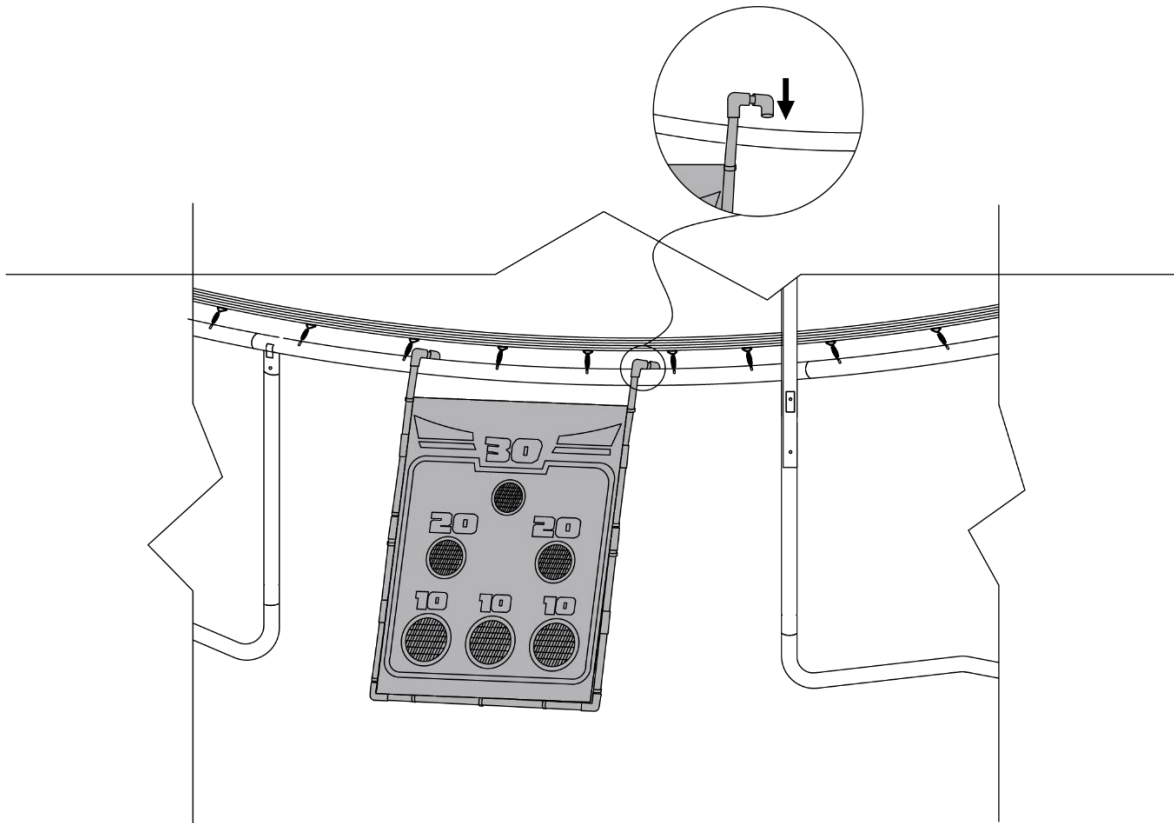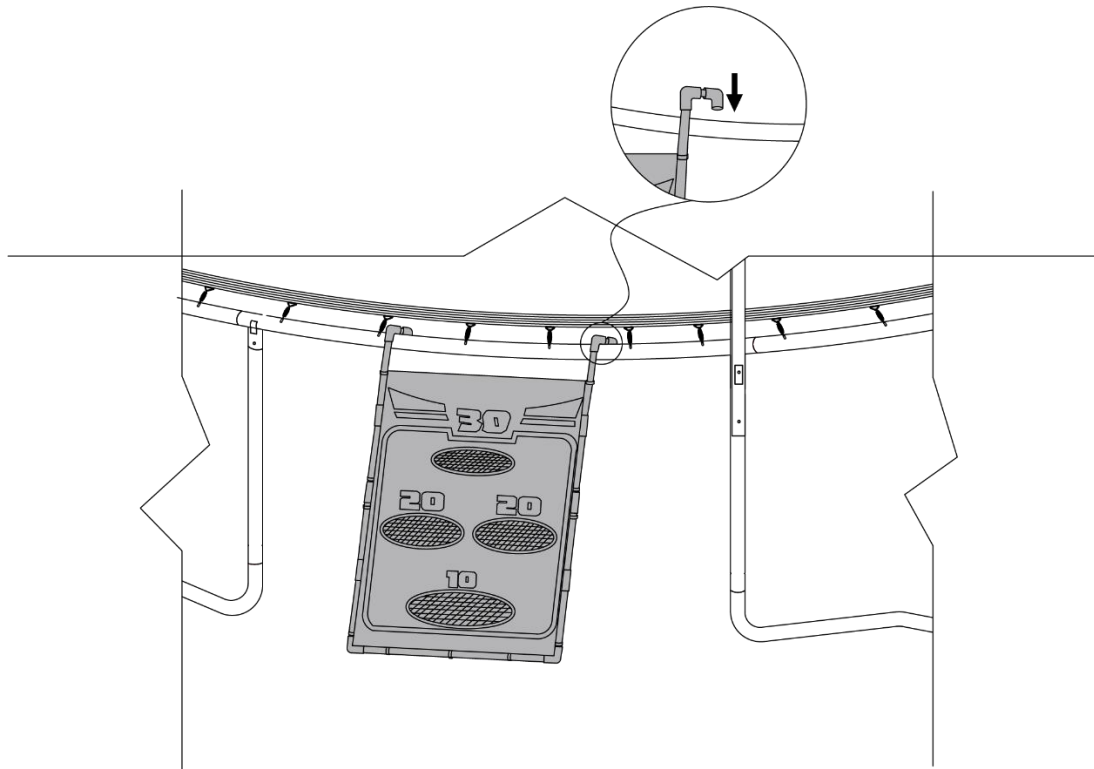


Assembly Instructions For Soccer Goal

Step 1

- Locate the following 7 pieces parts that are needed to assemble the Soccer Goal.


Key Number	Description	Quantity
1	Plastic Pipe 540	2
2	Elbow Connector	2
3	Plastic Pipe 570	2
4	Connector	1

- Lay out all the parts on dry flat surface as shown below.

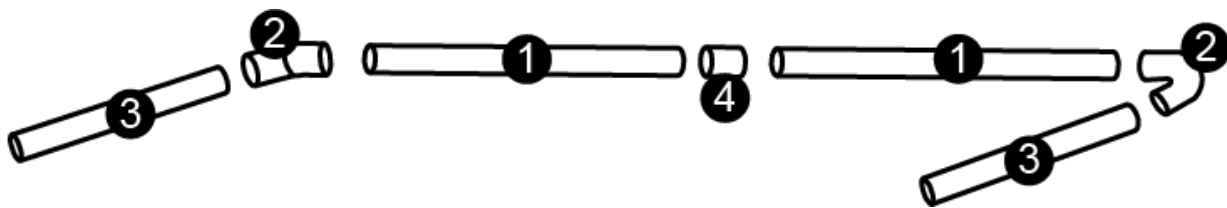


Step 2

- Connect Plastic Pipe (#3) & Elbow Connector (#2) & Plastic Pipe (#1) as shown.
- Connect Plastic Pipe (#1) & Connector (4) as shown.
- Open the Net (#A), make sure Red Tab on top as shown.

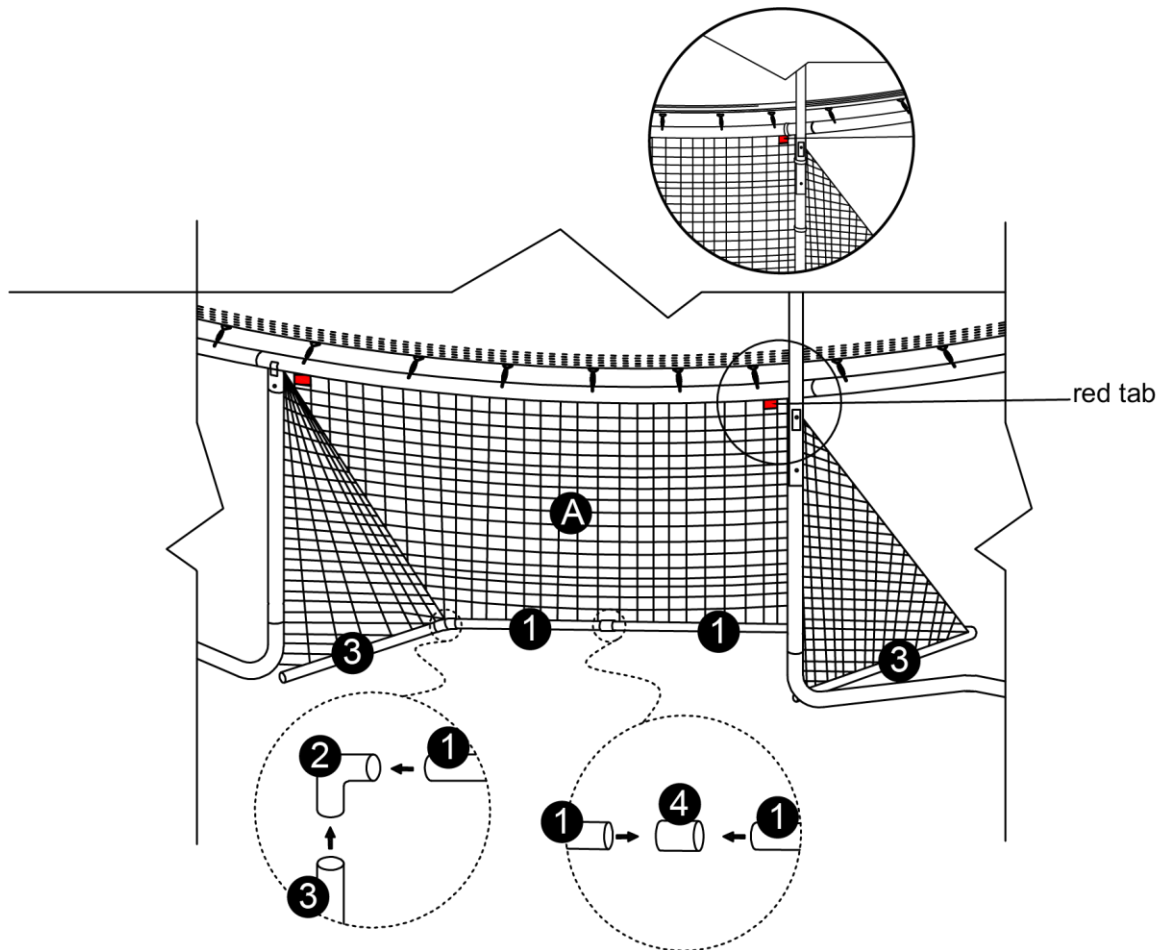


Step 3

- Secure Net (#A) to Trampoline Frame using Long Velcro (#C) as shown.
- Secure Net (#A) to Plastic Pipe using Short Velcro (#D) as shown.

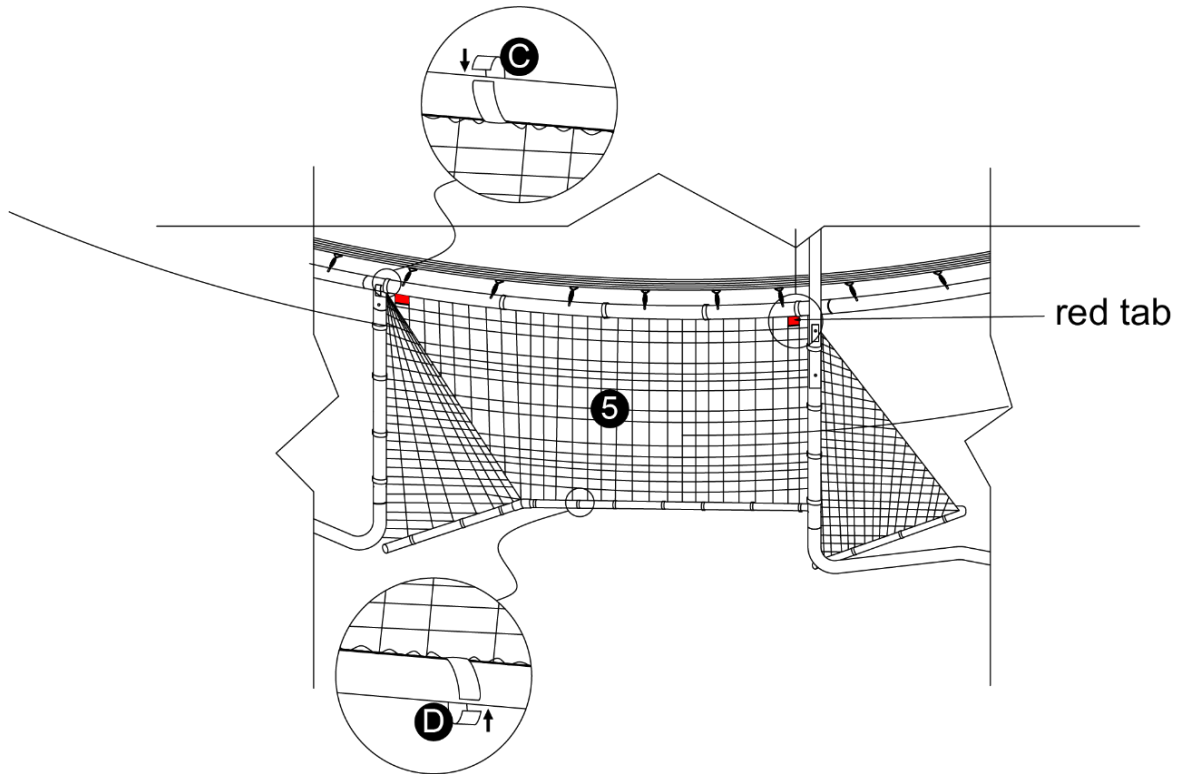


Step 4

- Place End Cap (#5) to Plastic tube (#3) as shown.

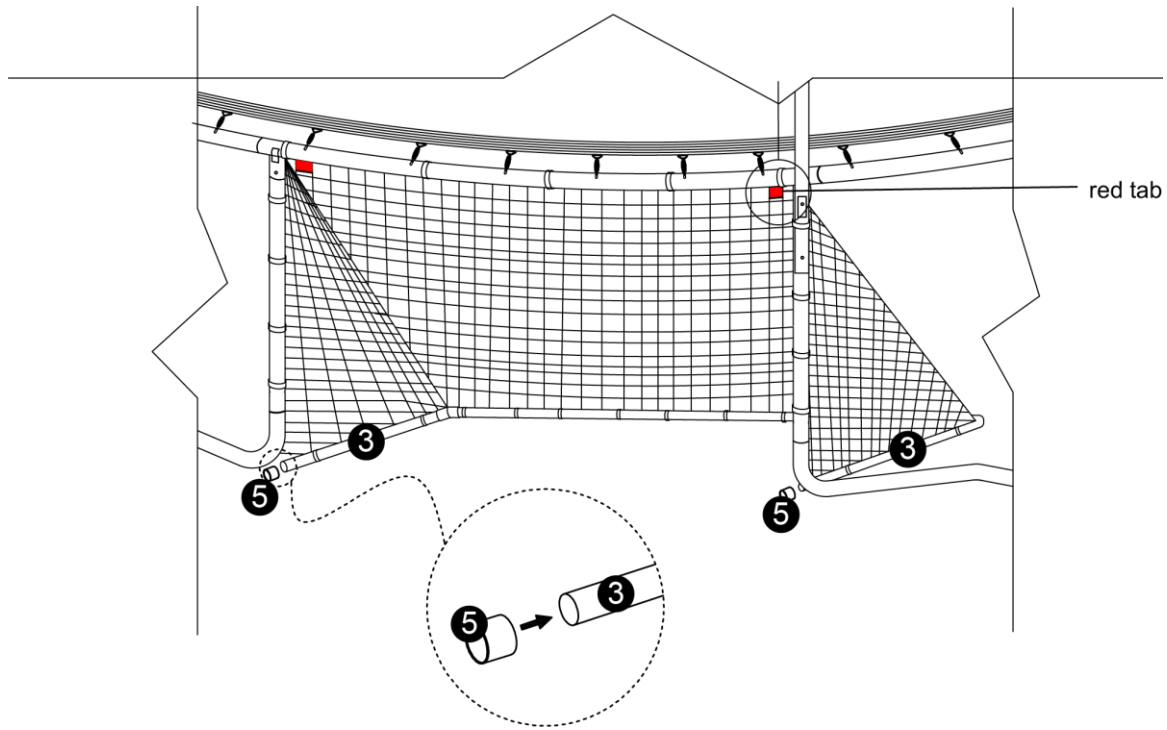

Step 5

- Screw in the Anchor (#B) to the soil as shown below.

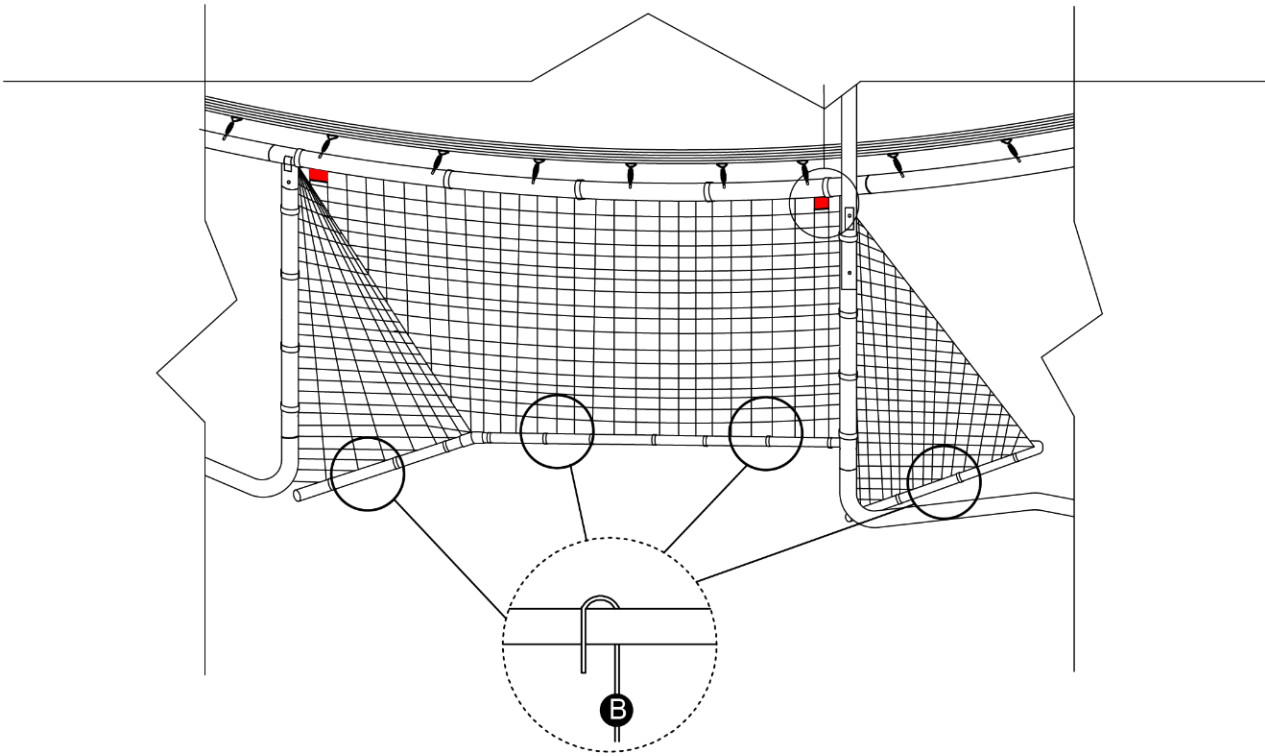

Care and Maintenance

- Inspect the Trampoline Game Set before each use and replace any worn, defective or missing parts.
- Do not leave the Trampoline Game set outdoors when not in use.
- The Trampoline Game Set should be stored in a dry covered area when not in use.
- Anchor Kit will only help to secure the trampoline to the ground. In windy conditions, please disassemble trampoline (and enclosure) and store indoors. Anchor Kit will not prevent the trampoline (and enclosure) from being blown away by wind.

SPORTSPOWER LTD. Warrants its products to be free from defects in material and workmanship under normal use and service conditions for one (1) year after the date of purchase.

All warranty coverage extends only to the original retail purchaser from the date of purchase. SPORTSPOWER'S obligation under this Warranty is limited to replacing at SPORTSPOWER'S option. All products for which a warranty claim is made must be received by SPORTSPOWER'S authorized service center, freight prepaid, and accompanied by sufficient proof of purchase. All returns must be preauthorized by SPORTSPOWER. Preauthorization may be obtained by calling SPORTSPOWER Customer Hot Line at **1-866-370-2131**. This Warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuses, improper or abnormal usage, or repairs not provided by a SPORTSPOWER authorized service center, or to products used for commercial or rental purposes. No other Warranty beyond that specifically set forth above is authorized by SPORTSPOWER.

SPORTSPOWER IS NOT RESPONSIBLE OR LIABLE FOR INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE PRODUCT OR OTHER DAMAGES WITH RESPECT TO ANY ECONOMIC LOSS, LOSS OF PROPERTY, LOSS OF REVENUE OR PROFITS, LOSS OF ENJOYMENT OR USE, COST OF REMOVAL, INSTALLATION OR OTHER CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

THE WARRANTY EXTENDED HEREUNDER IS IN LIEU OF ALL OTHER WARRANTIES AND ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN ITS SCOPE AND DURATION TO THE TERMS SET FORTH HEREIN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. THIS WARRANTY IS VALID ONLY IN THE UNITED STATES.

For Customer Service, please call [1-866-370-2131](tel:1-866-370-2131) or visit www.sportspowerltd.net

Monday – Friday 9:00 AM – 5:00 PM Eastern Time

Sportspower Ltd.

Level 20, Parkview Centre, 7 Lau Li Street, Causeway Bay, Hong Kong