 




o'rageous

Instruction Manual Beach Shelter - 4 Hub

167564

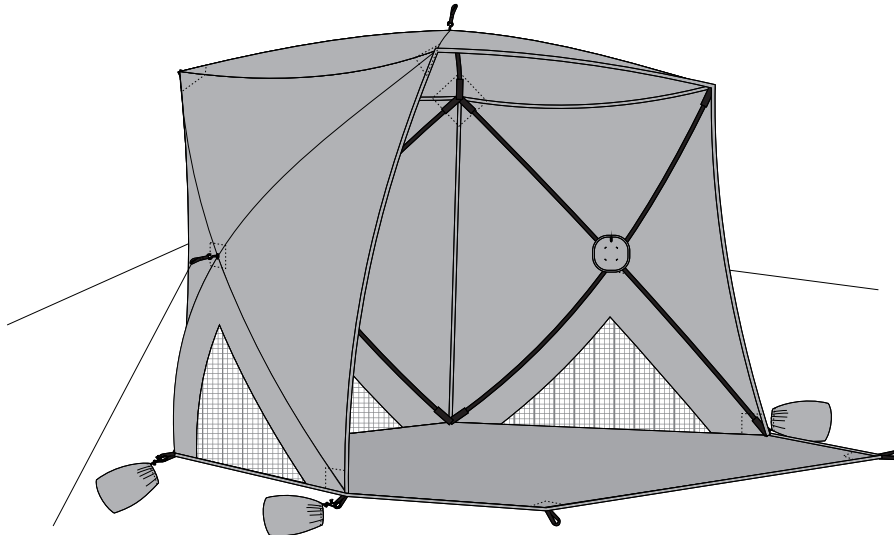

Please keep this instruction manual for future reference

Customer Service:(888) 922-2336

7:00 am to 12:00 am CST (daily)

Live Chat at:www.academy.com

Email:customerservice@academy.com

-----OR-----

(877) 579-1550 8:30am to 5:30pm Monday thru Friday,EST

(Made in Bangladesh)

Table of Contents

Warnings.....	3
Parts List.....	4
Assembly Instructions.....	5-6
Care and Maintenance.....	7
Warranty Information.....	8

Note: Before beginning assembly of product, make sure all parts are present. Compare parts with package content list and hardware contents. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.

Warnings

IMPORTANT SAFETY AND TIP INFORMATION

TO MAXIMIZE THE ENJOYMENT OF YOUR PRODUCT PLEASE ASSEMBLE AND USE YOUR PRODUCT AS SAFELY AS POSSIBLE.

THE PURPOSE OF THE SAFETY ALERT SYMBOLS ⚠ TO CALL YOUR ATTENTION TO POSSIBLE HAZARDS RELATING TO THE USE AND ASSEMBLY OF YOUR PRODUCT.

THE PURPOSE OF THE TIP SYMBOL 🖱 IS TO CALL YOUR ATTENTION TO SUGGESTIONS THAT WILL ASSIST YOU IN THE ASSEMBLY/DISASSEMBLY PROCESS AND ENHANCE YOUR CAMPING EXPERIENCE. WHEN YOU SEE THESE SYMBOLS, PLEASE CLOSELY FOLLOW THE INFORMATION PROVIDED.

⚠ WARNING

 
 


- **KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC**

- This product is made with flame-resistant fabric, which meets CPAI-84 specifications.
- **IT IS NOT FIREPROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame resistant properties ineffective.
- Do not erect this product near an open flame.
Anchor properly at all times and carefully consider the campsite choice.
Be aware of possible falling rocks or tree limbs, lightning strikes, flash floods, strong winds and other hazards which may cause injury to this product or it's occupants.
- Setup is possible for one adult, however two adults are recommended. During assembly poles are under tension. If not held firmly in place during assembly, poles could break or flip up possibly causing serious injury.
- Safety glasses may be worn throughout the assembly process as an additional precaution.
- Stoves, lanterns, candles, grills, heaters and other fuel burning devices produce carbon monoxide and will consume the available oxygen in a tent. Use of such devices in a tent may cause asphyxiation, carbon monoxide poisoning, death, or serious and permanent injuries.
For this reason:
- **DO NOT use fuel burning devices inside or near this product.**
Your failure to follow this warning may cause death or serious and permanent injury to you or others.

ADDITIONAL NOTES:

- Our recreational products are constructed to rigid specifications. They are not made, however, for extreme weather, climates, or environments. Modification, abuse and extreme weather are conditions that may adversely affect the structural integrity of the tent. Additional precautions may be necessary during inclement or unexpected weather conditions.
- Here are some tips that may help during these times:
 - Use guylines to help secure your structure during periods of heavy winds.
 - Storms or steady rains may cause water to collect in pockets on the roof. This will add weight, which can weaken the overall structure, causing the tent to collapse. Maintain a watchful eye and remove any water accumulation that may occur.

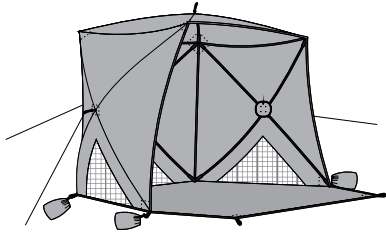Parts List

A	Shelter body with attached poles		1
B	Carry bag		1
C	Guy rope		3
D	Steel stake		9

IMPORTANT NOTES BEFORE YOU BEGIN:

- Assemble your beach shelter before venturing out to become familiar with the assembly.
- Setup is possible for one person, however two people are recommended.
- Select a clean, level area for the shelter, free of debris and sharp objects, away from a natural watercourse.

Assembly Instructions

Step 1:

CAUTION: Avoid pinch points when opening or closing the shelter frame.

- Remove shelter from carry bag.
Remove the tie strap from around the shelter.
- Lay the shelter flat on the ground and check that there is no material twisted or overlapping the ends of any poles. Do not force shelter when folding or unfolding. Watch for the entanglement of poles. **(Fig.1)**
- Grab the webbed loop attached to the steel ring at the center of the wall and pull outward until the shelter wall is partially open. **(Fig.2)**

NOTE: The (2) side walls should be popped open first after laying flat.

FIGURE 1

 
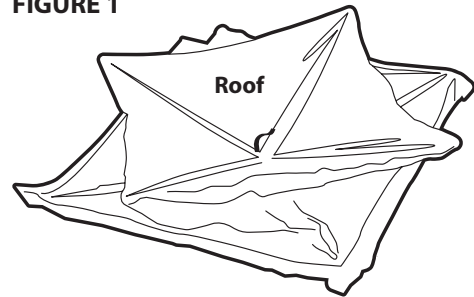 


 
 
FIGURE 2

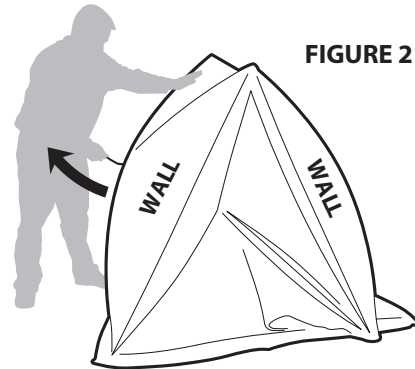

Step 2:

- Proceed by walking around entire shelter and pulling on each wall webbed loop to pop out each wall until all sides are popped out. **(Fig.3)**
- Continue to open the roof.

FIGURE 3

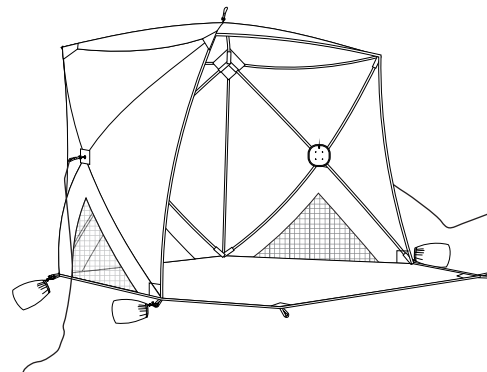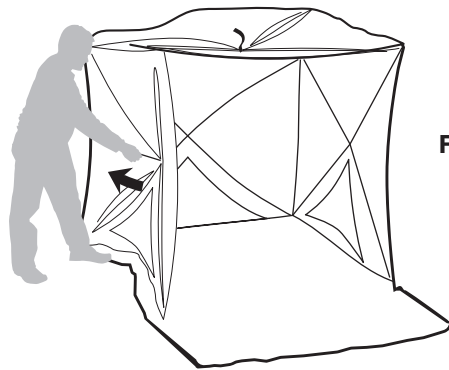

Assembly Instructions

Step 3:

- Your shelter should be standing up completely. You can now easily move your shelter to its final position before securing with stakes and guylines. (**Fig.4**)(**Fig.5**)

To Secure Shelter:

Stake Shelter:

- Locate WEBBING LOOPS attached into the corners at the base of your shelter.
- Slide STAKE through WEBBING LOOP at each location; then gently extend out before securing. (Fig.4)

NOTE: Floor of shelter should be taut when staked properly.

Secure Guylines

- Locate GUYLINES attached to the shelter and unroll.
- Slide STAKE through loop at each location, extend out and drive in to secure. (Fig.5)

NOTE: Three sides GUYLINES should extend out at a 45° angle from shelter.

- Tighten GUYLINES as needed by adjusting the SLIDER up the cord.

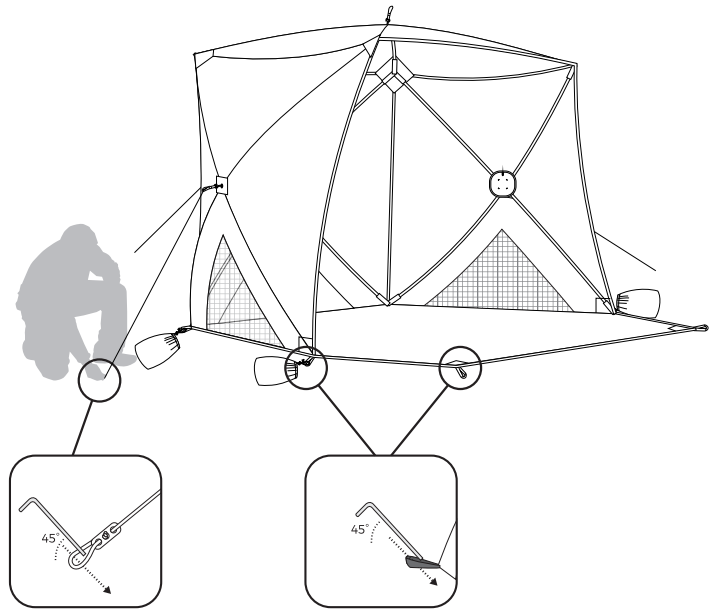 


FIGURE 5

FIGURE 4

Shelter take down:

- Remove all stakes from shelter and guylines, store in stake bag.
- Hold the webbed ring attached to the steel ring of the shelter at the center of the wall and push in until the wall is collapsed.
- Hold the webbed ring attached to the steel ring in the center of one of the roof and push down until the roof is collapsed.
- Lay the shelter flat, check and fold all the poles.
- Roll up the folded shelter.
- Pack the rolled shelter and stake bag to carry bag.

TAKE-DOWN TIP*

- After collapsing the shelter and gathering hub style frame together, spread excess shelter material away from frame and place it on its side. Start at the frame and roll it with pressure until it has reduced in size. Fold the rainfly and wrap the folded rainfly around the rolled shelter. This will keep the shelter tight and make it easier to place back into the carry bag.

Care and Maintenance

- Your shelter must be stored dry . One of the easiest ways to damage your shelter is by storing it while it is wet. Storing a wet shelter as short as 24 hours in warm weather is likely to cause mildew on the fabric coatings.
- If you must close camp in the rain, open your shelter and set it up to allow it to dry as soon as possible. Allow dirt to dry on the fabric after a rainfall before lightly sweeping it off with a brush. For tougher stains, spray the area with water and lightly wipe it off with a few strokes. Do not use washer or dryer. **DO NOT SCRUB THE FABRIC. ALWAYS MAKE SURE SHELTER IS COMPLETELY DRY BEFORE REPACKING.**
- This shelter is made from synthetic fabric that has been treated and is highly resistant to the sun's Ultraviolet (UV) light. However, no fabric can withstand prolonged exposure to sunlight. Do not leave your shelter set up for weeks at a time. Exposure to ultraviolet rays from the sun can damage and/or discolor the material.
- Do not spray or apply insecticide or pesticide on your shelter . It may damage UV resistant or water repellent properties of this shelter.
- Clean the poles with a cloth and lubricate them with a silicone spray to help prevent corrosion and keep from being gritty. This is especially important after using the shelter around salt water.
- Store the stakes in a separate storage bag. Do not pack the stakes inside the shelter.

Warranty Information

This shelter has been manufactured under the highest standards of quality and workmanship. We warrant to the original consumer purchaser that all aspects of this shelter will be free of defects in material and workmanship for one year from the date of purchase. A replacement for any defective part will be supplied free of charge for installation by the consumer. Defects or damage caused by the use of other than genuine parts are not covered by this warranty. This warranty shall be effective from the date of purchase as shown in the purchaser receipt.

This warranty is valid for the original consumer purchaser only and excludes industrial, commercial or business use of the shelter, shelter damage due to shipment or failure which results from alteration, shelter abuse, or shelter misuse, whether performed by a contractor, service company, or consumer. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement nor for incidental or consequential damage.