

PARTS



NOTE

Finally install the **Return Chute (#7)** on the underside of the game by sliding it into place until it is secure.

GAME INSTRUCTIONS

Object:

Be the player that scores the most amount of points in 30 seconds.

Rules:

To start the game, make sure that it is on and press the start button. The timer will start counting down from 30 seconds. During this time the player will try to score the most amount of points possible. They must bounce the ball off the section of elastic material and into the baskets.

YOU ARE NOW READY TO PLAY!

Made In China
Franklin Sports Inc.
Stoughton, MA 02072



For replacement parts:
Visit: franklinsports.com/instructions
Email: parts@franklinsports.com
Call: 1-800-225-8649

franklin®

AGES 6+

ANYWHERE BASKETBALL ARCADE

ITEM NUMBER: **54280**



WARNING:
CHOKING HAZARD --Small parts.
Not for children under 3 yrs.

NOTE: PRINT FRONT TO BACK



CUSTOMER SERVICE COMMITMENT

Thank you for purchasing this Franklin® product! In the event that the product you've purchased has missing or damaged parts, please contact us at:

parts@franklinsports.com

or

Visit our website at: **franklinsports.com/instructions**

If possible, please include product part number and parts description so we can best assist you.

WE'RE HERE FOR YOU!

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE IT WAS PURCHASED FROM.

WE ARE COMMITTED TO FULFILLING ALL REPLACEMENT PART NEEDS IMMEDIATELY.

Thank you for your continued support, and welcome to the #FranklinFamily!

PARTS LIST


1 QTY x2 Lower Frame Piece Rep. Part: 54280-R1	2 QTY x2 Middle Frame Piece Rep. Part: 54280-R2	3 QTY x2 Upper Frame Piece Rep. Part: 54280-R3
4 QTY x1 Backboard w/ Baskets Rep. Part: 54280-R4	5 QTY x1 Front Base Unit Rep. Part: 54280-R5	6 QTY x1 Rear Base Unit Rep. Part: 54280-R6
7 QTY x1 Return Chute Rep. Part: 54280-R7	8 QTY x1 Net Rep. Part: 54280-R8	9 QTY x2 Ball Rep. Part: 54280-R9
10 QTY x12 Net Clip Rep. Part: 54280-R10		

ASSEMBLY INSTRUCTIONS

GENERAL NOTES

- Start by finding a space that is flat and clear of other objects.

STEP 1

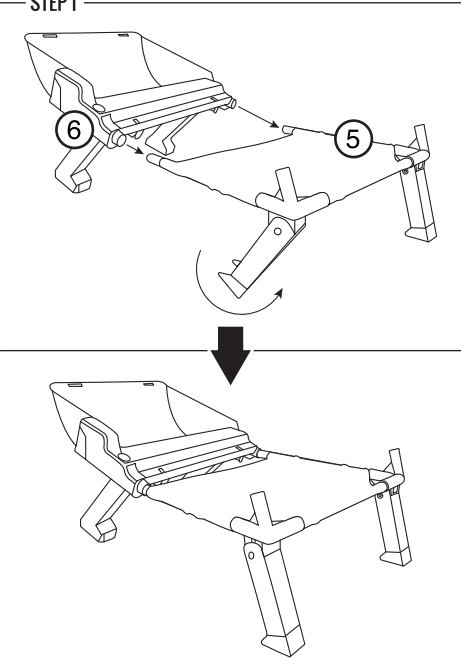

PARTS


5 x1

6 x1

NOTE

Start by taking the **Front Base Unit** (#5) and **Rear Base Unit** (#6) and unfolding the legs. Bring the two parts together.

STEP 2

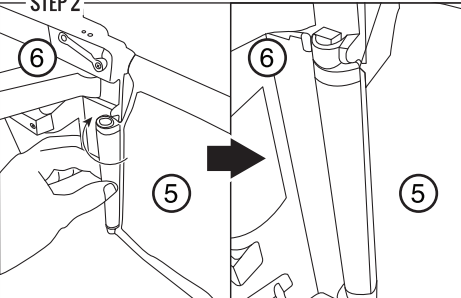

PARTS

5 x1


6 x1

NOTE

Take the rod inside the elastic bounce fabric and clip it into the **Rear Base Unit** (#6). This rod clips in one end at a time and cannot be easily removed once installed.

ASSEMBLY INSTRUCTIONS

STEP 3

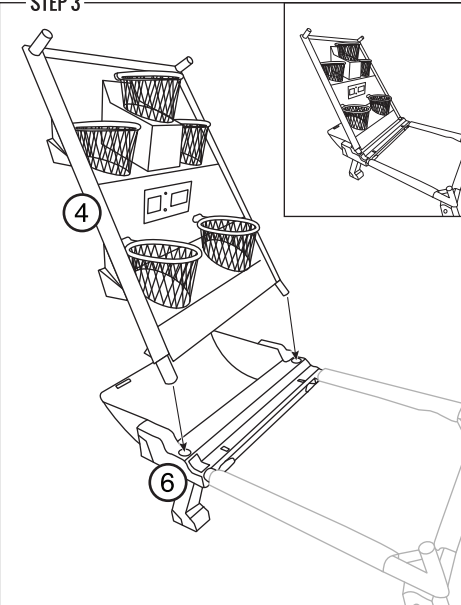

PARTS


4 x1

6 x1

NOTE

Now align the **Backboard with Baskets** (#4) with the slots on the **Rear Base Unit** (#6) and slide it into place.

STEP 4

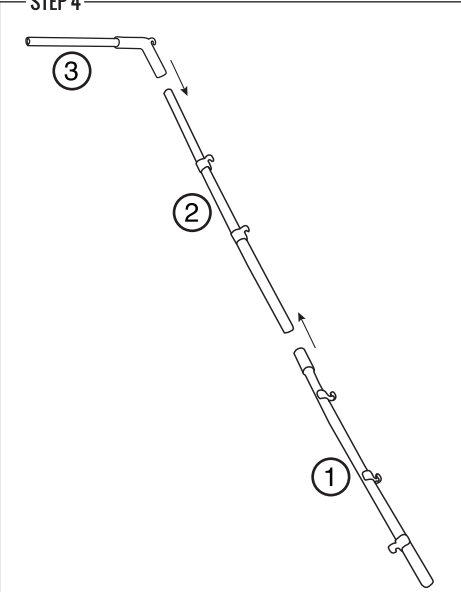

PARTS

1 x2

2 x2


3 x2

NOTE

Next you are going to assemble the frame for the net. When done, there will be two assembled frame pieces. Start by taking one **Upper Frame Piece** (#3) (angled section) and connect it to the **Middle Frame Piece** (#2). Now install the **Lower Frame Piece** (#1) onto the other end of the **Middle Frame Piece** (#2). Repeat this step for the second side.

ASSEMBLY INSTRUCTIONS

STEP 5

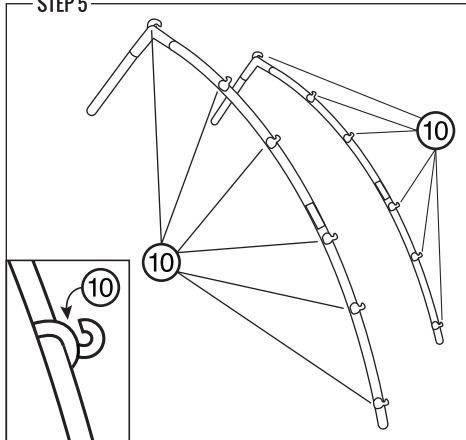

PARTS

10 x12

NOTE

Make sure that the **Net Clips** (#10) are all clipped on securely. Space clips out evenly on the pole like seen in the image.

STEP 6

FIGURE A

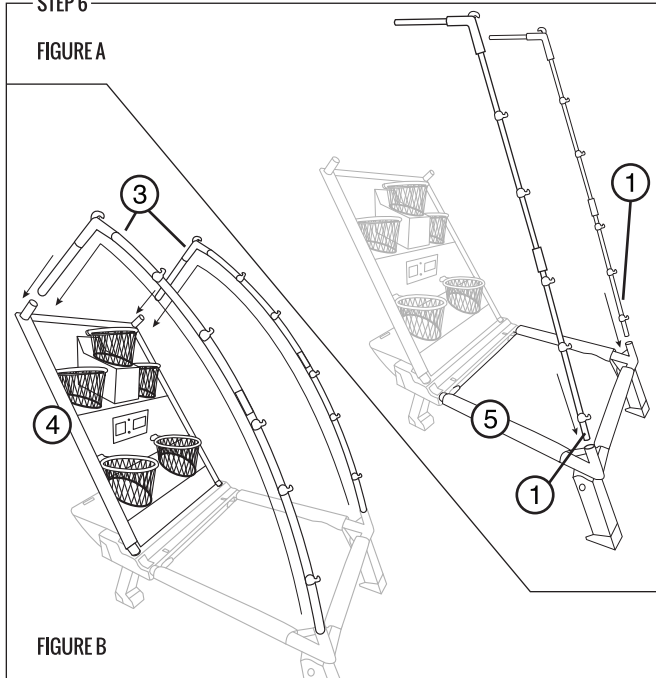


FIGURE B

PARTS

1 x2

3 x2

4 x1


5 x1

NOTE

A) Insert the end of the **Lower Frame Piece** (#1) into the **Front Base Unit** (#5). B) Then grab the other end of the assembled frame and carefully flex it till it aligns with the section on the **Backboard with Baskets** (#4). Slide the net frame into place. Repeat this step for the other side.

ASSEMBLY INSTRUCTIONS

STEP 7

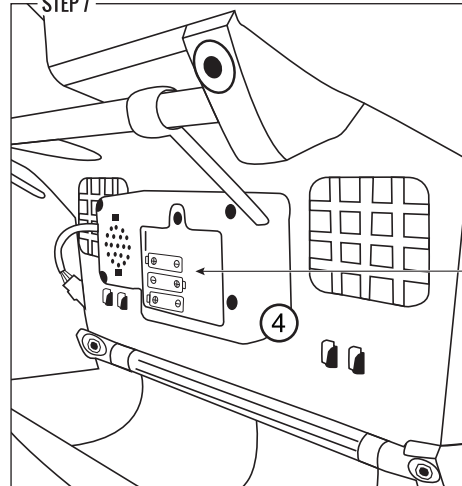

PARTS

4 x1


NOTE

Install the batteries on the back of the **Backboard with Baskets** (#4).

GENERAL NOTE

Requires 3 "AAA" size batteries (not included). Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.

STEP 8

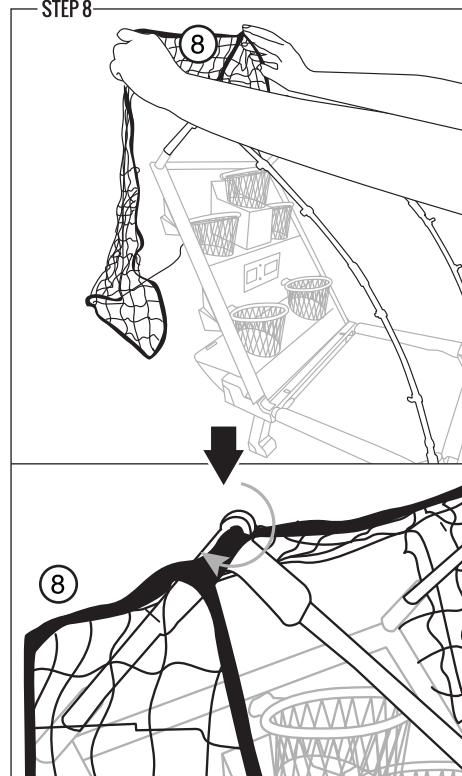

PARTS

8 x1

NOTE


Next step is to install the **Net** (#8). Orient the **Net** (#8) so the three white sides are facing upward.

Drape the top center of the **Net** (#8) over the back of the game.

Before going to the next step, secure the **Net** (#8) onto the angled section of the assembled net frame by using the top clips.

ASSEMBLY INSTRUCTIONS

STEP 9

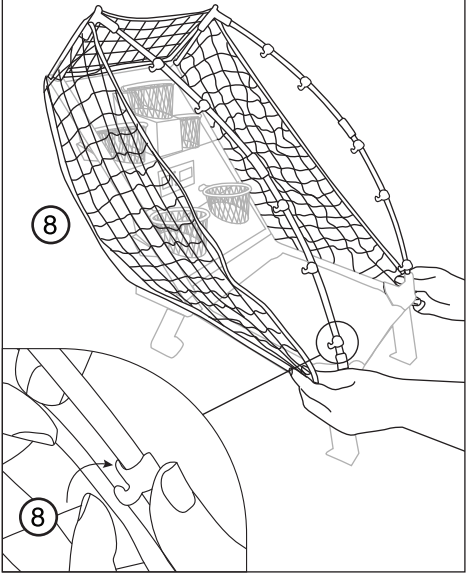


PARTS



NOTE

Now grab the lower corners of the **Net** (#8), hold them apart and bring them towards you/the lower front of the item and hook them to the lowest net clip on each net frame.

STEP 10

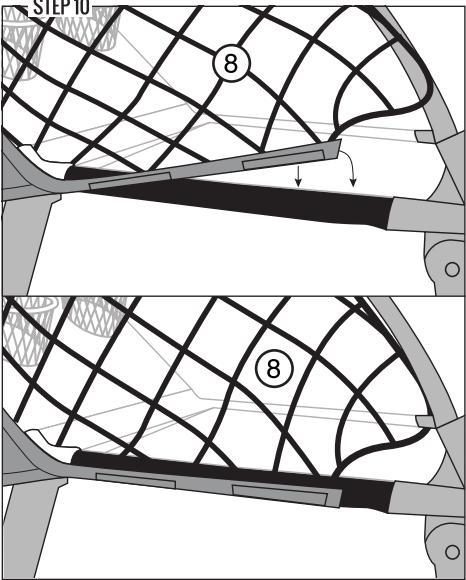

PARTS




NOTE

Attach the bottom of the **Net** (#8) to the game by pressing the self-stick material together.

ASSEMBLY INSTRUCTIONS

STEP 11

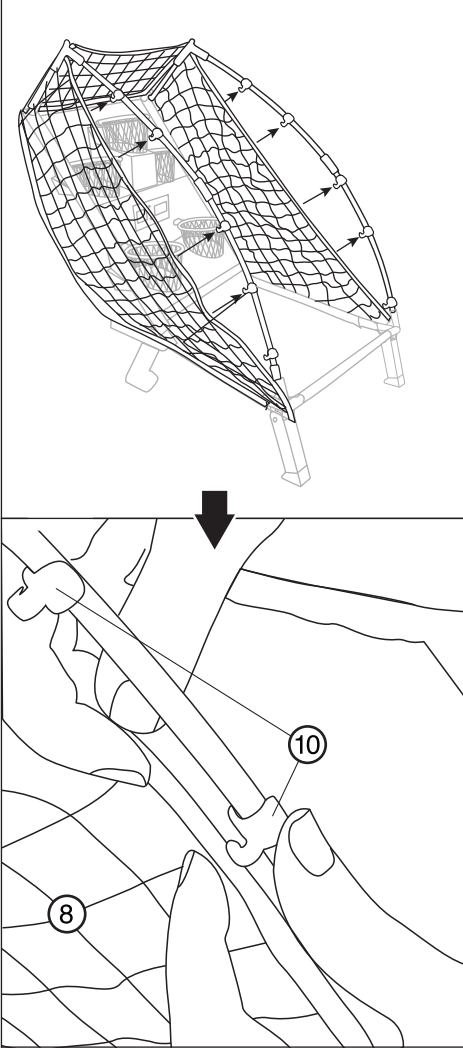

PARTS



NOTE

Next, take the **Net** (#8) and gently pull it up to each **Net Clip** (#10) and hook the **Net** (#8). If the **Net** (#8) is hooked too tight it may become cockeyed or damage the item.