

Ages 3+

Adult assembly required.

Adult supervision recommended.

Takes 1 adult to assemble.

Original (731501): approx. 3¼'L x 2¼'W x 4¼'H

Giant (733034): approx. 5¼'L x 3¼'W x 5'H

Inflatable Easel *by HearthSong®*

Safety and Assembly Instructions



WARNING:

CHOKING HAZARD—Small parts.
Not for children under 3 yrs.

Includes:

Original (731501)

- ▷ 4 Bottles of paint (1 oz. each)
- ▷ 4 Shaped sponges
- ▷ 1 Paint brush

Giant (733034)

- ▷ 4 Bottles of paint (2 oz. each)
- ▷ 4 Shaped sponges
- ▷ 2 Paint brushes

Prior to Assembly & Set-up:

Find the right spot. Use on flat, firm surface. Lawn should be free of rocks, depressions, sticks, etc.

Inflation:

- ▷ Hand, electric, or foot pump recommended for inflation, sold separately at HearthSong.com. Please do not overinflate.
- ▷ Do not inflate with an air compressor or any high-pressure hose at a filling station.
- ▷ Do not inflate on rough surfaces.

Assembly:

1. Inflate all sections of the easel except the horizontal tube at the base of the easel. Be careful not to over-inflate.
2. Use a garden hose to fill the chamber on underside of the horizontal tube through the water valve.
3. After water compartment is filled, inflate the base tube.



Use:

- ▷ Completely dry easel surface before painting. If painting surface is wet, paint won't stick to the easel as well.
- ▷ Use dish soap to help remove paint from hands and fabric. Paint may stain fabrics and temporarily stain skin.
- ▷ When not in use, clean, dry, deflate and store away.

Vinyl Plastic Repair:

A vinyl plastic repair kit is included with your inflatable. TO USE:

- ▷ Thoroughly clean the damaged area and allow surface to dry for a minimum of 10 minutes.
- ▷ Cut a patch large enough to completely cover the hole or puncture.
- ▷ Remove the paper backing from the patch and press patch firmly over affected area.
- ▷ Do not inflate for 20 minutes.

Warning Information:

- ▷ Wear appropriate clothing or paint smock. Remove jewelry and any sharp objects.
- ▷ Store securely-keep away from children to prevent suffocation.
- ▷ The easel is not an aquatic toy. It is not for use on water and not meant to be a floatation device.
- ▷ Keep away from open flames.
- ▷ This is not a lifesaving device.
- ▷ Do not use on or near surfaces containing sharp or jagged objects.