 




LIGHT UP LED BACKYARD DARTS

INSTRUCTION MANUAL

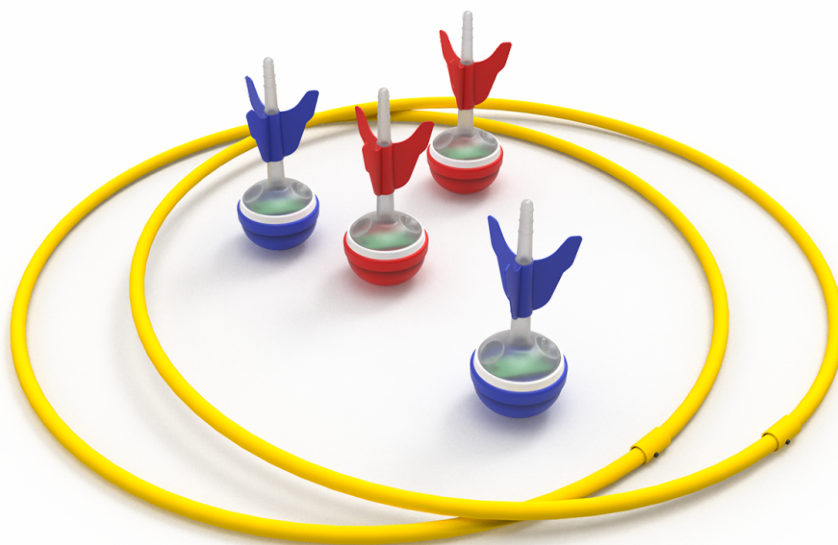

PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

If you have any concerns with your product please visit our website www.escaladesports.com for fastest service. Please have a copy of your receipt of purchase. For any technical support or warranty issues please contact Escalade Sports at 1-800-467-1421 or e-mail us at customerservice@escaladesports.com

Limited 90-Day Escalade Sports Warranty

All Escalade Sports games have a limited 90-day from date of purchase warranty. This warrants the retail purchaser for any Escalade Sports game purchased to be free from any defect in materials and construction for 90 days from the date of purchase. The only exceptions to the warranty include main frames, tabletops, playing surfaces, batteries or tools. Damaged main frames, tabletops, playing surfaces need to be returned to the store as we are unable to replace these parts. Normal play wear and usage is not covered under the warranty, nor is wear or damage due to improper use of the Escalade Sports game. This will void any and all Escalade Sports warranties.

A PURCHASE RECEIPT (or other proof of purchase date) will be required before any warranty service is initiated. All requests for warranty service can be submitted by email, in writing or by contacting our Customer Service Department at: 1-800-467-1421 or email us at customerservice@escaladesports.com

IMPORTANT NOTICE! Please contact us before returning the product to the store.

Warnings



Not for use by children without adult supervision. This is not a child's toy. Adult supervision is required for children playing this game. Please read instructions carefully.

WARNING: Do not attempt to service the electronics contained in this product yourself. Opening or removing any electrical covers could expose you to chemicals.

Be sure to check out all the exciting games Escalade Sports has to offer. Visit our web site at:

ESCALADE
SPORTS

ESCALADESPORTS.COM



Bag Toss



Net Games



Lawn Games

Escalade Sports

 
 
 

Physical Location:

817 Maxwell Ave.
Evansville, IN 47711

Mailing Address: (Correspondence Only)

PO Box 889
Evansville, IN 47706



Parts List

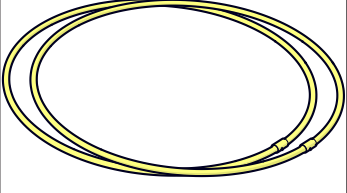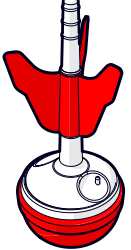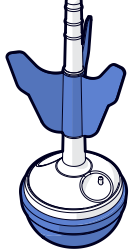1	Scoring Rings	2	LED Dart - Red	3	LED Dart - Blue	4	Carry Bag
							
Qty. 2		Qty. 2		Qty. 2		Qty. 1	

NOTE: Please remove battery insulation tabs in darts and rings prior to use.

Attaching LED Scoring Rings

  1. Before playing **untwist** the ring and press the two ends of the ring until they **snap** together. See picture **A**.
2. To turn **ON**, press the black button on the rings once. There are 3 LED speed settings: **stay on**, **running slow**, and **flashing slow** each click changes the mode of the blinking LED's. On the fourth click, the LED's will turn **OFF**.
3. To turn **ON** Darts, press the button on the Dart once.

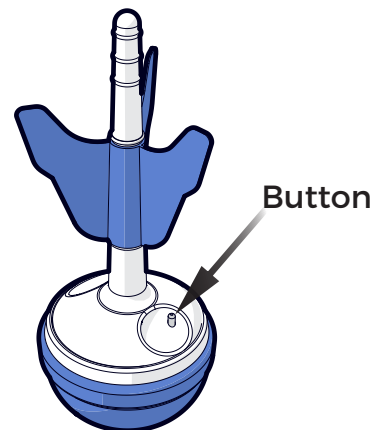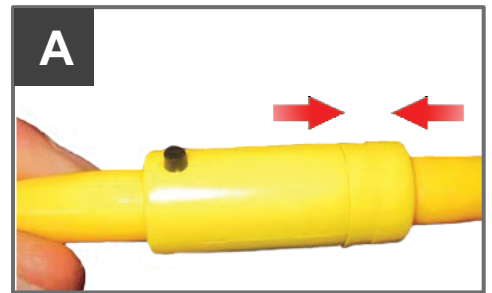

NOTE: To preserve battery life always turn darts and rings OFF when not in use.

NOTE: Game must be stored indoors in a dry place.

 
Playing Instructions

Lawn Darts

2 to 4 players, singles (2) or partners (4)

Preparation: The foul lines are usually 15ft - 20ft apart depending on age and ability of the players.

- Lawn darts should be tossed underhanded.
- Lawn darts should be tossed on lawns or turf surfaces.
- Lawn darts should not be tossed on driveways (asphalt) or concrete surfaces.

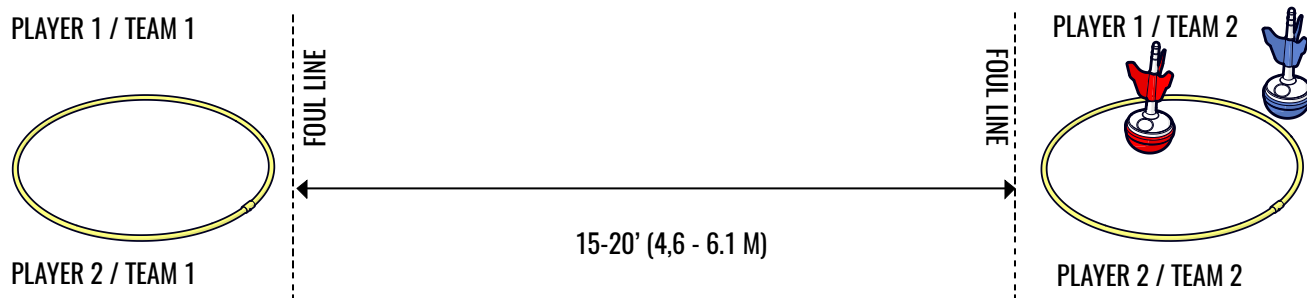

Playing the Game:

- Each player or team has two large darts with a soft tip, weighted bottom.
- Each player/team tosses the darts toward the target rings at the opposite side of the playing area.
- If both teams get a dart inside the circle the points for both teams are cancelled out.
- The first player/team to reach 21 points, wins. The winning score is flexible and you may choose to set your score to any amount, as agreed upon by both players/teams in advance.

1 Point - When the dart lands closest to the ring, mark a point.

3 Points - When the dart hits the center of the target, the launch is worth 3 points.

DO NOT THROW DARTS ON CONCRETE OR ANY OTHER HARD SURFACES!

DO NOT THROW DARTS IN WATER OR WHEN RAINING!

 
THIS GAME IS DESIGNED TO BE A YARD GAME AND NOT RECOMMENDED FOR INDOOR USE.

Battery Replacement Instructions

LED darts include one “CR2032” batteries (per dart) and scoring rings include **three** “AG3” batteries (per ring). Please remove battery insulation tabs in darts and rings prior to use. To preserve battery life always turn darts and rings **OFF** when not in use.

How to Replace Scoring Ring Batteries

1. Turn the ring lights **OFF**.
2. With a small Phillips screwdriver remove screw and battery cover.
3. Take the three batteries out. See pictures **B** & **C**.
4. Install new “AG3” batteries. Correct battery polarity is shown on battery cover. See picture **B**.

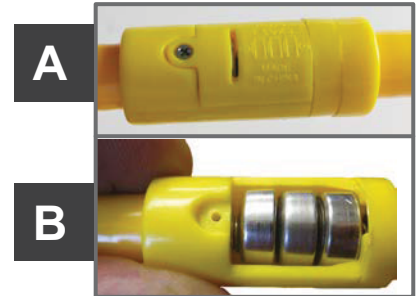

How to Replace Dart Batteries

1. Press button to turn off the darts and remove the white ring. See Picture **A**.
2. Remove red weighted bottom base. See Picture **B**.
3. Install new batteries. See pictures **C**.

