How to Load Model 700 Magpul Magazine & Firearm

- Remove magazine from firearm by pressing forward (toward the muzzle) on the Magazine Latch and pulling down on the magazine. See Figure 1.
- Note that the orientation of the cartridge to be loaded matches that of the cartridge outline on the side of the magazine. All cartridges must be loaded in this orientation. See Figure 2.
- Load the first cartridge in the magazine by using the head of the cartridge to press down on the Magazine Follower and sliding the cartridge under the Feed Lips. See Figure 3.
- 4. First cartridge shown fully loaded. See Figure 4.
- Use your finger to press down on the first loaded cartridge to make it easier to load the next cartridge. See
 Figure 5. Repeat this procedure to load cartridges three through five. The magazine will hold up to five
 cartridges.
- Insert the magazine from the bottom of the firearm, pushing it upward until it is fully seated and the Magazine Latch clicks into place. See Figures 6 & 7.
- Pull downward on the base of the magazine to verify it is fully engaged with the Magazine Latch. Reinsert if needed.



Figure 1 Figure 2 Figure 3



Figure 4 Figure 5



Figure 6 Figure 7

NOTE: While the Magpul magazine is embossed "7.62x51", it is correct for use with the Model 700 Magpul chambered in both 308 Win and 260 Rem. Always check the barrel markings to verify the correct cartridge for your rifle.