If you need any help setting up your new tent, feel free to contact us.			
PHONE:	EMAIL:	SHOP:	
1 (800) 421-6131	customersupport@stansport.com	stansport.com	

🖈 stansport.

ITEM# 723-800 MESH BACKPACK TENT

ASSEMBLY INSTRUCTION

7 FT (L) x 5 FT (W) x 40 IN (H) 2.1M (L) X 1.5M (W) x 102CM (H)



ІТЕМ	PART	QTY (PCS)	PART NAME
A		2	TENT POLES
В		1	TENT
С		1	RAIN FLY
D		7	STAKE
E		2	GUY LINE
F		1	STORAGE BAG

WARNING:

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective

2801 East 12th Street, Los Angeles, CA 90023



stansport.

WATERPROOFING THE TENT

This tent is made from coated water repellent fabrics. However, the sewing process necessary in all tent fabrication can cause water leakage where the sewing needles have perforated the fabric in the seams. Tent should be seam sealed to make it water tight. Seam sealer can be located at your local outdoor outfitter or camping store. We recommend sealing the outside of the floor and roof twice and the inside once. When finished, let the tent stand and dry for a 6 to 12 hours before putting it away.

WARNING:

Stake down tent in windy weather, or if winds are anticipated.

Always place tent a safe distance from campfires. Unstaked tents placed upwind of campfire can be blown into the fire. Tents placed downwind of the fire are often showered with sparks that can burn holes in the lightweight fabric of the tent.

A practice set-up is recommended before first use in a camping situation to prevent any unforeseen difficulties.

Mildew is likely to form if a tent is rolled wet for more than a few days. Mildew can cause delamination between fabric and waterproof coating or irreversible staining. Prompt cleaning and drying is the only way to stop the growth of mildew.

WARNING: Tent fabrics are flame retardant treated per CPAI-84. However, for your safety, we recommend that no open flame be used in or near the tent.

ASSEMBLY INSTRUCTIONS

IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING ANY PART OF SET-UP

1) Remove the tent, rain fly, and tent poles from the tent storage bag.

- 2) Carefully assemble the tent poles.
- 3) Spread the tent out on a flat surface with the tent floor against the ground.
- 4) Carefully slide each of the long tent poles through the colored pole sleeves. (Please note the poles will cross at the top of the tent)
- 5) Insert pin from tent corner into tent pole end ferrule.
- 6) Carefully push the remaining tent corner pins into the remaining pole end ferrules. Now the tent will stand by itself.
- 7) Lay out rain fly with the top facing up and the zipper towards the front.
- 8) Pull fly over tent, with the zipper on the front side.
- 9) Hook corner bungees of rain fly to the rings at each corner of the base.
- 10) Extend the guy ropes at each end of the fly. Make a loop at each end of the guy rope using the slider. Place the loop over the tent stake. Adjust slider to make guy rope tight and stake to the ground.



