

Care and Maintenance

CLEANING:

Allow dirt to dry on the tent fabric after a rainfall before lightly sweeping it off with a brush.

For tougher stains, spray the area with water and lightly wipe it off with a few strokes.

Do not use washer or dryer.

DO NOT SCRUB THE FABRIC. ALWAYS MAKE SURE YOUR TENT IS COMPLETELY DRY BEFORE REPACKING.

Although our products are manufactured according to rigorous specifications, periods of wind or rain may loosen the stakes and cause the frame to sink into the ground. This will weaken the structure's overall rigidity. Puddles may also form on the roof if the unit has not been assembled tightly. If pooling should occur it is advisable to drain the fly to avoid possible damage to frames and fabric. Adjustment of guy lines may be necessary. In case of inclement weather, remove valuables and seek appropriate shelter. Intended for recreational use only.

For your tent, screen house or canopy **DO NOT**...

- Pitch near an open fire.
- Use candles or open flames of any kind in or near.
- Leave children unattended inside.
- Use fuel-burning, oxygen-consuming devices (heaters, lanterns, cooking stoves or other flame sources) inside.
- Refuel lamps, heaters or stoves inside.
- Smoke inside.
- Store flammable liquids inside.
- Use water repellent compounds other than those recommended for use on outdoor equipment.
- Spray with insecticide.
- Store on concrete floor.

For your tent, screen house or canopy **DO**...

- Always extinguish campfire before sleeping or leaving the area.
- Exercise care when using electricity and lighting.
- Make certain it is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation. Clear frequently.
- Anchor securely to provide additional security in changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement stakes and guy lines.
- Take down and store properly after camping.

Be certain campfires are extinguished. Dispose of trash appropriately.



Instruction Manual TELLICO 3 FSMGCT4011



Please keep this instruction manual for future reference

Customer Service: (888) 922-2336

Monday thru Friday
7:00am to 10:00pm, Central Standard Time
Sunday
8:00am to 8:00pm, Central Standard Time

(Made in Bangladesh)


Table of Contents

| | |
|------------------------------|-----|
| Warnings | 2 |
| Parts List | 3 |
| Assembly Instructions . . . | 4-6 |
| Care and Maintenance | 7 |

Assembly Instructions

Step 9: Fasten the Fly


- 1) Wrap the hook & loop fasteners, sewn on the underside of the fly, around the fiberglass tent poles (Fig: 9).

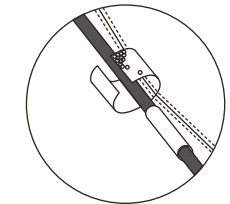

(Fig: 9)

Step 10: Secure Guy Lines

- 1) Secure tent using all guy lines and stakes (Fig: 10).
Tent must be secured for proper function.

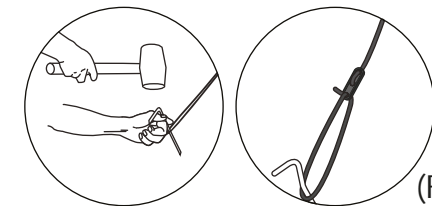


(Fig: 10)

Step 11: Fully Assembled

Tent appears as shown.

Note: Interior accessories if included with this model can be attached to loops inside the tent.

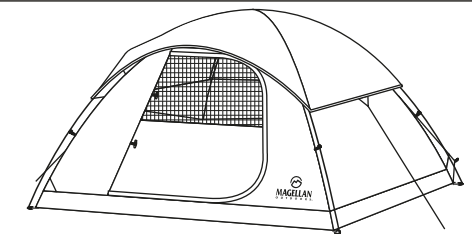


Step 12: Disassembly

- 1) To take down the tent, disassemble in reverse order.
- 2) Remove accessories (if included).
- 3) Remove and fold fly.
- 4) Be sure to leave doors and windows unzipped to avoid zipper damage.
- 5) Remove stakes with hammers or stake puller. DO NOT pull on tent.
- 6) Carefully disengage poles from pins. Push poles away from you through the sleeves to minimize risk of damage to tent or poles.
- 7) Keep poles and stakes together in bags provided.


Step 13: Packing the Tent

 - 1) Spread tent flat, distribute evenly.
- 2) Fold into quarters not to exceed the length of pole bag.



Dimension A should be close to but not exceed the length of the pole bag.

 - 3) Lay pole bag at opposite end from door. Tightly roll bag, skin and fly forcing air through unzipped door.




- 4) Secure with ties and place in carry bag with stakes and accessories.
- 5) Tent must be clean and dry before storage. Store off concrete floor.

Assembly Instructions

Step 4: Stake Tent


- 1) Secure the tent by inserting a stake through the stake loops located along the perimeter of the tent.
- 2) Make certain the tent floor is pulled out evenly and tightly.
- 3) Hammer the stakes into the ground at a 45° angle using a hammer or mallet (Fig: 4).

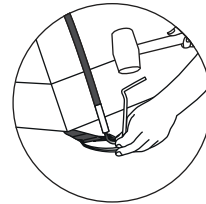

(Fig: 4)

Step 5: Other

- 1) Clip the remaining plastic hooks on the tent to the fiberglass pole frame (Fig: 5).

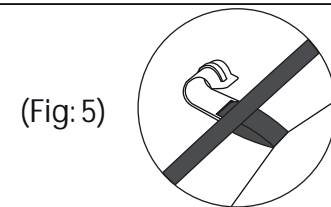

(Fig: 5)


Step 6:

Tent appears as shown.



Step 7: Attach Fly


- 1) Unfold the fly (2) and place over the tent. Position the fly pole sleeve over the front door.
- 2) Attach the fly to the tent by hooking the plastic s-hook on the fly corners to the metal o-ring at the tent corners (Fig: 6).

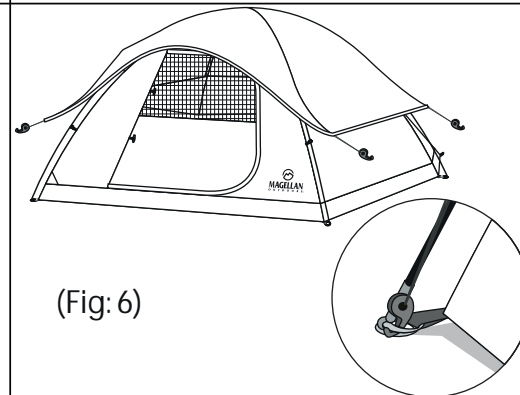


(Fig: 6)

Step 8: Insert and Secure Fly Pole

- 1) Insert the fly pole (B) through the sleeve found at the edge of the fly awning over the front door (Fig: 7).
- 2) Flex the pole and insert each end into the reinforced metal grommets located on either side of the door at side seams in the webbing (Fig: 8).

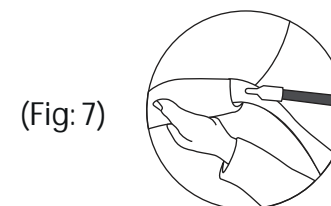

(Fig: 7)

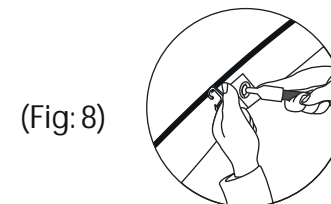

(Fig: 8)

Warnings

⚠ DANGER!

Stoves, lanterns, candles, grills, heaters and other fuel burning devices produce carbon monoxide and will consume the available oxygen in this tent. Use of such devices in this tent will cause asphyxiation, carbon monoxide poisoning, and death or serious and permanent injuries. For this reason:

- DO NOT use fuel burning devices inside or near this tent
- Your failure to follow this warning will cause death or serious and permanent injury to you or others using this tent.

⚠ WARNING!

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS FABRIC.





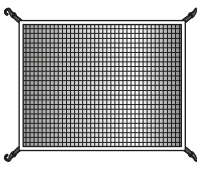
This product is made with flame resistant fabric which meets CPAI-84 specifications.

IT IS NOT FIREPROOF!

The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame resistant properties ineffective.

- Anchor properly at all times and carefully consider campsite choice. Be aware of possible falling rocks or tree limbs, lightning strikes, flash-floods, strong winds and other hazards which may cause damage to this product or injury to it's occupants.
- Minimum of two adults for recommended assembly. During assembly poles are under tension. If not held firmly in place during assembly, poles could break or flip up possibly causing serious injury.
- Safety glasses may be worn throughout the assembly process as an additional precaution.
- Exercise care when using electric devices in and near tents.

Parts List

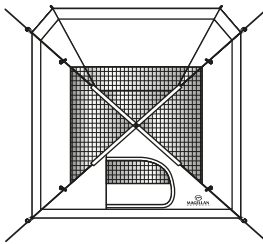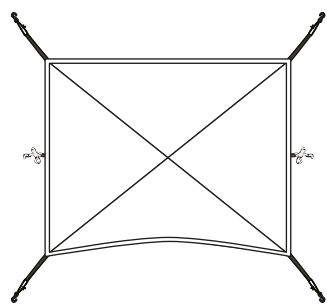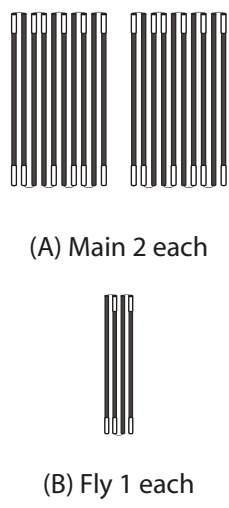
| No. | Part Name | Image | Quantity |
|-----|-------------|--|----------|
| 1 | Tent |  | 1 each |
| 2 | Rainfly |  | 1 each |
| 3 | Poles |  <p>(A) Main 2 each</p> <p>(B) Fly 1 each</p> | 3 total |
| 4 | Tent Stakes |  | 8 each |
| 5 | Gear Loft |  | 1 each |

Assembly Instructions

Step 1: Assemble Poles

- 1) Assemble the tent poles by placing fiberglass sections into the metal ferrules.

 Three poles are provided
2 each (A) Main poles





1 each (B) Fly pole




Step 2: Spread Tent and Insert Poles

- 1) Spread out the tent flat (1), floor side down.
2) Slide main poles (A) through the pole sleeves (Fig: 1).
3) Fasten fabric ties at center of the roof (Fig: 2).

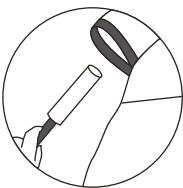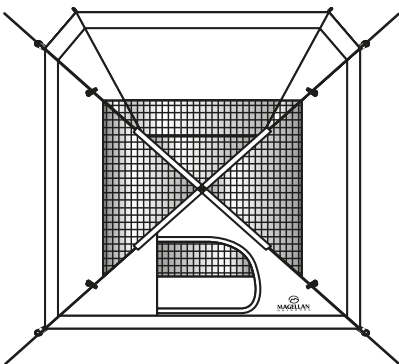


(Fig: 1)

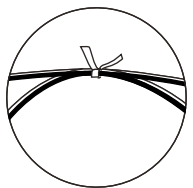

(Fig: 2)

Step 3: Secure Main Poles

- 1) With a person holding each end of a main pole (A), flex the pole into an arch. Carefully place the ends onto the pins located at the stake loops (Fig: 3).
2) Repeat this step for the other main tent pole (A).

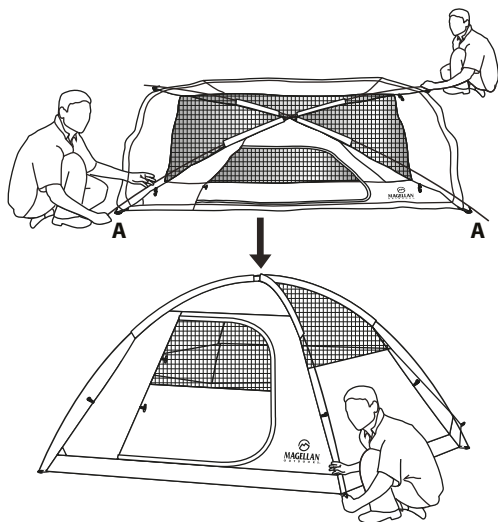

(Fig: 3)

