


mosaic®

Assembly Instructions & User's Manual

13 ft. x13 ft. Gazebo with Mesh Screen

Style Number: 167532

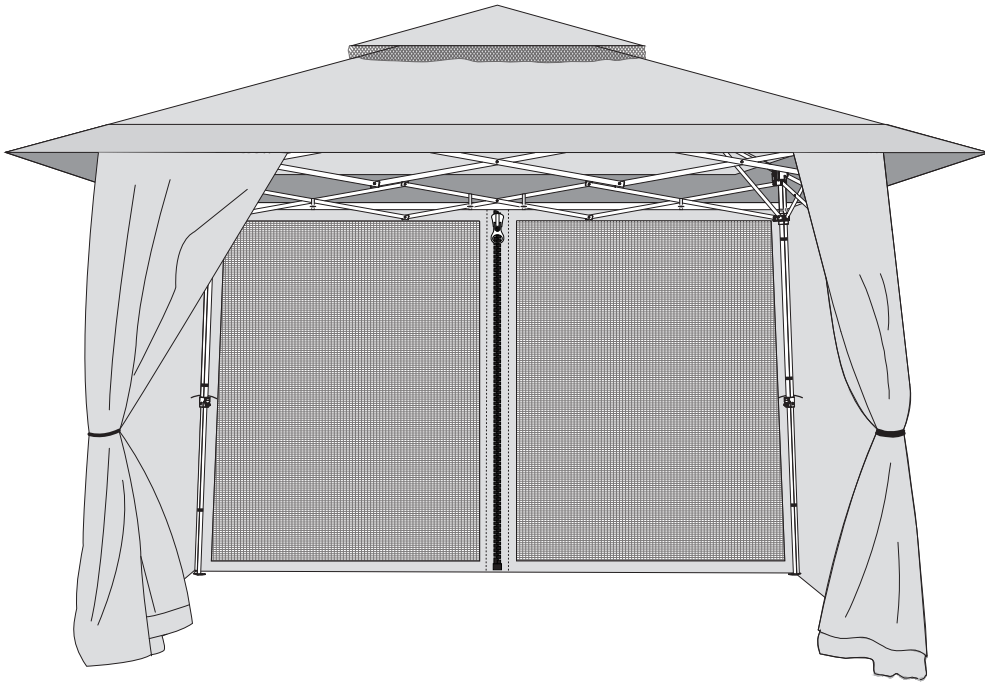

Please keep this instruction manual for future reference

Customer Service:(888)922-2336, 8:00am to 12:00am Everyday CST

Live [Chat@Academy.com](https://www.academy.com/chat): 24/7

Email: customerservice@academy.com

OR

Customer Service: 888-502-9589

Mon thru Fri:9:00am to 4:00pm PST Time

Email care@OutdoorDesignz.com

[Made in China]



**SCAN ME FOR
MORE
IMPORTANT
PRODUCT
INFORMATION.**

Table of Contents

Warnings.....2

Parts..... 3

Assembly Instructions..... 4-7

Components list..... 8-9

Care and Maintenance..... 10

Warranty Information..... 10

Note: Before beginning assembly of product, make sure all parts are present. Compare parts with package content list and hardware contents. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.

Warnings

WARNING: When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to the equipment.

Please read all instructions before assembly and usage.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS CANOPY FABRIC. This canopy meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

WARNING: This product is for outdoor use only.

WARNING: Do not climb on top of the canopy. Falling off the canopy can result in serious injury, possibly even death.

CAUTION: Never set up or continue to use in any rain, wind, or storm conditions, especially lightning storms. Damage can occur to the tent and put you and others in potential danger.







CAUTION: Be careful not to pinch your fingers in the frame during set up and take down.

CAUTION: Do NOT use this tent for permanent shelter. It is designed for temporary use only.




CAUTION: Avoid setting up the tent on steep inclines.

CAUTION: Never leave the tent unattended.

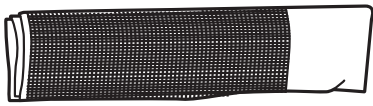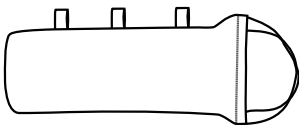Parts List

A-J	Frame		1
K	Small Top		1
L	Large top		1
N	Wheeled Storage Bag		1
M	Mosquito Netting		1
O	Weight bag		4

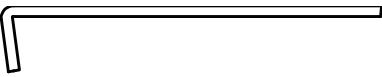 Hardware


P	Stake Kit		8
Q	Guy Rope		4
R	Allen Wrench		1

Assembly Instructions

Step 1: Opening the canopy frame

With two persons on the diagonal ends, lift and partially pull the canopy frame (A-J) apart.

Note: At this step do not press the center up yet.

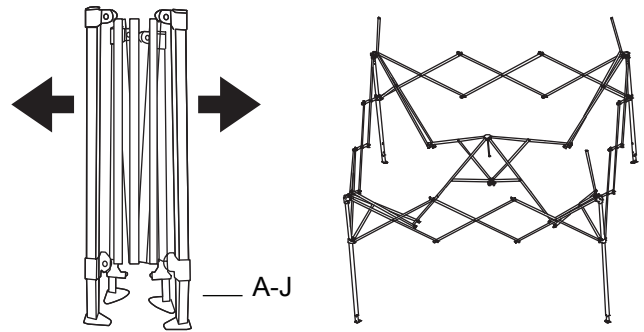


Step 2: Attaching the canopy

Unfold the small top (K) and place it over the open frame (A-J).

Attach the four canopy corners to the frame top.

Unfold the large top (L) and place it over the open frame (A-J). Be sure the neckband of the large top (L) is totally under the small top (K)

Attach the four canopy corners to the awning pole.

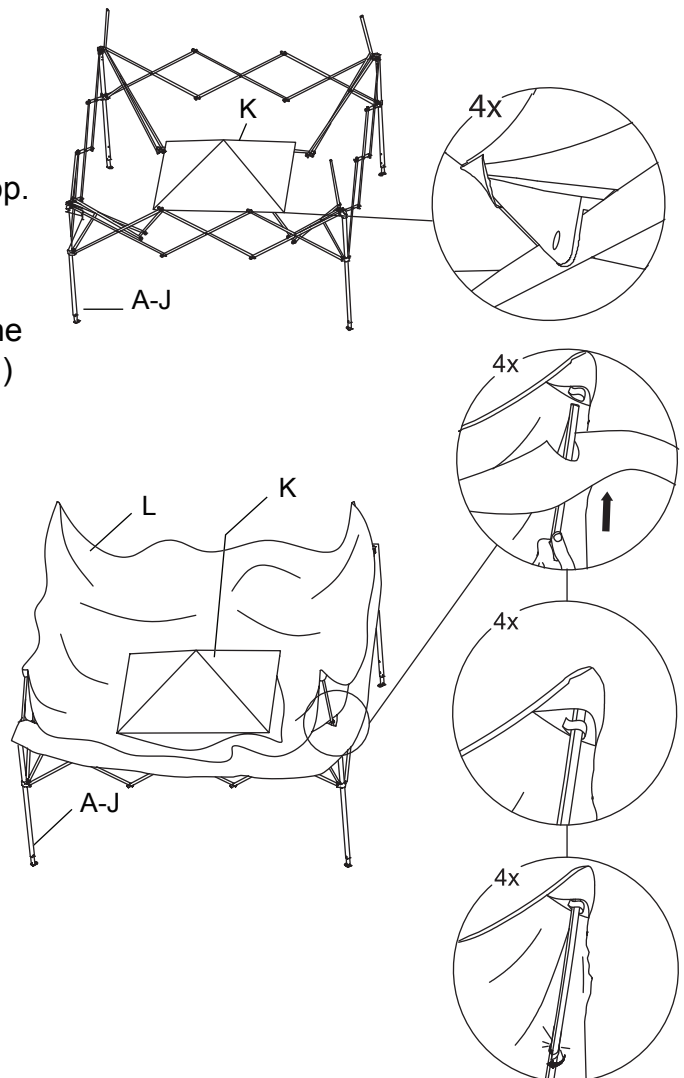


Assembly Instructions

Step 3: Locking the frame


Under the canopy, place one hand on the upper frame and use the other hand to push the central hub straight up until it clicks into the central pole and touches with the bottom tray part.

Finish attaching the large canopy (L) inside the canopy frame (A-J) using the hook and loop closures.

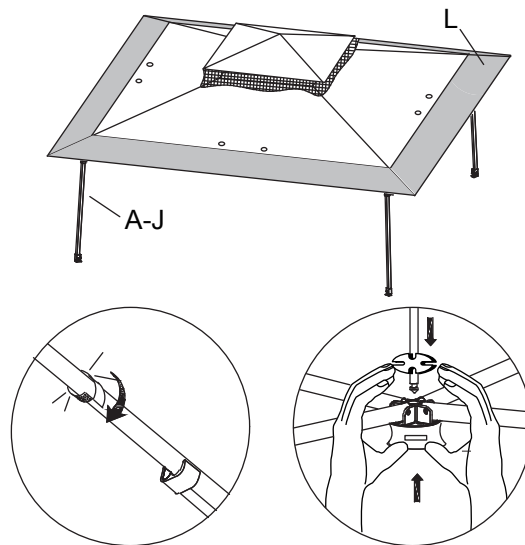

Step 4: Adjusting the canopy height

Press the dark brown button on each leg to raise or lower to adjust the canopy height.

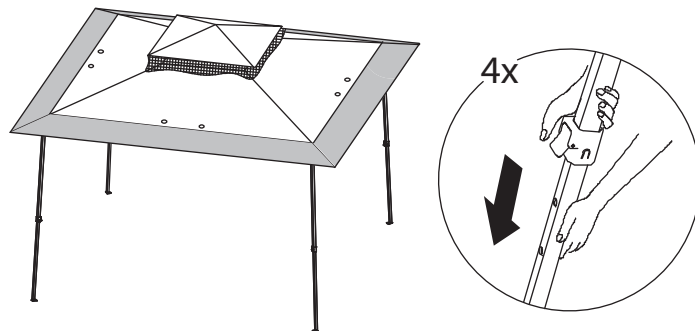


Step 5: Securing the canopy

Fill the weight bag (O) with sand or gravel. Connect the velcro loops of the weight bag (O) around each leg. The included weight bag (O) are designed for quick and easy use.

Tips:Weights must be applied to prevent damage from wind.

Secure the ropes through the metal rings and have the proper tension by adjusting the plastic adjusters on the ropes.

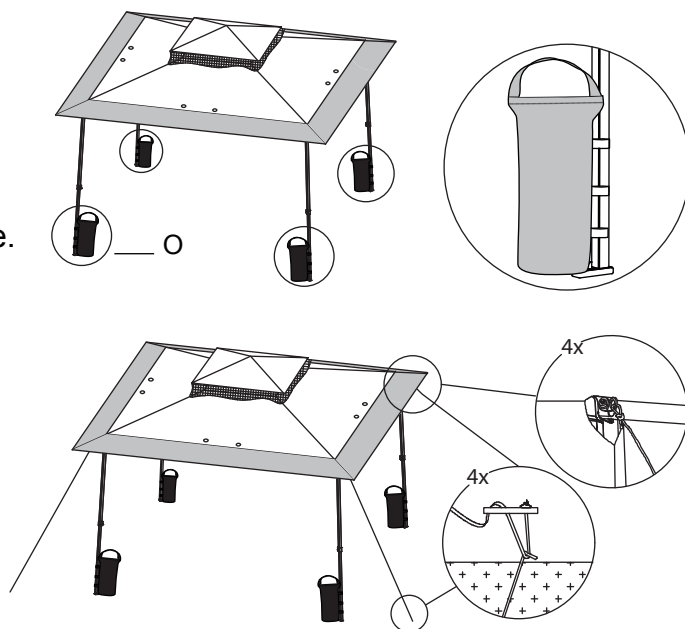

Assembly Instructions


Step 6: Hanging the mosquito netting

Open one zipper of the mosquito netting.
(M) Wrap the wall around the leg. The vertical fabric should go around the outside of the leg.

Start attaching the screen in the middle of any side using the toggle connector over the toptruss to secure the mosquito netting in place.

Repeat with the above steps for remaining sides.


Finally, zip the mosquito netting. (M)

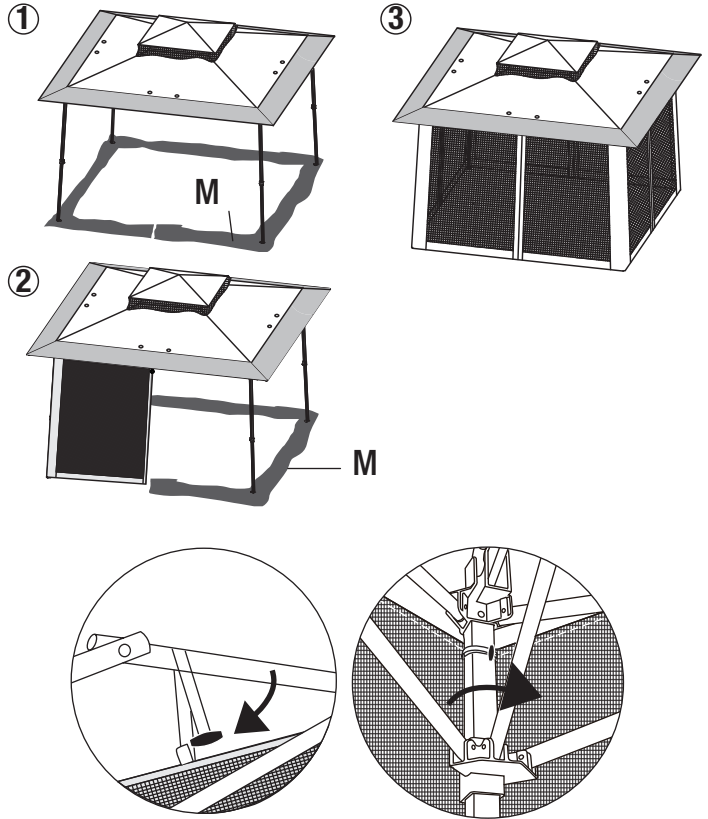

Take down Instructions

Step 1: Taking down the mosquito netting


Open one zipper of the mosquito netting. (M)
Go under the canopy and unwrap the toggle from around the canopy frame to take down the mosquito netting.

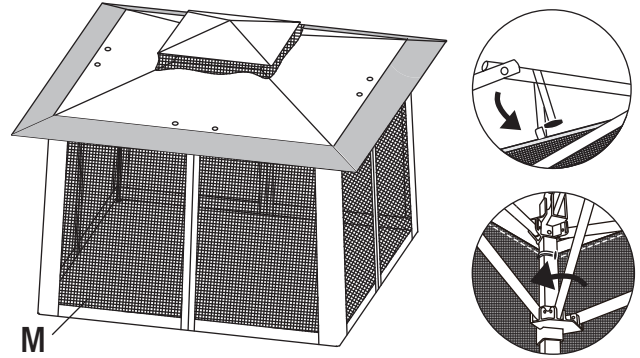

Step 2: Removing the stakes and retracting the legs


Pull up all stakes from the ground.

Press the push button on each leg and retract the legs to their original height.

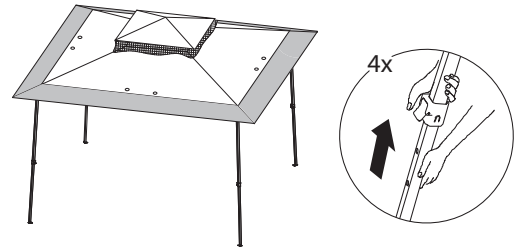


Step 3: Unlocking the canopy

Go under the canopy, press the dark Brown lock button. Pull down the central hub until it is separated from the central pole.

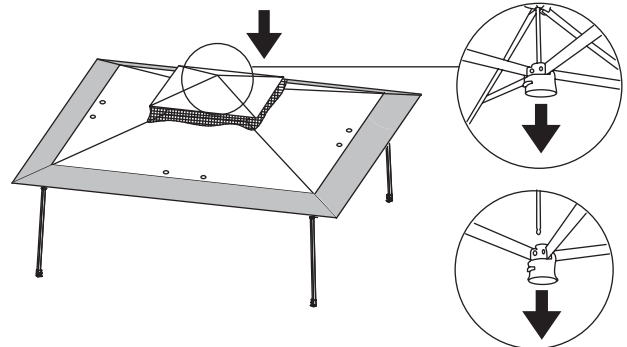

Step 4: Folding the frame


Lift one leg of the frame until the two neighbouring legs are raised off the ground. Push inward until the frame is fully closed.

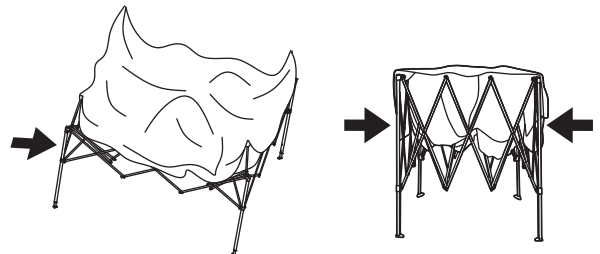



Step 5: Packing the canopy in the wheeled storage bag

With the canopy feet facing the rollers, slide the wheeled storage bag over the closed canopy frame.

Close the zipper on the wheeled storage bag.

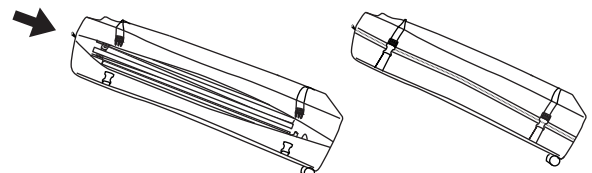

Components

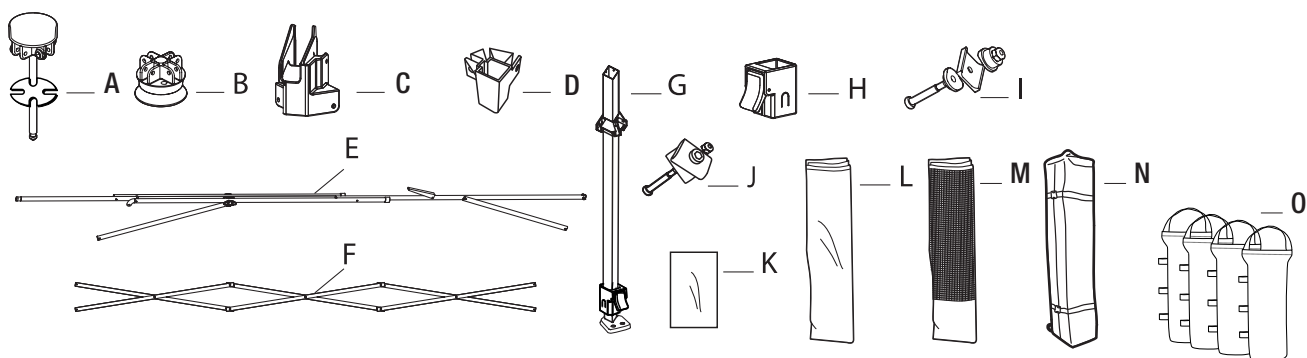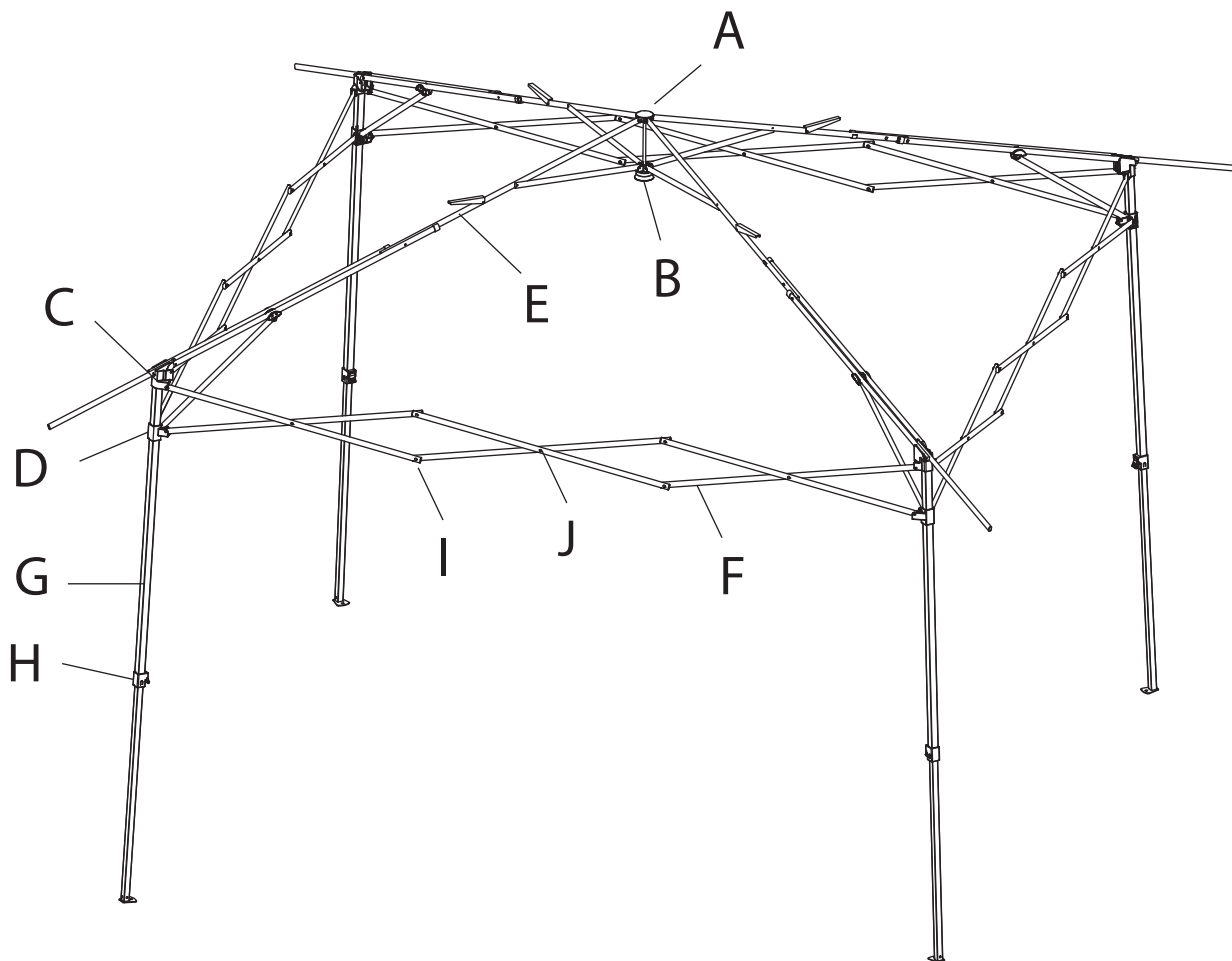

Components

13 ft. x13 ft. Gazebo with Mesh Screen

Note: Please refer to the Reference No. and contact the aftersales service if any part of your canopy needs to be changed under warranty.

Part	Description	Reference No.
A	Central Pole	MSCP82BEMI
B	Central Bottom Hub	MSCH00BECL
C	Leg Cap	MSLC11BEMI
D	Leg Slider	MSLS11BEMI
E	Ceiling Assembly	MSCA13BE00
F	Eave Assembly	MSEA13BE00
G	Leg Assembly	MSLA13BE00
H	Leg Extender	MSLE11BEKH
I	M5 Bolt Kits	UNBK05BE00
J	M4 Bolt Kits	UNBK04BE00
K	Small Top	MSTS13BR22
L	Large Top	MSTL13KB22
M	Mosquito Netting	MSMN13BR00
N	Wheeled Storage Bag	MSCB13BRBW
O	Weight bag	
P	Stake Kit	UNSK02GA8P
Q	Guy Rope	UNGR67WB08
R	Allen Wrench	

Care and Maintenance

Before using, clean the canopy completely with a soft dry towel.

Do not put your canopy in wet conditions where there is a risk of rust developing.

When not in use, store in the bag in a cool, dry area.

Warranty Information

This product has been manufactured under the highest standards of quality and workmanship. We warrant to the original consumer purchaser that all aspects of this product will be free of defects in material and workmanship for one year from the date of purchase. A replacement for any defective part will be supplied free of charge for installation by the consumer. Defects or damage caused by the use of other than genuine parts are not covered by this warranty. This warranty shall be effective from the date of purchase as shown in the purchaser receipt.

This warranty is valid for the original consumer purchaser only and excludes industrial, commercial or business use of the product, product damage due to shipment or failure which results from alteration, product abuse, or product misuse, whether performed by a contractor , service company , or consumer. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement nor for incidental or consequential damage.