



# Instruction Manual

## King's Peak 2 Backpacking Tent

FSMGCT0012



**Please keep this instruction manual for future reference**

**Customer Service: (888) 922-2336**

**7:00 am to 12:00 am CST (daily)**

**Live Chat at: [www.academy.com](http://www.academy.com)**

**Email: [customerservice@academy.com](mailto:customerservice@academy.com)**

**(Made in Bangladesh)**

# Table of Contents

Warnings.....2

Parts List.....3



Assembly Instructions.....4-6

Care and Maintenance.....7

Note: Before beginning assembly of product, make sure all parts are present. Compare parts with package content list and hardware contents. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.

# Warnings



## IMPORTANT SAFETY AND TIP INFORMATION

TO MAXIMIZE THE ENJOYMENT OF YOUR PRODUCT PLEASE ASSEMBLE AND USE YOUR PRODUCT AS SAFELY AS POSSIBLE. THE PURPOSE OF THE SAFETY ALERT SYMBOL  IS TO CALL YOUR ATTENTION TO POSSIBLE HAZARDS RELATING TO THE USE AND ASSEMBLY OF YOUR PRODUCT. THE PURPOSE OF THE TIP SYMBOL  IS TO CALL YOUR ATTENTION TO SUGGESTIONS THAT WILL ASSIST YOU IN THE ASSEMBLY/DISASSEMBLY PROCESS AND ENHANCE YOUR CAMPING EXPERIENCE/ WHEN YOU SEE THESE SYMBOLS, PLEASE CLOSELY FOLLOW THE INFORMATION PROVIDED.





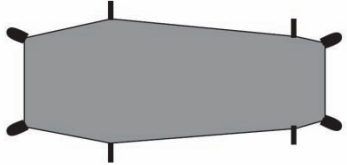



## WARNING

**KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.** This fabric is not fireproof!

- It is made with flame resistant fabric, which meets CPAI-84 specifications. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.
- Do not erect this product near an open flame.
- Never use any fuel burning, oxygen consuming devices, or any device that produces fumes (including, but not limited to cooking stoves, lanterns, candles, hibachis, or heaters) in or around your product. Inhalation of fumes may result in carbon monoxide poisoning, injury and/or death.
- This product is not waterproof! Your product is water repellent, however, during heavy rain some leakage may occur. Keep objects from touching the inside, as objects may cause leakage at the point of contact.
- To prevent seam leakage (floor seams in particular), a seam sealer compound must be applied to the seams. Use recommended water repellent compounds on our product. Read the label on any product before using. Questions? Call our Customer Service number.
- Your recreational product is made from synthetic fabric that has been treated and is highly resistant to the Sun's Ultraviolet (UV) light. No fabric can withstand prolonged exposure to sunlight. UV damage is not covered by the limited warranty.
- Do not spray or apply insecticide or pesticide on your product. It may damage UV resistant and/or water repellent properties of our product. Any damage caused by applying insecticide or pesticide on your product is not covered by the limited warranty.
- Our recreational products are constructed to rigid specifications. They are not made, however, for extreme weather, climates, or environments. Modification, abuse and extreme weather are some conditions that may adversely affect the structural integrity.
- Additional precautions may be necessary during inclement weather conditions. Here are some tips that may help during these times.
  -  Use guy lines to help secure your structure during periods of heavy winds.
  -  Storms or steady rains may collect in water pockets on the roof. This will add weight, which can weaken the overall structure causing the uprights to collapse. Maintain a watchful eye and remove any water accumulation that may occur.

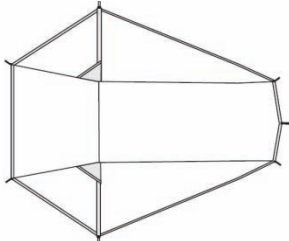



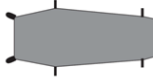

# Parts List

A	Longer alloy pole with pre-bend		1
B	Shorter alloy pole with pre-bend		1
C	Rain fly		1
D	Inner tent		1
E	Footprint		1
F	Stakes		16

# Assembly Instructions



## Verify Parts

1. Refer to the parts list and verify all the parts are included and undamaged.

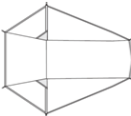A	Longer alloy pole with pre-bend		1
B	Shorter alloy pole with pre-bend		1
C	Rain fly		1
D	Innertent		1
E	Footprint		1
F	Stakes		16


## Assembling the tent

2. On a level surface, unfold the tent so all the corners are visible.
3. Assemble the alloy poles (A&B), then slide them into the pole sleeves on the inner tent (D), as specified in image 1.
4. Carefully bend the poles and insert the pole tips into the eyelets on the webbing straps of the inner tent (D) (Refer to image 2)

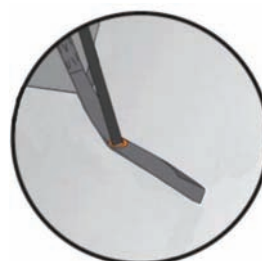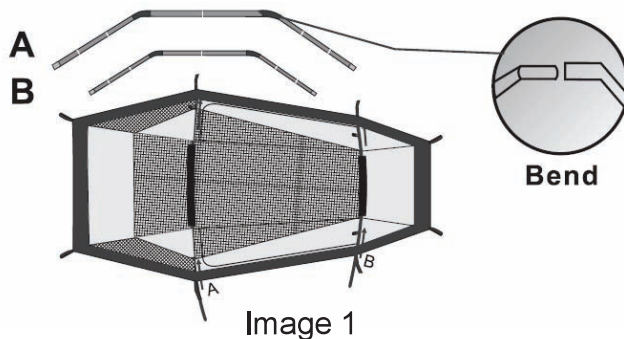

# Assembly Instructions

5. Attach the quick clips on the inner tent (D) to the alloy pole (A) to pitch the inner tent. (Refer to image 3)
6. Lay out the footprint (E) on the spot where you want to build your camp site
7. Secure the inner tent (D) and footprint (E) together by inserting stakes (F) through the corner webbing straps and into the ground (Refer to image 4). Set stakes at a 45 degree angle. (Refer to image 5)

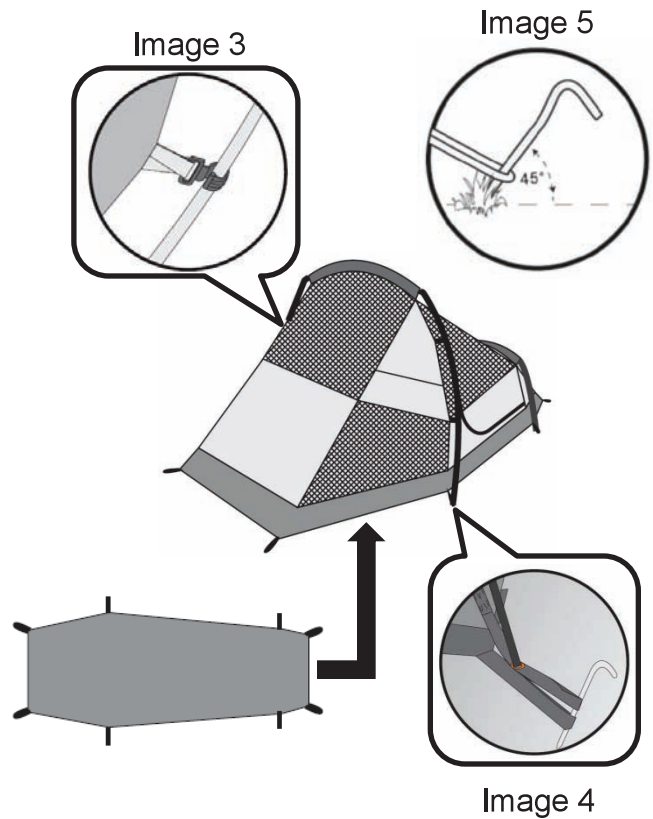

8. Cover the inner tent (D) with the rain fly (C).



# Assembly Instructions

- Secure the corners of the rain fly (C) by pushing stakes (F) through the webbing loops on the corners of the rain fly (C) and into the ground. Set stakes at a 45 degree angle. (Refer to image 6)

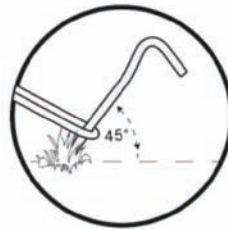
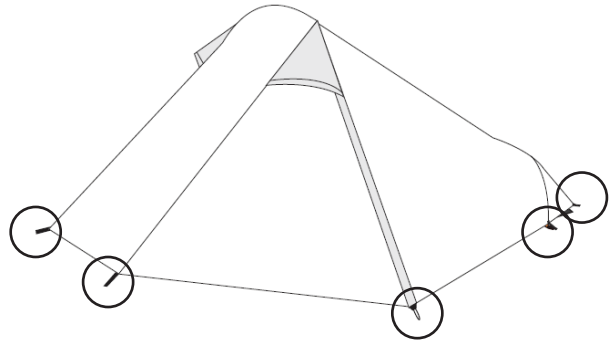


Image 6

## Care and Maintenance

- Your product must be stored dry. One of the easiest ways to damage your product is storing it while it is wet. Storing a wet tent as short as 24 hours in warm weather is likely to cause mildew on the fabric coatings, which is not covered by the limited warranty.
- If you must close camp in the rain, open your product and set it up to allow it to dry as soon as possible. Even when your product appears to be dry after use, it is always best to unfold and assure it is completely dry before storing. Hanging it outside or even leaving it loosely clumped in your house for a few days can help. Turning it inside and out to assure it has dried everywhere can also help prevent damage.
- Do not leave your product set up for weeks at a time. Prolonged exposure to ultraviolet rays from the sun can damage and/or discolor the material.
- Clean the product when it is set up using a mild soap and lukewarm water solution. Rinse and dry completely. Do not use detergent, washing machines, or dryers because they can damage the protective coating and seams.
- Clean the poles with a cloth and lubricate them with a silicone spray to help prevent corrosion and keep from becoming gritty. This is especially important after using product around salt water.
- Store the stakes in a separate storage bag. Do not pack the stakes inside the tent.

Made in Bangladesh