



MAGELLAN
O U T D O O R S.
— PRO —

Instruction Manual

SwiftRise Hub 4P Tent

164276



Please keep this instruction manual for future reference

Customer Service:(888) 922-2336

7:00 am to 12:00 am CST (daily)

Live Chat at:www.academy.com

Email:customerservice@academy.com

(Made in Bangladesh)

Table of Contents

Warnings.....	3
Parts List.....	4
Assembly Instructions.....	5-6
Care and Maintenance.....	7
Warranty Information.....	8

Note: Before beginning assembly of product, make sure all parts are present. Compare parts with package content list and hardware contents. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.

Warnings

IMPORTANT SAFETY AND TIP INFORMATION

TO MAXIMIZE THE ENJOYMENT OF YOUR PRODUCT PLEASE ASSEMBLE AND USE YOUR PRODUCT AS SAFELY AS POSSIBLE.

THE PURPOSE OF THE SAFETY ALERT SYMBOLS ⚠️ TO CALL YOUR ATTENTION TO POSSIBLE HAZARDS RELATING TO THE USE AND ASSEMBLY OF YOUR PRODUCT.

THE PURPOSE OF THE TIP SYMBOL 🖱️ IS TO CALL YOUR ATTENTION TO SUGGESTIONS THAT WILL ASSIST YOU IN THE ASSEMBLY/DISASSEMBLY PROCESS AND ENHANCE YOUR CAMPING EXPERIENCE. WHEN YOU SEE THESE SYMBOLS, PLEASE CLOSELY FOLLOW THE INFORMATION PROVIDED.

⚠️ WARNING


 
 
 
 
• **KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC**

- This product is made with flame-resistant fabric, which meets CPAI-84 specifications.
- **IT IS NOT FIREPROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame resistant properties ineffective.
- Do not erect this product near an open flame.
Anchor properly at all times and carefully consider the campsite choice.
Be aware of possible falling rocks or tree limbs, lightning strikes, flash floods, strong winds and other hazards which may cause injury to this product or it's occupants.
- Setup is possible for one adult, however two adults are recommended. During assembly poles are under tension. If not held firmly in place during assembly, poles could break or flip up possibly causing serious injury.
- Safety glasses may be worn throughout the assembly process as an additional precaution.
- Stoves, lanterns, candles, grills, heaters and other fuel burning devices produce carbon monoxide and will consume the available oxygen in a tent. Use of such devices in a tent may cause asphyxiation, carbon monoxide poisoning, death, or serious and permanent injuries.
For this reason:
- **DO NOT use fuel burning devices inside or near this product.**
Your failure to follow this warning may cause death or serious and permanent injury to you or others.

ADDITIONAL NOTES:

- Our recreational products are constructed to rigid specifications. They are not made, however, for extreme weather, climates, or environments. Modification, abuse and extreme weather are conditions that may adversely affect the structural integrity of the tent. Additional precautions may be necessary during inclement or unexpected weather conditions.
- Here are some tips that may help during these times:
 - Use guylines to help secure your structure during periods of heavy winds.
 - Storms or steady rains may cause water to collect in pockets on the roof. This will add weight, which can weaken the overall structure, causing the tent to collapse. Maintain a watchful eye and remove any water accumulation that may occur.

Parts List

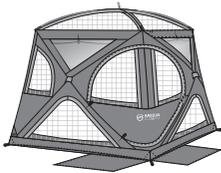A	Tent body with attached poles		1
B	Tent rainfly		1
C	Carry bag		1
D	Lighted gear loft		1
E	Guy rope		8
F	Steel stake		12
G	String light for tent		1
H	Battery compartment for gear loft		1
I	3D Battery compartment for tent		1

IMPORTANT NOTES BEFORE YOU BEGIN:

- Assemble your tent before camping to become familiar with the assembly.
- Setup is possible for one person, however two people are recommended.
- Select a clean, level area for the campsite free of debris and sharp objects, away from a natural watercourse.
- Use of a ground cloth is recommended to prolong the life of the tent floor and provide additional insulation and moisture protection.
- To prevent damage to the zippers, unzip the doors and windows of the tent prior to disassembly allowing air to move freely.
- Seam sealing the inside stitched seams of the tent is recommended (seam sealer not included). This will improve weather resistance. Discoloration may occur if applied to outside seams.

Assembly Instructions

Step 1:

CAUTION: Avoid pinch points when opening or closing the tent frame.

- Remove tent from expandable carry bag. Remove the tie strap from around the tent.
- Lay the tent flat on the ground and check that there is no material twisted or overlapping the ends of any poles. Do not force tent when folding or unfolding. Watch for the entanglement of poles. (Fig.1)
- Grab the webbed ring sewn to the steel ring at the center of the wall and pull outward until the wall is partially open. (Fig.2)

NOTE: The (2) side walls should be popped open first after laying flat.

FIGURE 1


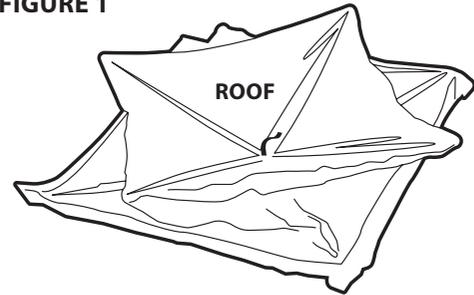


FIGURE 2

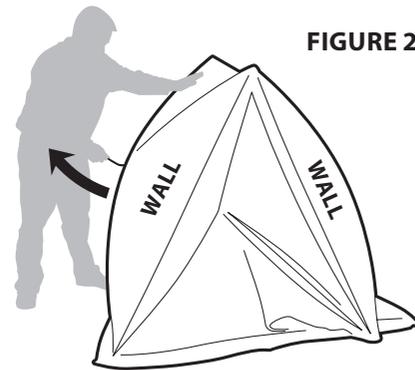


Step 2:

- Proceed by walking around entire tent and pulling on each wall webbed loop to pop out each wall until all sides are popped out. (Fig.3)
- Spread out the rainfly, find the vent, open the vent with struts. (Fig.4)
- Find the side with logo as the front. Two people each pull the rainfly any part, and then drag it over the top of the tent. (Fig.5)

NOTE: Ensure to add the rainfly before pushing open the top.

- Continue to open the roof by walking inside the tent and pushing up each roof.
- Attach Lighted Gear loft by attaching the plastic S-hooks to the fabric loops sewn on the roof of the tent. (Fig.6)

FIGURE 6

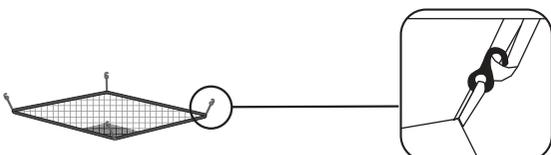

TIP: Gear loft is for storing light weight items only.

FIGURE 3


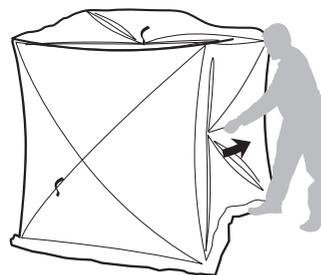



FIGURE 4



FIGURE 5

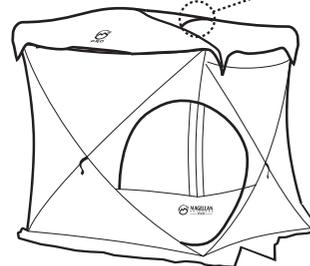

OPEN ROOF

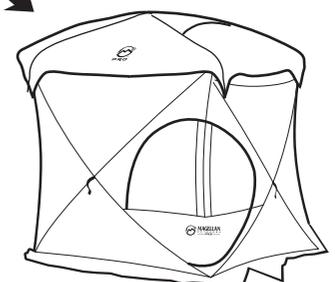

Assembly Instructions

Step 3:

- Hook the S-hook at the bottom of the rainfly to the D-ring at the bottom of the tent body. (Fig.7)
- Your tent should be standing up completely. You can now easily move your tent to its final position before securing with stakes and guylines.

To Secure Tent:

Stake Tent

- Locate WEBBING LOOPS sewn into the corners at the base of your tent.
- Slide STAKE through WEBBING LOOP at each location; then gently extend out before securing. (Fig.8)


NOTE: Floor of tent should be taut when staked properly.

Secure Guylines


- Locate GUYLINES attached to the tent and unroll.
- Slide STAKE through loop at each location, extend out and drive in to secure. (Fig.9)

NOTE: Four corners and six sides GUYLINES should extend out at a 45° angle from tent.


- Tighten GUYLINES as needed by adjusting the SLIDER up the cord.

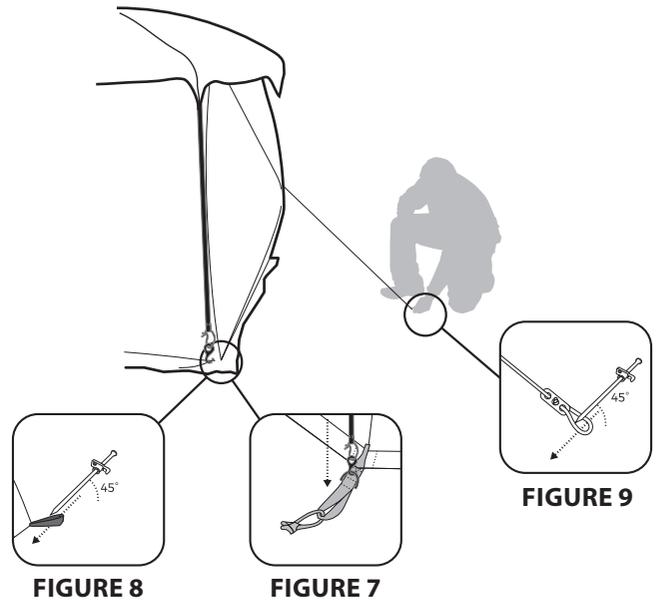


Lighting Component For Tent

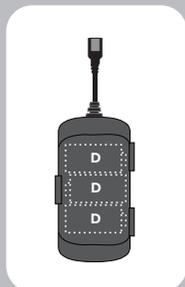

Load 3D batteries to empty battery pack. (Batteries not included)

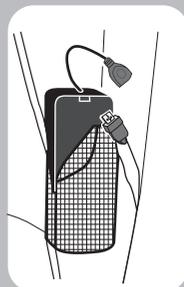

Slide battery pack into mesh pocket located at the inside of tent.

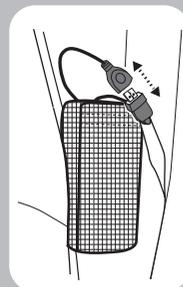


Then plug in battery pack cord into lighting connector.




Press buttons on switch box located at the inside of tent to turn on/off lighting. (low/Medium/high)


Lighting Component For Gear Loft

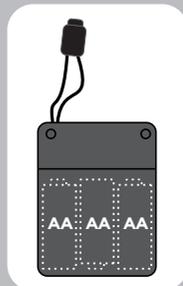

Load 3AA batteries to empty battery pack. (Batteries not included)

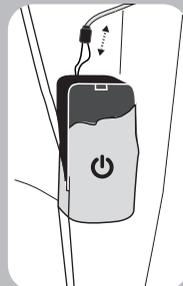

Slide battery pack into pocket located at the inside of tent.

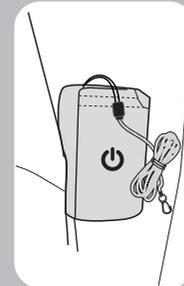

Velcro up pouch, then plug in battery pack cord into lighting connector. Press buttons on switch box located at the inside of tent to turn on/off the lighting.

! NOTE: When taking down tent, ensure to unplug USB.

Tent take down:

- Remove gear loft and fold it for storage.
- Remove all stakes from tent and guylines, store in stake bag.
- Detach the rainfly and set aside after folding it.
- Hold the webbed ring sewn to the steel ring in the center of one of the roof and pull down until the roof is collapsed.
- Hold the webbed ring sewn to the steel ring of the tent at the center of the wall and push in until the wall is collapsed.
- Lay the tent flat, check and fold all the poles.
- Roll up the folded tent along with folded rainfly.
- Pack the rolled tent, folded rainfly and stake bag to carry bag.

TAKE-DOWN TIP*

- After collapsing the tent and gathering hub style frame together, spread excess tent material away from frame and place it on its side. Start at the frame and roll it with pressure until it has reduced in size. Fold the rainfly and wrap the folded rainfly around the rolled tent. This will keep the tent tight and make it easier to place back into the carry bag.

Care and Maintenance

- Your product must be stored dry. One of the easiest ways to damage your product is by storing it while it is wet. Storing a wet tent as short a 24 hours in warm weather is likely to cause mildew on the fabric coatings.
- If you must close camp in the rain, open your product and set it up to allow it to dry as soon as possible. Allow dirt to dry on the fabric after a rainfall before lightly sweeping it off with a brush. For tougher stains, spray the area with water and lightly wipe it off with a few strokes. Do not use washer or dryer. **DO NOT SCRUB THE FABRIC. ALWAYS MAKE SURE TENT IS COMPLETELY DRY BEFORE REPACKING.**
- This tent is made from synthetic fabric that has been treated and is highly resistant to the sun's Ultraviolet (UV) light. However, no fabric can withstand prolonged exposure to sunlight. Do not leave your tent set up for weeks at a time. Exposure to ultraviolet rays from the sun can damage and/or discolor the material.
- The tent is water repellent. It is not waterproof. During heavy or continuous rain, some leakage may occur. Avoid contact between objects and the inside wall or roof of the tent, as this may result in leak-age at points of contact. In the event of seam leakage, apply a seam sealer compound.
- Do not spray or apply insecticide or pesticide on your product. It may damage UV resistant or water repellent properties of this product.
- Clean the poles with a cloth and lubricate them with a silicone spray to help prevent corrosion and keep from being gritty. This is especially important after using the product around salt water.
- Store the stakes in a separate storage bag. Do not pack the stakes inside the tent.

Warranty Information

This product has been manufactured under the highest standards of quality and workmanship. We warrant to the original consumer purchaser that all aspects of this product will be free of defects in material and workmanship for one year from the date of purchase. A replacement for any defective part will be supplied free of charge for installation by the consumer. Defects or damage caused by the use of other than genuine parts are not covered by this warranty. This warranty shall be effective from the date of purchase as shown in the purchaser receipt.

This warranty is valid for the original consumer purchaser only and excludes industrial, commercial or business use of the product, product damage due to shipment or failure which results from alteration, product abuse, or product misuse, whether performed by a contractor, service company, or consumer. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement nor for incidental or consequential damage.