



CG – 04/01/20

 
CT QA– 04/10/20

PS NB 4/10/2020

Assembly Instructions & User's Manual

29" Dwight Deep Bowl

Style Number: 162726

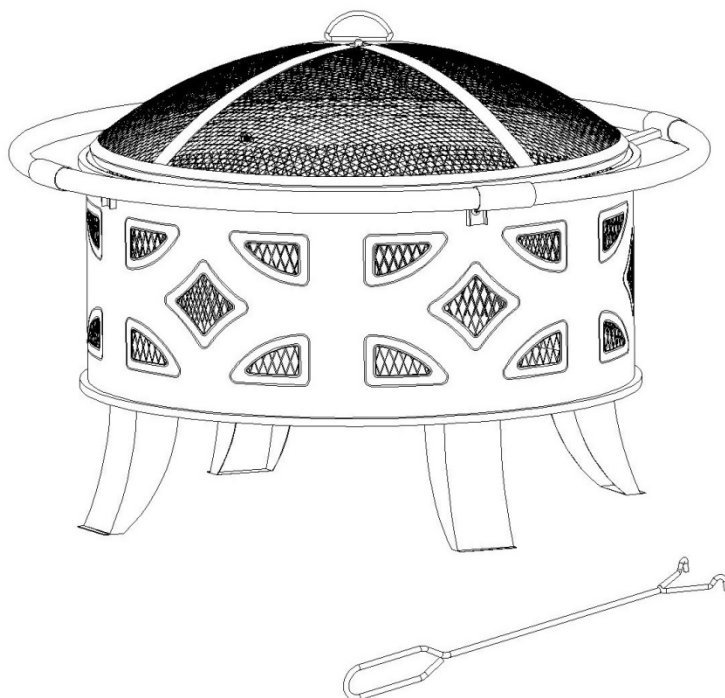

Please keep this instruction manual for future reference

Customer Service: (888) 922-2336

7:00 am to 12:00 am CST (daily)

Live Chat at: www.academy.com

Email: customerservice@academy.com

(Made in China)

Table of Contents

Warnings.....	2-3
Tools and Parts.....	4
Product Use or Instructions (see below comment)	
Assembly Instructions.....	6-8
Care and Maintenance.....	9
Warranty Information.....	10

Note: Before beginning assembly of product, make sure all parts are present. Compare parts with package content list and hardware contents. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.

Warnings



For Outdoor Use Only. Wear gloves during assembly.



- 1. Improper installation, adjustment, alteration or maintenance may result in property damage or injury.**
- 2. Read the installation, operation and maintenance instructions thoroughly before installing or servicing this equipment.**
- 3. Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury or death.**



WARNING: FOR YOUR SAFETY

- 1. Do NOT use this fire pit without reading this entire document and all warnings, cautions and instructions.**
- 2. This item is for outdoor use only, and shall NOT be used in a building, garage or any other enclosed area.**
- 3. Do NOT use this fire pit for indoor heating. TOXIC carbon monoxide fumes can accumulate and cause asphyxiation or death.**
- 4. This fire pit is NOT for commercial use.**
- 5. This fire pit is NOT to be operated by children.**
- 6. This fire pit is NOT to be used in or on boats or recreational vehicles.**
- 7. Always use in accordance with all applicable local, state and national codes. Contact your local fire department for details on outdoor burning.**
- 8. When using this fire pit, exercise the same precautions you would with any open fire.**
- 9. The use of alcohol, prescription or non-prescription drugs may impair the consumer's ability to properly assemble or safely operate this fire pit.**
- 10. This fire pit is for use with dry, seasonal hardwood. It will burn hotter, more completely and create less smoke.**
- 11. Do NOT burn charcoal briquette, lump charcoal, manufactured logs, driftwood, trash, leaves, papers, cardboard, plywood, painted, stained or pressure treated wood. Avoid using softwoods such as pine or cedar that can throw sparks.**
- 12. Do NOT alter this fire pit in any manner.**
- 13. Do NOT use this fire pit until it is COMPLETELY assembled and all parts are securely fastened and tightened.**




 


Warnings

14. Do NOT store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.
15. Do NOT store or use an LP gas cylinder within 10 feet (3.05m) of this fire pit while it is in operation.
16. Do NOT use this fire pit near automobiles, trucks, vans or recreational vehicles.
17. Do NOT use in an explosive atmosphere. Keep outdoor area clean and free from combustible materials, gasoline and other flammable liquids.
18. Do NOT use this fire pit under an overhead or near any unprotected combustible constructions. Avoid using near or under overhanging trees and shrubs.
19. Always use this fire pit on a hard level non-combustible surface such as concrete, rock or stone. An asphalt or blacktop surface may not be acceptable for this purpose. Do NOT use on wooden decks.
20. Always empty this fire pit before each use.
21. Do NOT wear flammable or loose clothing when operating this fire pit.
22. Do NOT use in windy conditions.
23. Do NOT use this fire pit unless spark guard is securely in place.
24. Do NOT use gasoline, kerosene, diesel fuel, light fluid or relight fires.
25. Keep all electrical cords away from a hot fire pit.
26. All surfaces of this fire pit are hot when in operation. To avoid burns, do NOT touch fire pit until it has completely cooled unless you are wearing protective gear (Potholders, gloves, BBQ mittens, hot pads & etc.) Never touch ashes or coals to see if they are hot.
27. Do NOT leave a lit fire pit unattended, especially around children and pets.
28. Do NOT attempt to move or store this fire pit until ashes and coals are completely extinguished.
29. Do NOT remove ashes or coals until they are completely extinguished.
30. Use heat-resistant gloves or hot pads when contacting handles.
31. Use long sturdy fire pit tools when adding or moving logs.
32. Do NOT place wood directly into bottom of the fire pit. Place wood only on the fire bowl.
33. Do NOT overload the fire pit. Do not add additional firewood until the fire burns down. NOTICE: If any portion of the bowl lid or spark guard of this fire pit are glowing red. It is overloaded.
34. Do NOT lean over this fire pit when lighting or when in use.
35. Do NOT place a hot spark guard or hot fire pit tools onto combustible surface such as grass, wooden deck or furniture.
36. Avoid breathing smoke from the fire and avoid getting it into your eyes.
37. This fire pit should be thoroughly inspected and cleaned on a regular basis.
38. After a period of storage and/or non-use, check for signs of damage and creosote build-up. Do NOT operate until necessary repairs and / or clean up are executed.
39. Death, serious injury or damage to property may occur if the above is not followed exactly.




Tools Required

1	M6 Wrench (not included)	
2	Phillips Screwdriver (not included)	

Parts List

A	Bowl		Qty: 1pc
B	Leg		Qty:4pcs
C	Outer ring		Qty:4pcs
D	Mesh wire cover		Qty:1pc
E	Lift Handle		Qty:1pc
F	Poker		Qty:1pc

   Hardware

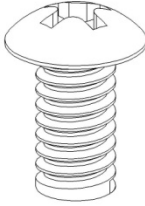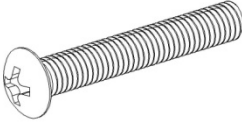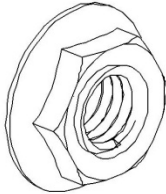
S1	M6x 12MM Bolts		Qty: 12pcs
S2	M6x 40MM Bolts		Qty: 4pcs
S3	M6 Nut		Qty: 5pcs

Assembly Instructions

Step 1:

Attach Legs (B) to Bowl (A) using eight

 M6 x 12mm Bolts (S1). Tighten all bolts with Phillips Screwdriver.

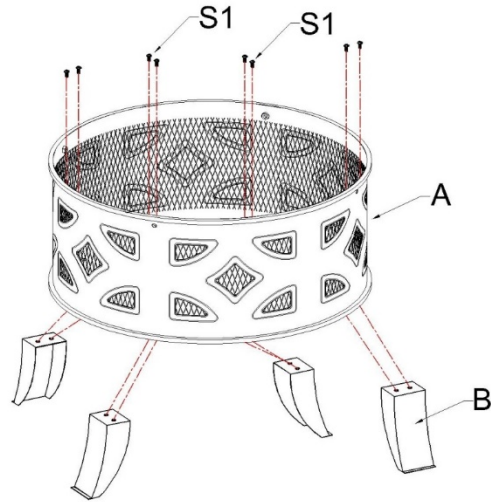

Step 2:

Attach the 4 pcs outer ring (C) onto the bowl outside using four M6 x 40mm Bolts (S2) and four M6 Nuts (S3). Loosely tighten all bolts with Phillips Screwdriver and M6 wrench.

 
NOTE: after tightening M6 X 40 mm the bolt head will still extend by 2/3 inch into the bowl as a support for the protective mesh guard in step #4.

Lastly attach four M6 x 12mm Bolts (S1) into connector hole to fix 4pcs outer ring pipe.

Go back and tighten all bolts.

😊 Helpful Hint: Ring may be uneven until you fully tighten.

CT: Typo

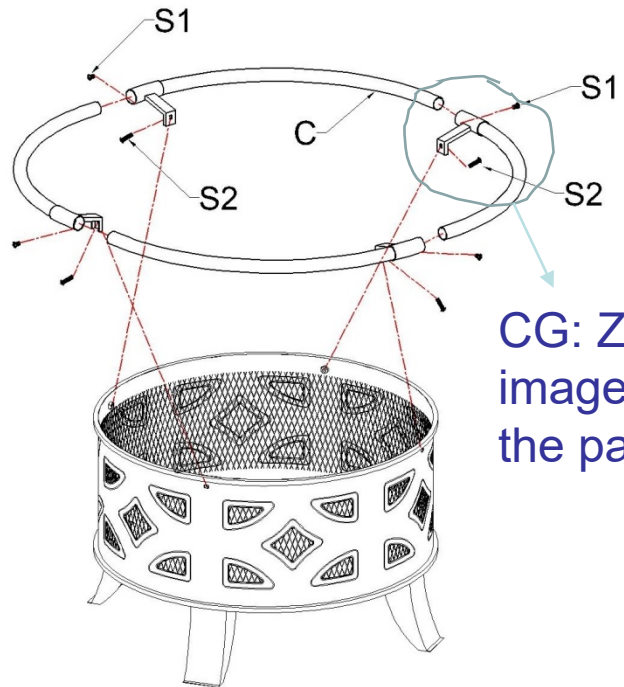


CG: S
be S3

CG: Zoom in
image. It's
the parts

Assembly Instructions


Step 3:

 Insert Lift Handle (E) into hole in Mesh Wire Cover (D) and hand tighten it with M6 Nut (S3) on the underside to secure.

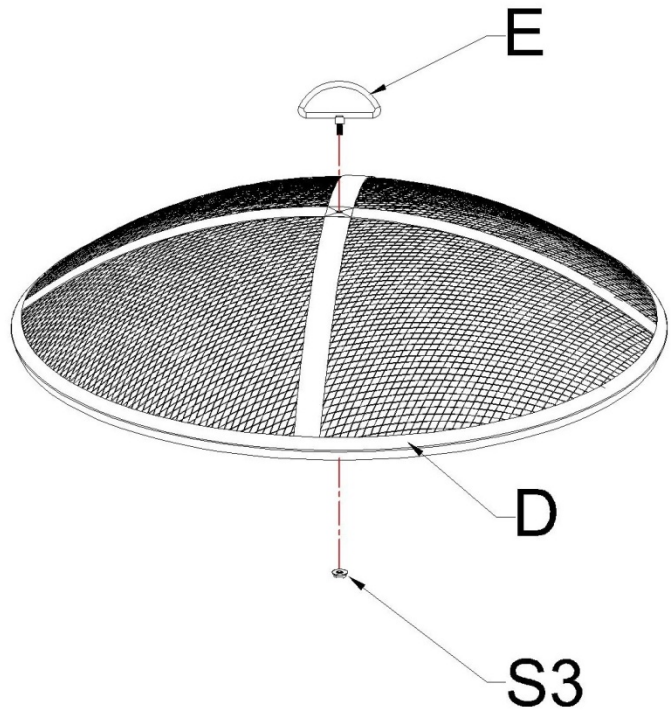

Step 4:

 
Put Mesh Wire Cover (D) on the fire bowl.

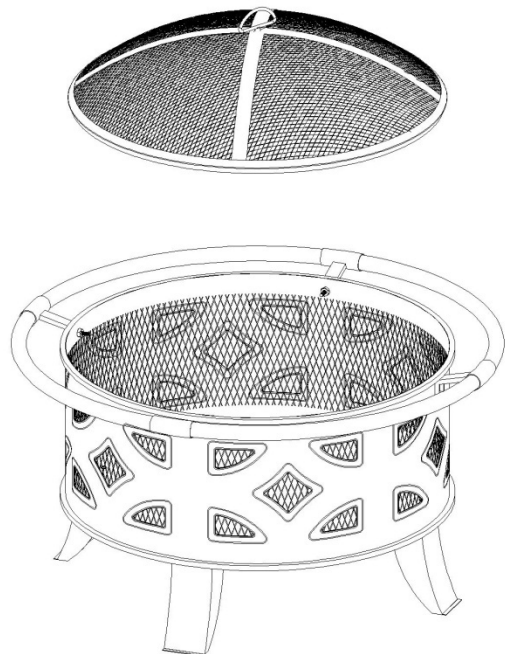

Assembly Instructions

Step 5:

 Place poker (F) beside fire pit for use as needed, now you're ready to start up your first fire in your new fire pit!

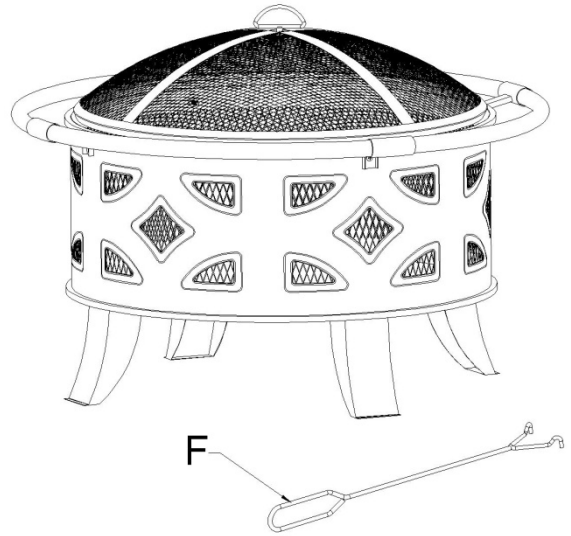

Care and Maintenance

Lighting

1. Make sure there is only a small amount of ash in the bottom of the bowl.
2. Place a layer of dry kindling or a natural fire-starter onto the center of the fire bowl.
3. Place above that a layer of dry seasoned hardwood that is put to lengths no more than 3/4 the area of the bowl.
4. Use a match to light kindling or fire-starter.
5. Using the hook that is provided and heat resistant gloves, close front mesh once the kindling or fire-starter is lit.

Tending the Fire

You may need to shift and/or add logs for an ideal experience.

Do NOT place hot fire pit tools onto combustible surfaces such as grass, wooden deck or furniture.

1. Using the hook that is provided and heat resistant gloves, carefully open front mesh.
2. While using a long handled fire pit tool, shift coals and logs to allow additional airflow.
3. Do NOT add gasoline, kerosene, diesel fuel, lighter fluid or alcohol to relight or enhance an existing fire.
4. Wait until glowing coals have developed before adding any additional wood. If addition wood is required, place wood on top coals, be careful not to shift ashes.

Please place under separate header – this info is about use not care and maintenance.

Extinguishing

1. Allow fire to burn itself out.
2. Do NOT use water to extinguish as this is dangerous and can cause damage to this outdoor fire pit.

Inspecting

This fire pit should be inspected on a regular basis to ensure product safety and longer product life.

Do NOT attempt to inspect this fire pit until the fire is COMPLETELY out.

1. Check handles to make sure they are secure.
2. Check components for any signs of damage or rust.
3. If damage to any component is detected, do NOT operate until repairs are executed.

Cleaning

This fire pit should be cleaned on a regular basis to promote safer experiences and longer product life.

Note: After repeated use, a slight discoloration of the finish may occur.

Do NOT attempt to clean this fire pit until the fire is COMPLETELY out and cool to the touch.

Do NOT use oven cleaner or abrasive cleaners as they will damage this product.

Do NOT clean any part of this fire pit in a self cleaning oven as it may damage the finish.

1. Wipe exterior surfaces with a mild dishwashing detergent or baking soda.
2. For stubborn surfaces use a citrus based degreaser and a nylon scrubbing brush.
3. Rinse clean with water.
4. Remove built-up creosote from components with a chimney cleaning product.

Storage

Do NOT move or store this fire pit until the fire is COMPLETELY out and cool to the touch.

1. Once the fire is out, coals are cold and fire pit is cool to the touch, remove ashes and properly dispose.
2. Store the fire pit in a dry location to maximize product life.
3. Store assembled in a location away from children and pets.

Warranty Information

This product has been manufactured under the highest standards of quality and workmanship. We warrant to the original consumer purchaser that all aspects of this product will be free of defects in material and workmanship for one year from the date of purchase. A replacement for any defective part will be supplied free of charge for installation by the consumer. Defects or damage caused by the use of other than genuine parts are not covered by this warranty. This warranty shall be effective from the date of purchase as shown in the purchaser receipt.

This warranty is valid for the original consumer purchaser only and excludes industrial, commercial or business use of the product, product damage due to shipment or failure which results from alteration, product abuse, or product misuse, whether performed by a contractor , service company , or consumer. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement nor for incidental or consequential damage.