

Safety Information

READ AND FOLLOW ALL SAFETY INFORMATION AND INSTRUCTIONS.

KEEP FOR FUTURE REFERENCE.

FAILURE TO FOLLOW THESE WARNINGS AND INSTRUCTIONS CAN RESULT IN SERIOUS INJURY OR DEATH TO USERS, ESPECIALLY CHILDREN.

Safety Section -

Drowning Risk -

Prevent Young Children From Drowning:

Keep unsupervised children from accessing the pool by installing fencing or other approved barriers around all sides of pool. State or local laws or codes may require fencing or other approved barriers. Check state or local laws and codes before setting up the pool.

Drowning occurs silently and quickly and can occur in as little as 2 in (5 cm) of water. Assign an adult to supervise pool and wear a Water Watcher Tag.

Keep children in your direct sight, stay close, and actively supervise them when they are in or near this pool and when you are filling and emptying this pool.

When searching for a missing child, check the pool first, even if you think your child is thought to be in the house.

Pool presents a drowning hazard even during filling and draining of the pool. Maintain constant supervision of children and do not remove any safety barriers until the pool is completely empty and stowed away.

Prevent Young Children From Gaining Access to Pool:

Remove pool ladders before leaving the pool. Toddlers can climb the ladder and get into the pool.

Do not leave toys inside the pool after use, since toys and similar items might attract a child to the pool.

Position furniture (for example, tables, chairs) away from the pool and so that children cannot climb on it to gain access to the pool.

Be Prepared to Respond to an Emergency.

After using pool, remove water to a level of 1/2 in (1 cm) or less.

Diving Risk:

Do not dive into this pool. Diving into shallow water can result in a broken neck, paralysis, or death.

First Aid:

Keep a working phone and a list of emergency numbers near the pool.

Become certified in cardiopulmonary resuscitation (CPR). In the event of an emergency, immediate use of CPR can make a lifesaving difference.

Barrier recommendations listed as described in CPSC Pub. No. 362. at www.poolssafely.gov

Portable pools shall be set up so that they comply with local safety and building codes.

Electrocution Risk:

Keep all electrical lines, radios, speakers and other electrical appliances away from the pool.

Do not place pool near or under overhead electrical lines.

WARNING

Prevent Drowning




Children under 5 are at highest risk for drowning.
Closely watch children who are in or near this pool.
Empty pool or prevent access when not in use.




AQUA DRENCH 3-IN-1 SPLASH PARK™


1. Inflatable Pool x 1

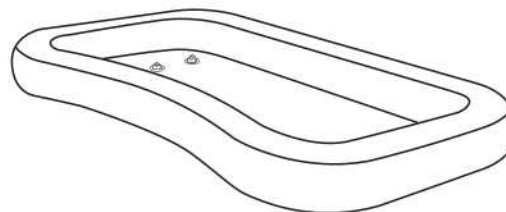


2. Inflatable Slide x 1

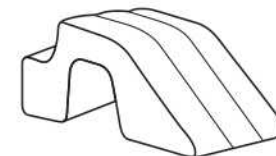

3. Water Slide With Attached Sprinkler x 1

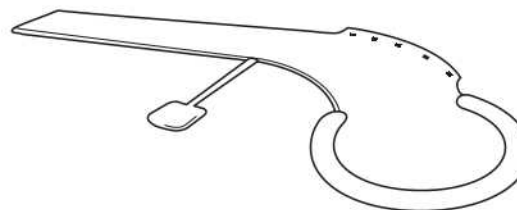

4. Repair Patch x 1

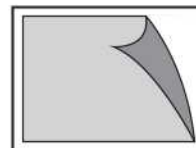

5. Ground Stakes x 2



6. Water Watcher Tag x 1
(For the designated adult guardian.)



IMPORTANT SAFETY INSTRUCTIONS.

PLEASE READ THESE INSTRUCTIONS THOROUGHLY BEFORE SETUP AND USE.

KEEP THESE INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE.

FOR AGES 3-12

ADULT SET UP IS REQUIRED.

DO NOT STAND, KNEEL, WALK, OR RUN ON THE SLIDE SURFACE.

Safety Information

WARNING!

To avoid the risk of serious injury or death:

- Adult supervision required.
- Adult assembly required.
- This product is intended to be used as a toy and not as a personal flotation device.
- Do not hang on, stand on or tackle this product.
- Do not use a high-pressure air pump to inflate.
- Do not use electric air pump if water or moisture is present. This may result in electric shock.
- Do not use in water.
- Use only on level ground.
- Never slide while facing direct sunlight.
- To avoid possible injury, the splash pool area must be clear of players before sliding.
- Setup should be done a safe distance away from fences, garages, houses, overhanging branches, laundry lines or overhanging electrical wires.
- Use on a flat, level lawn only. Do not use on pavement or other hard surfaces. Lawn should be free of rocks, bumps, depressions, sticks, or other sharp objects.
- Do not install the product on a slope or inclined surfaces, on soft or loose soil conditions (such as sand and mud), or on an elevated surface such as a deck, platform or balcony, which may collapse under the weight of the filled pool.
- Read all instructions before using this product.
- All safety warnings and instructions should be followed when the product is in use.
- Because of their larger size, older children and adults risk spine, neck, head or other life-threatening injuries from using this slide.
- Reckless use, misuse or abuse of this slide may cause serious, even fatal injury.
- Correctly follow all instructions and safety requirements shown in this manual; otherwise injury or death, especially for children, could result.
- All inflatables are temperature sensitive, therefore never unfold or inflate in temperature below 50°F (10°C).
- NOT FOR ADULT USE. NOT FOR CHILDREN OVER 12 OR UNDER 3 YEARS OF AGE. THIS PRODUCT IS NOT FOR USE BY ANYONE OVER 5 ft (152 cm) TALL OR WEIGHING OVER 110 lb (50 kg).

While every attempt is made to embody the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury resulting from use. All merchandise is sold on this condition, which no representative of the company can waive or change.

IMPORTANT WATER PRESSURE AND OPERATING INFORMATION

After connecting the hose connector to your garden hose, TURN ON WATER SLOWLY and adjust the water pressure accordingly.

Water pressure can vary dramatically between cities. Please read the following for answers to common questions.

Areas of LOW WATER PRESSURE

- For maximum performance, it is recommended to use a 5/8 in (1.6 cm) diameter garden hose.
- If water does not arch on the product / spray properly, it is usually due to low water pressure. Make sure the water is on all the way. As long as the product is getting wet, it will be fun to use.
- Long hose reduces water pressure: The longer the hose, the farther the water travels from the faucet, thus reducing water pressure. In areas of low water pressure, this could affect the performance of the product. Try using a shorter hose if you have one.

Areas of HIGH WATER PRESSURE

- If water arches / sprays over the product, adjust the faucet to lower the water pressure. It is important that the water lands on the product to keep it wet and slick.

MAINTENANCE OF PRODUCT

1. Check the product at regular intervals for holes, tears or other damage. DO NOT use a damaged product. Use of a damaged product could result in serious injury or death.
2. In addition to checking the product at regular intervals, be sure to complete a thorough check of the entire product at the beginning of each season or series of use.
3. If any components of the product is damaged or have deteriorated, discontinue use and contact the manufacturer.
4. Dry and clean this product before storage.
5. Regularly check the condition of water plugs and water bags that hold the product in place. Damage to or deterioration of the water bags could result in the product becoming unstable, which could result in serious injury.
6. Regularly check the condition of the ground stakes that hold the slide in place. Damage to or deterioration of the stakes could result in the slide becoming unstable, which could result in serious injury.

WATER WATCHER TAG INSTRUCTIONS

Assign an adult to be responsible for watching children in the pool. Give this person a Water Watcher Tag to wear the entire time he is in charge of supervising children in the pool.

If the person needs to leave for any reason, ask this person to pass the Water Watcher Tag and the supervision responsibility to another adult.

Please visit the customer service website www.toysinquiry.com for a Water Watcher Tag replacement.

REPAIR PATCH INSTRUCTIONS

For your convenience, a repair patch has been included to repair holes in the inflatable section.


Do not use the patch for holes or rips on the seam.

In the event of an accidental puncture, cut out a suitably sized patch, making sure you round the corners of your repair patch to avoid peeling. Make sure the area to be patched is clean and dry. Press patch firmly over the puncture. Do not inflate for 20 minutes.

The repair patch should be applied by an adult.

Setup Instructions


1.

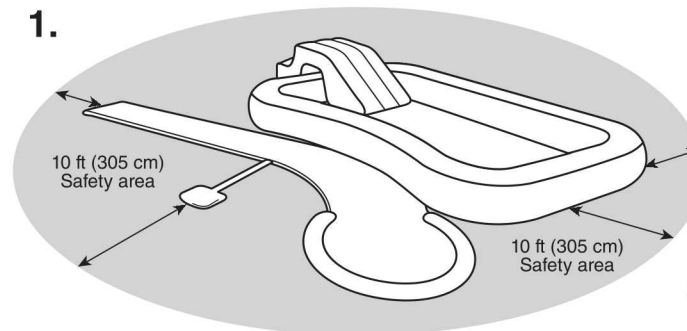

2.



3.

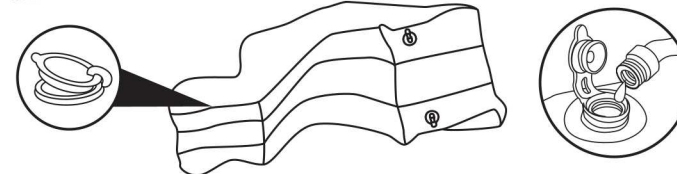

1. **PLACEMENT DIAGRAM:** Use on a flat, level lawn only, not on pavement or other hard surfaces. Lawn should be free of rocks, bumps, depressions, sticks, etc. This product should be setup in a location that has a minimum distance of 10 ft (305 cm) away from any freestanding structures or obstructions, including houses, garages, fences, trees, playground equipment and large rocks.
2. Roll out this product. Inspect for holes, tears or other damage.
3. Open the water plug on the inflatable slide. Use a garden hose to slowly fill with water to the Water Fill Line.

WARNING: Overfilling the inflatable slide with the water will cause damage to the product.

WARNING: Before filling the inflatable slide with air, it must be securely fastened to the pool floor with "L-shaped" connectors.

BANZAI IS USED UNDER LICENSE BY FOCUS BRAND LTD.
CONTENTS AND SPECIFICATIONS MAY VARY FROM THOSE ILLUSTRATED.

Banzai®

05503
TANG RONG ROAD,
CHANGPING, DONGGUAN, CHINA
ALL RIGHTS RESERVED
MADE IN CHINA
www.toysinquiry.com
PHONE: 852-23707229



 
BEFORE RETURNING TO STORE

PLEASE VISIT
THE CUSTOMER SERVICE WEBSITE
BELOW FOR IMMEDIATE ASSISTANCE
REGARDING QUESTIONS OR
PROBLEMS WITH THIS PRODUCT.


www.toysinquiry.com

Setup Instructions

4.

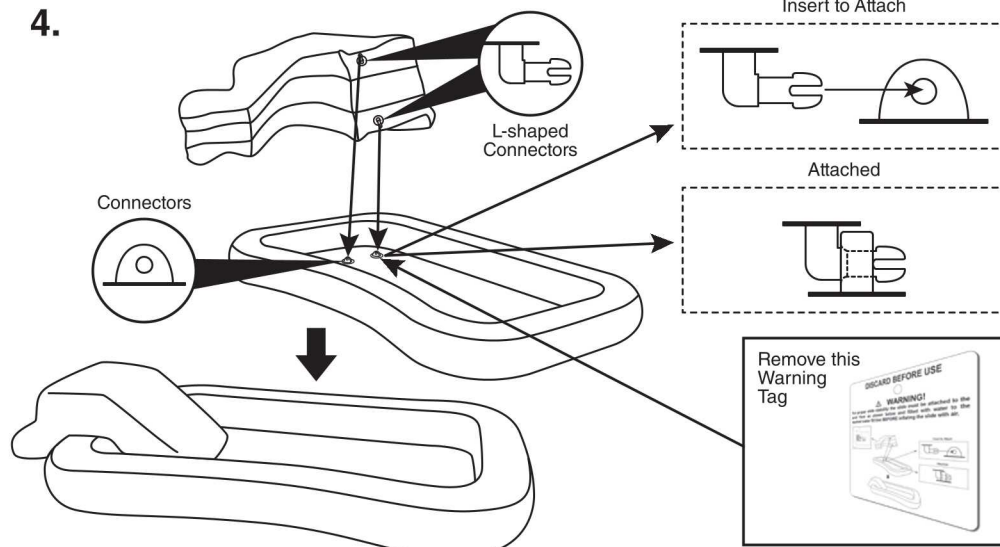

5.

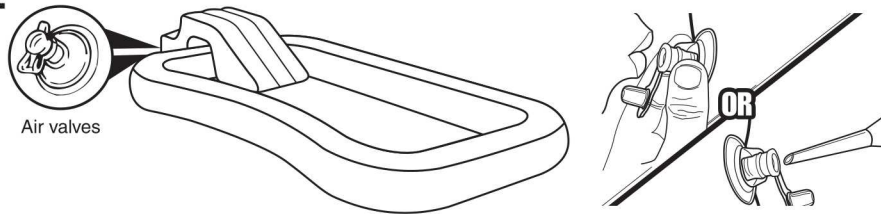

4. Read and discard the Warning Tag on the pool floor before set up. Insert the 2 "L-shaped" connectors on the bottom of the slide to the 2 connectors on the pool floor before filling the inflatable slide with air. While inflating periodically check that the connectors remain fastened.

WARNING: BEFORE INFLATING THE SLIDE, IT MUST BE SECURELY FASTENED TO THE POOL FLOOR AS SHOWN HERE.

5. Unplug the air valves to inflate this product with AIR.

NOTE: For easy air inflation, use a manual air pump designed specifically for plastic inflatables.

BY MOUTH: Squeeze the base of the valve, causing the inner flap to open before inflating.

BY PUMP: Insert air pump nozzle into the valve. The air pump nozzle should be inserted deep enough to open the inner valve flap before inflating.

Do not over inflate the item. Once the item is completely inflated, insert the air valve plug to seal it shut.

NOTE: Fill the product with air until it is firm and solid. If there is any straining at the seams, the item is over inflated. If any seam begins to strain, immediately stop inflation and release air to reduce the pressure until all signs of stress on the inflatable are gone. DO NOT use the product if there is straining at the seams. The use of an over-inflated item may result in serious injury, paralysis or death.


Inspect this product for rips, tears or punctures. Do not use if damaged. Do not fill the pool beyond the Water Fill Line marked inside the pool wall.

Use the slide only with the included pool and always with water. Never use the slide without properly securing it to the pool.


The slide must be fixed to the pool during play.

Setup Instructions


6.

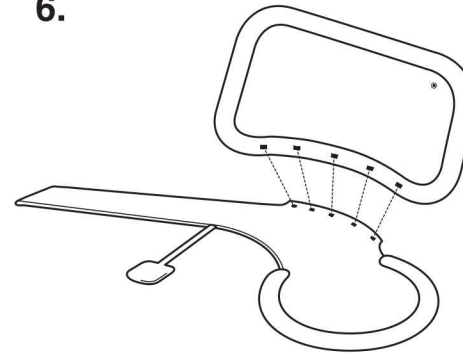


7.

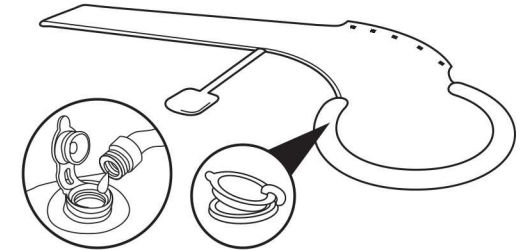

8.

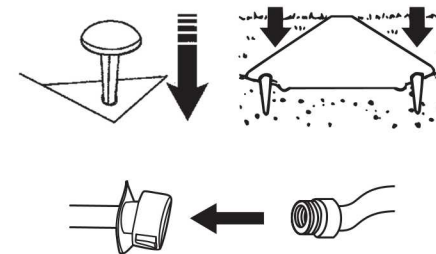

9.

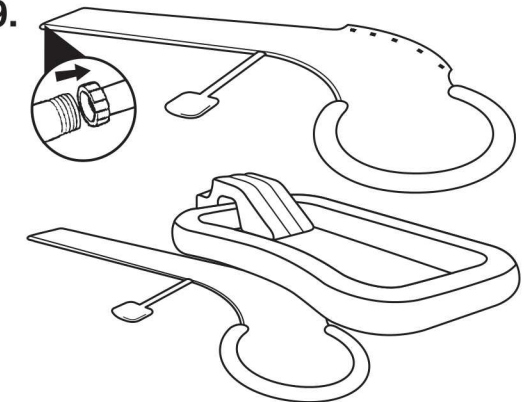

6. Attach the pool to the slide with Velcro at 5 locations.

7. Open the water plug located at the end of the curved water slide. Use a garden hose to slowly fill the anchor water bags.

NOTE: You must fill the water bags before inflating this product with air. The water plugs have a wide opening, as shown above.

WARNING: Overfilling the water bags will cause damage to product.

NOTE: When filling the anchor water bags, do not fully insert the garden hose into the water plug. The hose may cause an increase of pressure in the anchor water bags and may cause it to burst. Instead, place the garden hose just outside the plug opening and allow the water to pour in. When full, insert and close the plug.


8. Insert one plastic stake into the hole at each corner of the slide and push it firmly into the ground using both hands.

Guide the stake into ground with even pressure using both hands until it is level with the ground. Repeat at the opposite corner. Check stakes frequently to insure they remain level with the ground.

Use manufacturer supplied stakes only.

9. Before connecting the water slide to a water-source, use a standard garden hose to wet the entire slide surface and fill the pool. Make sure that the water plug on the pool floor is closed. Finally, attach the end of a garden hose to the hose connector on the slide. Turn the connector to tighten; tighten until it cannot turn any further. TURN ON WATER SLOWLY. Gradually increase the flow of water until a tunnel of water arches and lands on the slide, keeping the slide wet.

Use Instructions

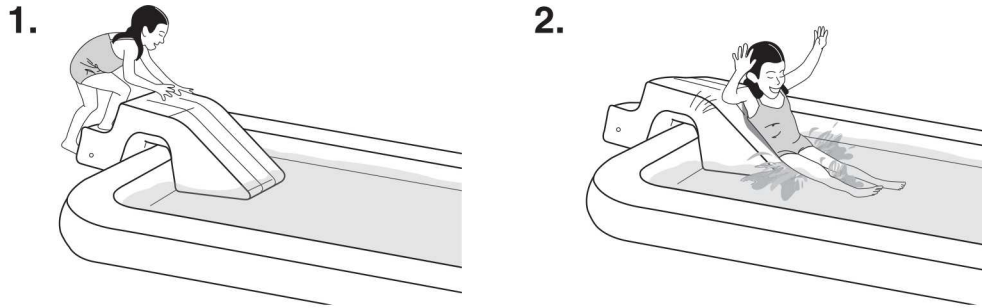


HOW TO PLAY

Get ready for some all-in-one backyard fun! With a curved water slide, sprinkling pod and an inflatable slide-in pool, the Aqua Drench 3-in-1 Splash Park™ is a complete water park in your own backyard. Launch yourself down the 15 ft curved water slide and bank off the edge of the inflatable pool before your giant splash landing. Then slide down the inflatable slide for a quick dip into the pool before playing under the refreshing showers of the built-in sprinkling pod.

NOTE:

1. Competent adult setup and supervision is required at all times. Responsible adults should instruct children on the proper use of this product.
2. Remove all hard or sharp objects such as toys, buckles, keys, jewelry, watches, etc., from person and pockets.
3. ALWAYS slide down the PVC water slide on stomach, facing forward with arms extended in front of you. NEVER slide on your knees, head or feet. NEVER dive head first.
4. Always slide down the inflatable slide with your feet first and never slide on your knees, stomach, head or feet.
5. Be sure the slide surface is wet before sliding down.
6. No diving.
7. Only one child should be on the sliding surface at a time.
8. For long periods of play, move slide occasionally to prevent causing depressions in ground underneath.
9. Check stakes occasionally to make sure they stay secure and flat on the ground.
10. Remove the product from the lawn when not in use and store properly to prevent the grass from yellowing or other damage.

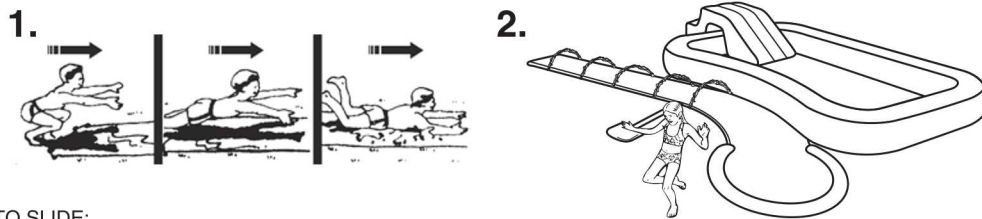


TO SLIDE:

1. Run & jump low to the ground from a crouching position. Land on your stomach, keeping your arms stretched out in front of you. **KEEP YOUR HEAD UP!**
2. When you are finished sliding, scoot off the slide and stand up on the grass. Walk back to the beginning of the slide and start again.

WARNING! Never stand, walk or run on the slide as you may slip and injure yourself.

After Use and Storage

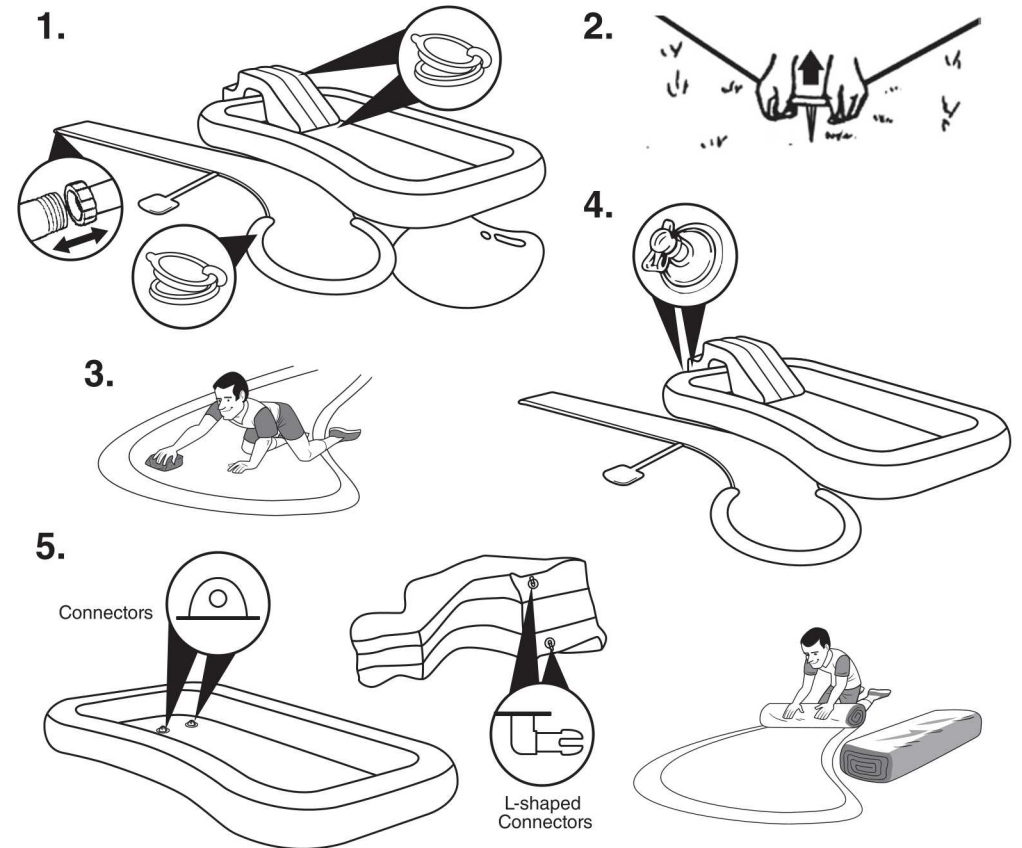

1. Disconnect the garden hose from the hose connector. Drain this product and let it dry.

Open the drain plugs and lift the pool sidewall from the base carefully. Let water out from the drain plug. Empty out all the water from pool.

2. Remove the stakes from the ground by pulling on the head of the stake. Do not pull on the product's corner.
3. **PUTTING AWAY YOUR PRODUCT:** Make sure the product and its accessories are free of dirt, leaves, sand, etc., before deflating. This will lengthen the life of this product.
4. Locate and open the valve covers. While pinching the valve, deflate the product. Once the product is completely dry and deflated, carefully roll it up and store in a secure location away from children. Do not store it indoors or in a closed container until it is completely dry.
5. Detach the L-shaped connectors under the inflatable pool slide from the connectors on the pool floor. Remove the slide from the pool.

The water slide should be rolled for storage to avoid creasing. Do not fold!

NOTE: Store this product in a secure place, away from children, to prevent suffocation.