



Instruction Manual

Camp Kitchen

FSMGCB4031



Please keep this instruction manual for future reference

Customer Service: (877) 579-1550

Monday thru Friday
8:30am to 5:30pm, EST

(Made in China)

Table of Contents


Warnings.....	2
Parts List.....	3
Care and Maintenance.....	4
Assembly Instructions.....	5-7


Note: Before beginning assembly of product, make sure all parts are present. Compare parts with package content list. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.

Warnings

IMPORTANT SAFETY AND TIP INFORMATION

TO MAXIMIZE THE ENJOYMENT OF YOUR PRODUCT PLEASE ASSEMBLE AND USE YOUR PRODUCT AS SAFELY AS POSSIBLE.

THE PURPOSE OF THE SAFETY ALERT SYMBOL  IS TO CALL YOUR ATTENTION TO POSSIBLE HAZARDS RELATING TO THE USE AND ASSEMBLY OF YOUR PRODUCT.

THE PURPOSE OF THE TIP SYMBOL  IS TO CALL YOUR ATTENTION TO SUGGESTIONS THAT WILL ASSIST YOU IN THE ASSEMBLY/DISASSEMBLY PROCESS AND ENHANCE YOUR CAMPING EXPERIENCE. WHEN YOU SEE THESE SYMBOLS, PLEASE CLOSELY FOLLOW THE INFORMATION PROVIDED.



WARNING

THIS CAMP KITCHEN IS DESIGNED TO BE USED OUTDOORS, AND REQUIRES ADULT ASSEMBLY.

READ INSTRUCTION MANUAL BEFORE INSTALLATION AND/OR USE.







INSPECT BEFORE USE, DO NOT USE IF PARTS ARE LOOSE OR DAMAGED.

KEEP PARTS AND PACKAGING MATERIALS AWAY FROM CHILDREN. THIS PRODUCT IS NOT A TOY. KEEP IT OUT OF REACH OF CHILDREN.

THIS CAMP KITCHEN SHOULD BE STORED DRY. MAKE SURE THE CAMPING KITCHEN IS COMPLETELY DRY BEFORE REPACKING.

THERE IS A PINCH HAZARD DURING ASSEMBLY AND DISASSEMBLY OF THE CAMP KITCHEN FRAME. PLEASE USE CAUTION AT ALL TIMES.

Parts List

A	Camp Kitchen Case		1
B	Main Frame		1
C	Folding Wire Shelf		1
D	Lantern Holder		2
E	Accessory Hanger		1
F	Stove Surface Bracket		3

IMPORTANT NOTES BEFORE YOU BEGIN:

- Inspect before use, do not use if parts are loose or damaged.
- Assemble your Camp Kitchen before camping to become familiar with the assembly.
- Setup is possible for one person, however two people are recommended.
- Select a clean, level area for the campsite free of debris and sharp objects, away from a natural watercourse.

CARE AND MAINTENANCE:

- Your product must be stored dry. One of the easiest ways to damage your product is storing it while it is wet. Storing a wet Camp Kitchen as briefly as 24 hours in warm weather could cause damage to the table surface.
- If you must close camp in the rain, allow it to dry as soon as possible. DO NOT SCRUB THE TABLE TOP. ALWAYS MAKE SURE CAMP KITCHEN IS COMPLETELY DRY BEFORE REPACKING.
- Do not leave your Camp Kitchen set up for weeks at a time. Exposure to ultraviolet rays from the sun can damage and /or discolor the Camp Kitchen.
- Clean the tubes with a cloth and lubricate them with a silicone spray to help prevent corrosion and keep from being gritty.
- Store all the components in the table top case and lock after use.
- Use care when packing all the components back in the case to prevent damage to the Camp kitchen

Assembly Instructions

Step 1:

- Verify package contents and confirm all parts are included and undamaged.



Tip: Do this at home prior to your first use of the product.

- Select a smooth, level site to put the frame (B) upright on the ground.



Step 2:

- Take the main frame (B) out of the case (A)
- Expand the main frame (B) outward by pulling on opposite diagonal corners of the frame until it is fully extended (**Fig. 1**).



(Fig. 1)

Step 3:

- Rotate the support bars around from the leg to the top of the frame. Nest the end of the pole into the plastic mold located near the middle of the frame (**Fig. 2**).
- Fold out the diagonal support bars and hook the ends to the locking posts. Secure by tightening the black knobs (**Fig. 3**).



(Fig. 2)




(Fig. 3)

Assembly Instructions

Step 4:

- Install the folding wire shelf (C) and the stove surface brackets (F) onto the main frame (B) by inserting each piece into its corresponding hole on the frame (**Fig. 3**).

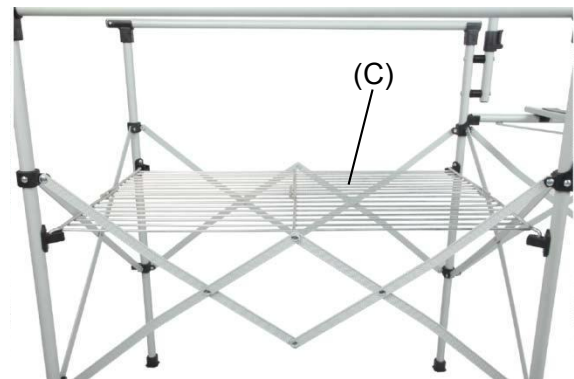


(Fig. 3)



Step 5:

- Fold out the camp kitchen case (A) and attach onto the main frame (B) (**Fig. 4**). This will serve as the table top.
- Connect the 2 lantern holder tubes (D) and lock them together (**Fig. 5**). Insert the whole tube assembly into its slot on to the main frame.
- Pull the lantern holder hook out from the tube and fold down (**Fig. 6**).

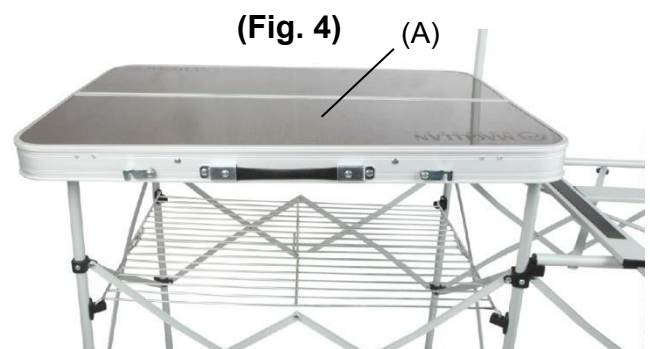

(Fig. 4)



(Fig. 5)




(Fig. 6)

Assembly Instructions

Step 6:

- Insert the wire accessory hanger (E) into the corresponding holes on the table top surface (A)
- The camping kitchen is now fully assembled (**Fig. 7**).

(Fig. 7)

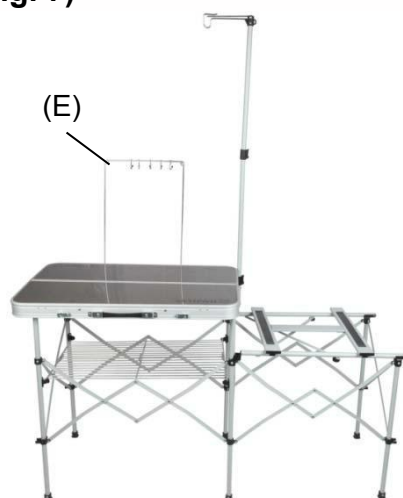

Step 7:

- To disassemble the Camp Kitchen, complete the assembly steps in reverse order.
- Put all the parts back in the case in their original configuration, close and lock.
- Store in a dry location

