




Assembly Instructions & User's Manual

FSMGCP2036

Double Mantle Propane Lantern

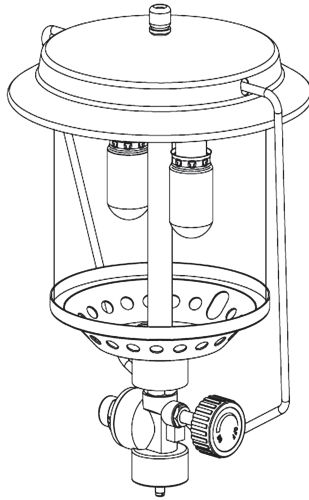

Please keep this instruction manual for future reference

Customer Service: (888) 922-2336

7:00 am to 12:00 am CST (daily)

Live Chat at: www.academy.com

Email: customerservice@academy.com

(Made in China)

142.5 mm

Table of Contents

Warnings.....	2
Tools and Parts.....	3
Assembly Instructions.....	5
Care and Maintenance.....	10
Warranty Information.....	11

Note: Before beginning assembly of product, make sure all parts are present. Compare parts with package content list and hardware contents. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.

Warnings



DANGER

THIS SYMBOL INDICATES AN IMMINENTLY HAZARDOUS SITUATION WHICH, IF NOT AVOIDED, WILL RESULT IN DEATH OR SERIOUS INJURY.



DANGER



CARBON MONOXIDE HAZARD

This appliance can produce carbon monoxide which has no odor. Using it in an enclosed space can kill you. Never use this appliance in an enclosed space such as a camper, tent, car or home.



Keep lantern area **clear** and free from combustible materials, gasoline and other flammable vapors and liquids.



See too that no obstruction of combustion or ventilation occur



When the lantern is in storage, the gas canister has to be disconnected

FOR YOUR SAFETY

If you smell gas

1. Do not attempt to light appliance.
2. Extinguish any open flame.
3. Disconnect from fuel supply.

FOR YOUR SAFETY

Do not store or use gasoline or other liquids with flammable vapours in the vicinity of this or any other appliance.

IMPORTANT: Read these instructions carefully and familiarize yourself with the product before fitting the appliance to the gas cylinder. Review the instructions periodically to maintain awareness. Retain these instructions for future reference.

FOR OUTDOOR USE ONLY!

ONLY USE IN WELL-VENTILATED AREAS. DO NOT USE LANTERN INSIDE A TENT OR ENCLOSED AREA OF ANY KIND.

- Do not modify this appliance.
- Always check that the seals between the appliance and the propane cylinder are in place and in good condition before attempting to connect the gas cylinder.
- Do not misuse the appliance, or use it for anything for which it has not been designed.
- Do not use the appliance if it has damaged or worn seals, missing parts, or damaged mantles.
- Do not use this appliance if it is leaking, damaged or does not operate properly.
- This appliance must only be serviced by an authorized person.
- If the appliance cannot be adjusted to properly function it should not be used until serviced or repaired.
- To check that the gas cylinder is filled, when shaken a sloshing sound will be heard.
- Do not attach/detach propane cylinders near a fire or flame of any kind.
- Do not use the lantern as a space heater.
- **Never leave lantern unattended while in use**
- The lantern has a handle for transport. Always use the handle to move the lantern. The lantern becomes very hot when in use. Use caution around a burning lantern.
- Always use the lantern in an upright position.
- Ensure that the appliance is operated at least 24 inches away from combustible materials.

Warnings


 


FOR OUTDOOR USE ONLY!

ONLY USE IN WELL-VENTILATED AREAS. DO NOT USE LANTERN INSIDE A TENT OR ENCLOSED AREA OF ANY KIND.







- Discontinue operation and close valve if:
 - Ambient temperature drops below -10° F
 - There is no fuel remaining in the propane cylinder
 - Combustion becomes unstable
 - Lighting cannot be performed quickly and easily
 - You experience repeated flame outs
- To check for gas leaks on the appliance, always go outdoors.
- **Do not** check for leaks with a flame. Use soapy water only, applied to the joints and connections of the appliance. Any leakage will show up as bubbles around the leakage area. If you are in doubt or you can hear or smell gas, do not attempt to light the appliance. Unscrew the cartridge and contact your local dealer.

CAUTION: Parts will be very hot after use. Keep children away while lighting and during operation. The lantern top and glass dome will be very hot during use. Always lift the lantern using the handle and ensure the gas is turned off before moving.

Parts List

A	Lantern Lid Nut		1pcs
B	Lantern Lid		1pcs
C	Burner Nut		1pcs
D	Carry handle		1pcs

    Parts List

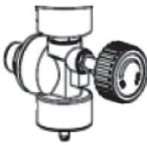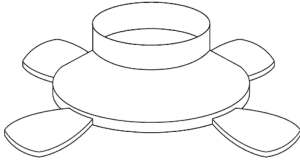E	Burner tube		1pcs
F	Glass globe		1pcs
G	Bottom Plate		1pcs
H	Regulator assembly		1pcs
I	Mantle		2 pcs
J	Base Support		1pcs


Tools Required

When lantern becomes necessary to replace mantles, no tools are necessary. Only hand tighten the top nut used to secure the lid over the glass dome.

Assembly Instructions

Step 1:


Remove lantern carefully from carton and remove the plastic protector cap from the bottom of the regulator assembly (H).

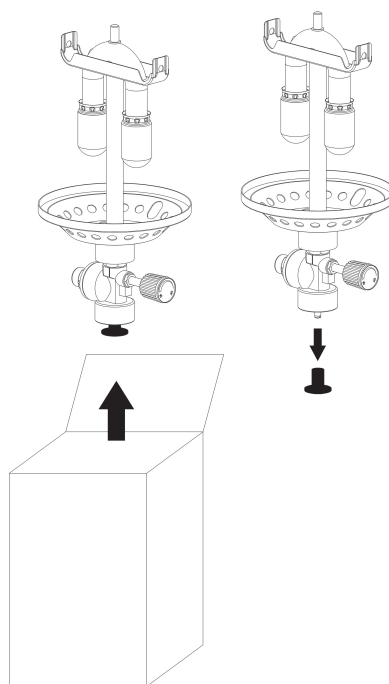

Assembly Instructions

Step 2:

1. Put the glass globe(F) into the lantern to reach the bottom plate(G), and then cover the lantern lid(B);
2. Lock the lantern lid(B) nut tightly by hand, noting that the holes on both sides of the lantern lid(B) should align with the holes in the burner tube(E);
3. Mount carry handle(D).

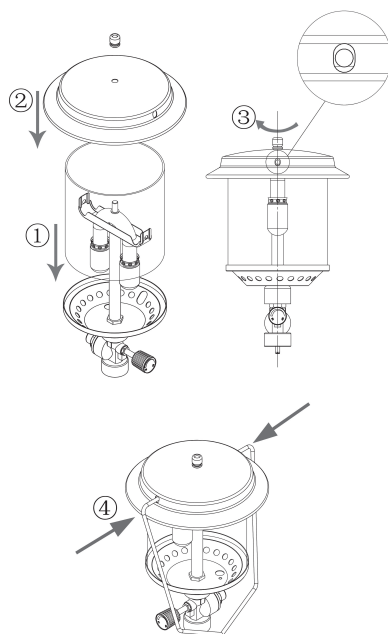


Step 3:

Make sure the knob on the regulator assembly (H) is in the OFF position

Then gently screw the lantern onto the top of a 16.4 oz. propane cylinder. Match the threads of the cylinder and the lantern carefully during installation to prevent damage to threads.

Hand tighten until the regulator assembly (H) is firmly sealed against the top of the propane cylinder.

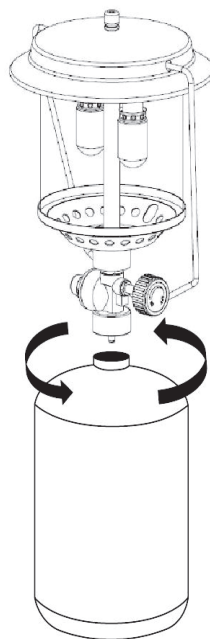

Assembly Instructions

Step 4:


If mantle (I) needs to be replaced, unscrew the lid nut (A) and remove the lid (B), handle (D), and glass globe (F)

Tie the mantle (I) securely to the end of the burner tube (E)

Check that the mantle (I) is fitted correctly in the groove of the burner tube (E).
Spread the mantle (I) evenly around the burner tube (E).

Once the mantle is attached, reassemble the lantern.

DO NOT operate a lantern if the mantle is damaged in any way

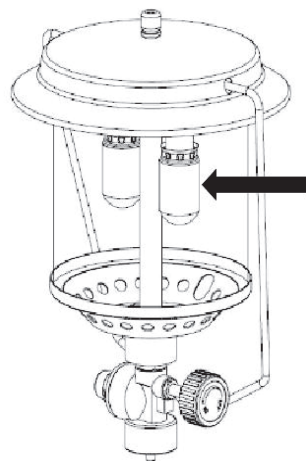


Step 5:

Check the connection between the propane cylinder and the regulator assembly for leaks

- If you smell gas, there is a leak.
- If the connection area is extremely cold, there is a leak.

If you suspect there is a leak, **DO NOT USE THE LANTERN**. Apply soapy water to the connection area. Leaking gas will produce bubbles.


DO NOT use flame to check for a leak

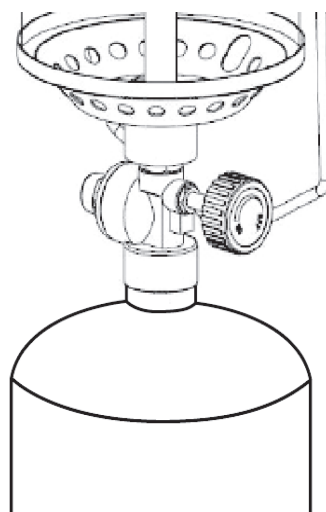

Assembly Instructions

Step 6:

Fold out the legs of the base support (H) and attach to the bottom of the propane cylinder. Make sure the lantern is stable and on a flat surface when lighting or burning

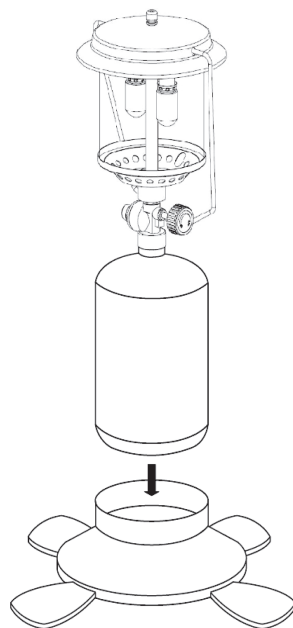


Step 7:

LIGHTING AND BURNING OFF MANTLE:

1. Turn the regulator knob approximately half a turn to start the flow of gas.
2. Keeping your head and body away from the lantern, carefully insert a flame source through the lighting hole in the bottom plate (G). If the mantle (I) fails to ignite, turn valve off. Wait for 5 minutes and try again.

TIP: Always keep extra mantles available for replacement. (Available at Academy. Style # FSMGCP3021)

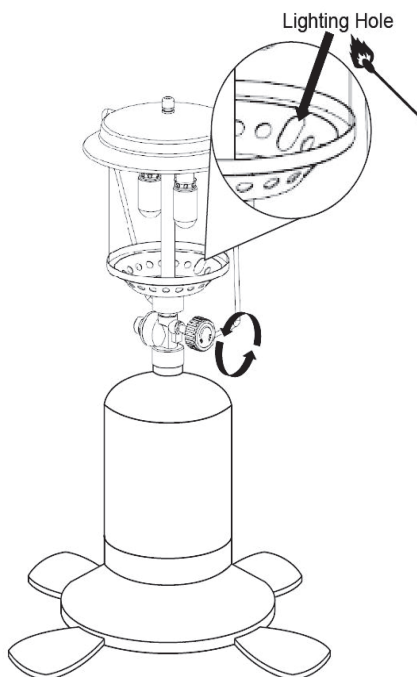


Assembly Instructions

Step 8:

3. Once the mantle (I) is lit, turn the regulator knob counter-clockwise to increase light intensity and clockwise to decrease intensity or extinguish. **DO NOT** open valve past the point where maximum intensity is reached as this may cause unnecessary flaring and waste of gas.

NOTE: When lit and after lighting, the mantle is very brittle and should not be touched. If it breaks, replace the mantle.

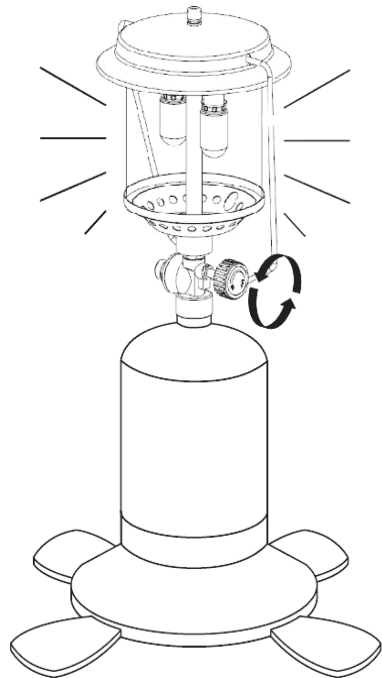

After use, ensure that the regulator knob is fully in the OFF position.

Once extinguished, allow the lantern 15 minutes to cool before touching it.

Care and Maintenance

REPLACING MANTLE

Carefully remove all traces of old mantle. Fit the new mantle by tying it firmly into the grooves of the burner cap and spread it evenly all around. The mantle can then be burned off as described previously.

ANNUAL MAINTENANCE

Clean the body of your appliance using a cotton cloth soaked in soapy hot water. Never use abrasive or flammable cleaning products. Use a soft brush to clean the burner.

Any cleaning agent used on the appliance should be non-combustible and non-corrosive.

STORAGE

When the appliance is not used it must be stored in a suitable area to protect it from any risk of deterioration. Keep it in a well ventilated area and out of reach of children. Make sure the Regulator knob is fully in the OFF position and the fuel canister has been disconnected before storing.

Warranty Information

This product has been manufactured under the highest standards of quality and workmanship. We warrant to the original consumer purchaser that all aspects of this product will be free of defects in material and workmanship for one year from the date of purchase. A replacement for any defective part will be supplied free of charge for installation by the consumer. Defects or damage caused by the use of other than genuine parts are not covered by this warranty. This warranty shall be effective from the date of purchase as shown in the purchaser receipt.

This warranty is valid for the original consumer purchaser only and excludes industrial, commercial or business use of the product, product damage due to shipment or failure which results from alteration, product abuse, or product misuse, whether performed by a contractor , service company , or consumer. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement nor for incidental or consequential damage.