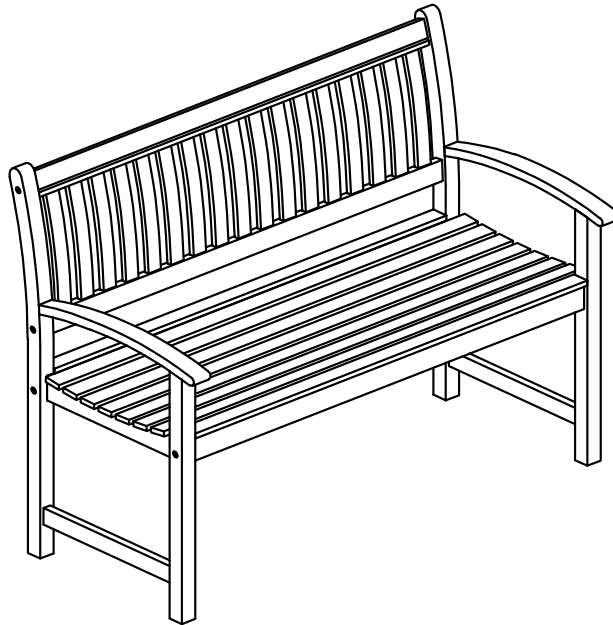




mosaic.

Assembly Instructions & User's Manual Mission Acacia Wood Bench

177272



Please keep this instruction manual for future reference

Customer Service: (888) 922-2336

7:00 am to 5:00 pm CST (daily)

Live Chat at: www.academy.com

Email: customerservice@academy.com

Made in Vietnam

Table of Contents

Warnings.....2

Tools and Parts.....3

Assembly Instructions.....4

Care and Maintenance.....6

Warranty Information.....7

Note: Before beginning assembly of product, make sure all parts are present. Compare parts with package content list and hardware contents. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.

 
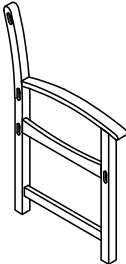
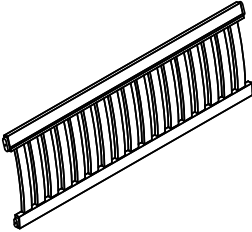
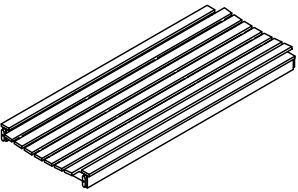
Warnings

- Always use proper tools.
- Unit should be assembled by two or more people.
- Follow the assembly steps in order. Do not skip any steps.
- Do not tighten any bolts until all bolts have been started.
- Keep the instructions for future reference

 
Tools Required

1	HEX KEY		1
---	---------	--	---

Parts List

A	RIGHT SIDE FRAME		1
B	LEFT SIDE FRAME		1
C	BACK PANEL		1
D	SEAT PANEL		1

Hardware

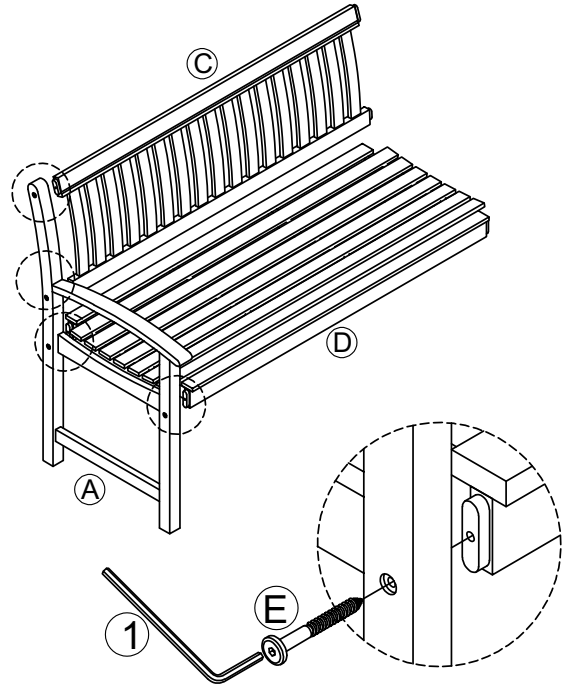
E	M7 x 90mm		8
---	-----------	--	---

Assembly Instructions

Step 1:

Insert the back panel (C) and seat panel (D) into the holes of the right side frame (A).

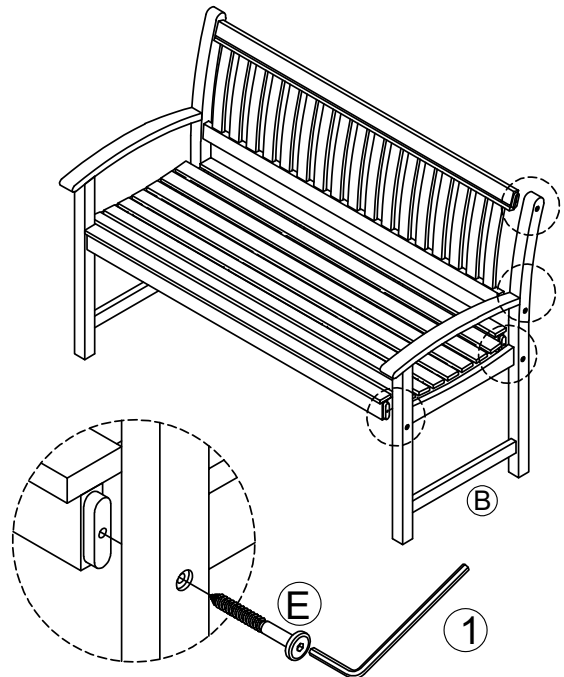
Secure the side frame with bolts (E).



Step 2:

Insert the back panel (C) and seat panel (D) into the left side frame (B).

Secure the side frame with bolts (E).

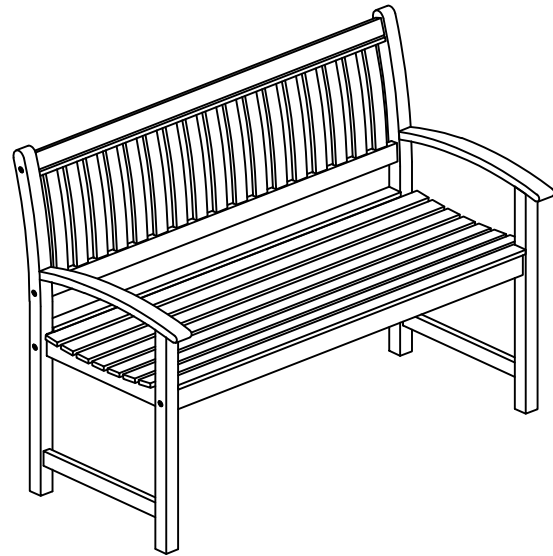


Assembly Instructions

Step 3:

Make sure all parts are connected.

Level the bench and fully tighten all bolts with hex key.



Care and Maintenance

- Regularly check hardware and tighten if necessary
- Clean loose dirt and dusts off with a cloth or brush
- Cover or store them away in a cool dry place when not in use
- Do not wash outdoor wooden furniture as it will cause damage

Warranty Information

This product has been manufactured under the highest standards of quality and workmanship. We warrant to the original consumer purchaser that all aspects of this product will be free of defects in material and workmanship for three months from the date of purchase. A replacement for any defective part will be supplied free of charge for installation by the consumer. Defects or damage caused by the use of other than genuine parts are not covered by this warranty. This warranty shall be effective from the date of purchase as shown in the purchaser receipt.

This warranty is valid for the original consumer purchaser only and excludes industrial, commercial, or business use of the product, product damage due to shipment or failure which results from alteration, product abuse, or product misuse, whether performed by a contractor, service company, or consumer. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement nor for incidental or consequential damage.